

GigaDevice Semiconductor Inc.

GD32F10x
Arm[®] Cortex[®]-M3 32-bit MCU

Firmware Library
User Guide

Revison 2.2

(Jan. 2024)

Table of Contents

Table of Contents.....	2
List of Figures	5
List of Tables	6
1. Introduction	23
1.1. Rules of User Manual and Firmware Library.....	23
1.1.1. Peripherals.....	23
1.1.2. Naming rules.....	24
2. Firmware Library Overview	25
2.1. File Structure of Firmware Library.....	25
2.1.1. Examples Folder.....	25
2.1.2. Firmware Folder.....	26
2.1.3. Template Folder.....	26
2.1.4. Utilities Folder.....	29
2.2. File descriptions of Firmware Library.....	30
3. Firmware Library of Standard Peripherals	31
3.1. Overview of Firmware Library of Standard Peripherals.....	31
3.2. ADC	31
3.2.1. Descriptions of Peripheral registers.....	31
3.2.2. Descriptions of Peripheral functions	32
3.3. BKP.....	57
3.3.1. Descriptions of Peripheral registers.....	57
3.3.2. Descriptions of Peripheral functions	57
3.4. CAN	68
3.4.1. Descriptions of Peripheral registers.....	68
3.4.2. Descriptions of Peripheral functions	69
3.5. CRC	91
3.5.1. Descriptions of Peripheral registers.....	91
3.5.2. Descriptions of Peripheral functions	91
3.6. DAC	95
3.6.1. Peripheral register description.....	95
3.6.2. Descriptions of Peripheral functions	96
3.7. DBG	110
3.7.1. Descriptions of Peripheral registers.....	110
3.7.2. Descriptions of Peripheral functions	110

3.8. DMA	116
3.8.1. Descriptions of Peripheral registers.....	116
3.8.2. Descriptions of Peripheral functions	117
3.9. ENET	136
3.9.1. Descriptions of Peripheral registers.....	136
3.9.2. Descriptions of Peripheral functions	138
3.10. EXMC	207
3.10.1. Descriptions of Peripheral registers.....	207
3.10.2. Descriptions of Peripheral functions	207
3.11. EXTI	226
3.11.1. Descriptions of Peripheral registers.....	226
3.11.2. Descriptions of Peripheral functions	226
3.12. FMC	234
3.12.1. Descriptions of Peripheral registers.....	234
3.12.2. Descriptions of Peripheral functions	234
3.13. FWDGT	256
3.13.1. Descriptions of Peripheral registers.....	256
3.13.2. Descriptions of Peripheral functions	256
3.14. GPIO	261
3.14.1. Descriptions of Peripheral registers.....	261
3.14.2. Descriptions of Peripheral functions	261
3.15. I2C	274
3.15.1. Descriptions of Peripheral registers.....	274
3.15.2. Descriptions of Peripheral functions	275
3.16. MISC	297
3.16.1. Descriptions of Peripheral registers.....	298
3.16.2. Descriptions of Peripheral functions	299
3.17. PMU	305
3.17.1. Descriptions of Peripheral registers.....	305
3.17.2. Descriptions of Peripheral functions	305
3.18. RCU	312
3.18.1. Descriptions of Peripheral registers.....	312
3.18.2. Descriptions of Peripheral functions	313
3.19. RTC	345
3.19.1. Descriptions of Peripheral registers.....	345
3.19.2. Descriptions of Peripheral functions	345
3.20. SDIO	355
3.20.1. Descriptions of Peripheral registers.....	355
3.20.2. Descriptions of Peripheral functions	355

3.21. SPI	385
3.21.1. Descriptions of Peripheral registers.....	385
3.21.2. Descriptions of Peripheral functions	385
3.22. TIMER.....	405
3.22.1. Descriptions of Peripheral registers.....	406
3.22.2. Descriptions of Peripheral functions	406
3.23. USART.....	463
3.23.1. Descriptions of Peripheral registers.....	463
3.23.2. Descriptions of Peripheral functions	463
3.24. WWDGT.....	491
3.24.1. Descriptions of Peripheral registers.....	491
3.24.2. Descriptions of Peripheral functions	491
4. Revision history	496

List of Figures

Figure 2-1. File structure of firmware library of GD32F10x	25
Figure 2-2. Select peripheral example files.....	27
Figure 2-3. Copy the peripheral example files.....	28
Figure 2-4. Open the project file	28
Figure 2-5. Configure project files	29
Figure 2-6. Compile-debug-download	29

List of Tables

Table 1-1. Peripherals.....	23
Table 2-1. Function descriptions of Firmware Library.....	30
Table 3-1. Peripheral function format of Firmware Library	31
Table 3-2. ADC Registers.....	31
Table 3-3. ADC firmware function.....	32
Table 3-4. Function adc_deinit.....	33
Table 3-5. Function adc_mode_config	33
Table 3-6. Function adc_special_function_config.....	35
Table 3-7. Function adc_data_alignment_config.....	35
Table 3-8. Function adc_enable.....	36
Table 3-9. Function adc_disable	36
Table 3-10. Function adc_calibration_enable	37
Table 3-11. Function adc_tempsensor_vrefint_enable	37
Table 3-12. Function adc_tempsensor_vrefint_disable.....	38
Table 3-13. Function adc_dma_mode_enable.....	38
Table 3-14. Function adc_dma_mode_disable	39
Table 3-15. Function adc_discontinuous_mode_config	39
Table 3-16. Function adc_channel_length_config.....	40
Table 3-17. Function adc_regular_channel_config.....	41
Table 3-18. Function adc_inserted_channel_config	42
Table 3-19. Function adc_inserted_channel_offset_config	43
Table 3-20. Function adc_external_trigger_source_config.....	44
Table 3-21. Function adc_external_trigger_config.....	46
Table 3-22. Function adc_software_trigger_enable	47
Table 3-23. Function adc_regular_data_read.....	47
Table 3-24. Function adc_inserted_data_read.....	48
Table 3-25. Function adc_sync_mode_convert_value_read.....	49
Table 3-26. Function adc_watchdog_single_channel_enable.....	49
Table 3-27. Function adc_watchdog_group_channel_enable	50
Table 3-28. Function adc_watchdog_disable	50
Table 3-29. Function adc_watchdog_threshold_config	51
Table 3-30. Function adc_flag_get.....	52
Table 3-31. Function adc_flag_clear.....	52
Table 3-32. Function adc_regular_software_startconv_flag_get.....	53
Table 3-33. Function adc_inserted_software_startconv_flag_get.....	54
Table 3-34. Function adc_interrupt_flag_get.....	54
Table 3-35. Function adc_interrupt_flag_clear	55
Table 3-36. Function adc_interrupt_enable	55
Table 3-37. Function adc_interrupt_disable	56
Table 3-38. BKP Registers	57

Table 3-39. BKP firmware function	57
Table 3-40. Enum bkp_data_register_enum	58
Table 3-41. Function bkp_deinit.....	59
Table 3-42. Function bkp_data_write	59
Table 3-43. Function bkp_read_data.....	60
Table 3-44. Function bkp_rtc_calibration_output_enable	60
Table 3-45. Function bkp_rtc_calibration_output_disable	61
Table 3-46. Function bkp_rtc_signal_output_enable	61
Table 3-47. Function bkp_rtc_signal_output_disable	62
Table 3-48. Function bkp_rtc_output_select.....	62
Table 3-49. Function bkp_rtc_calibration_value_set.....	63
Table 3-50. Function bkp_tamper_detection_enable.....	63
Table 3-51. Function bkp_tamper_detection_disable	64
Table 3-52. Function bkp_tamper_active_level_set.....	64
Table 3-53. Function bkp_interrupt_enable	65
Table 3-54. Function bkp_interrupt_disable	65
Table 3-55. Function bkp_flag_get.....	66
Table 3-56. Function bkp_flag_clear	66
Table 3-57. Function bkp_interrupt_flag_get.....	67
Table 3-58. Function bkp_interrupt_flag_clear.....	67
Table 3-59. CAN Registers.....	68
Table 3-60. CAN firmware function.....	69
Table 3-61. can_parameter_struct.....	70
Table 3-62. can_trasnmit_message_struct	70
Table 3-63. can_receive_message_struct	70
Table 3-64. can_filter_parameter_struct	71
Table 3-65. can_flag_enum.....	71
Table 3-66. can_interrupt_flag_enum.....	72
Table 3-67. can_error_enum.....	72
Table 3-68. can_transmit_state_enum.....	73
Table 3-69. can_struct_type_enum.....	73
Table 3-70. Function can_deinit.....	73
Table 3-71. Function can_struct_para_init.....	74
Table 3-72. Function can_init.....	74
Table 3-73. Function can_filter_init.....	75
Table 3-74. Function can1_filter_start_bank	75
Table 3-75. Function can_debug_freeze_enable	76
Table 3-76. Function can_debug_freeze_disable	76
Table 3-77. Function can_time_trigger_mode_enable	77
Table 3-78. Function can_time_trigger_mode_disable	77
Table 3-79. Function can_message_transmit.....	78
Table 3-80. Function can_transmit_states	79
Table 3-81. Function can_transmission_stop	79
Table 3-82. Function can_message_receive.....	80

Table 3-83. Function can_fifo_release	81
Table 3-84. Function can_receive_message_length_get.....	81
Table 3-85. Function can_working_mode_set.....	82
Table 3-86. Function can_wakeup.....	82
Table 3-87. Function can_error_get.....	83
Table 3-88. Function can_receive_error_number_get	84
Table 3-89. Function can_transmit_error_number_get.....	84
Table 3-90. Function can_interrupt_enable	85
Table 3-91. Function can_interrupt_disable	85
Table 3-92. Function can_flag_get.....	86
Table 3-93. Function can_flag_clear.....	88
Table 3-94. Function can_interrupt_flag_get.....	89
Table 3-95. Function can_interrupt_flag_clear.....	90
Table 3-96. CRC Registers.....	91
Table 3-97. CRC firmware function.....	91
Table 3-98. Function crc_deinit.....	91
Table 3-99. Function crc_data_register_reset.....	92
Table 3-100. Function crc_data_register_read	92
Table 3-101. Function crc_free_data_register_read	93
Table 3-102. Function crc_free_data_register_write	93
Table 3-103. Function crc_single_data_calculate.....	94
Table 3-104. Function crc_block_data_calculate.....	95
Table 3-105. DAC Registers.....	95
Table 3-106. DAC firmware functions.....	96
Table 3-107. Function dac_deinit.....	97
Table 3-108. Function dac_enable.....	97
Table 3-109. Function dac_disable	98
Table 3-110. Function dac_dma_enable	98
Table 3-111. Function dac_dma_disable	99
Table 3-112. Function dac_output_buffer_enable	99
Table 3-113. Function dac_output_buffer_disable	100
Table 3-114. Function dac_output_value_get.....	100
Table 3-115. Function dac_data_set.....	101
Table 3-116. Function dac_trigger_enable	102
Table 3-117. Function dac_trigger_disable	102
Table 3-118. Function dac_trigger_source_config.....	103
Table 3-119. Function dac_software_trigger_enable.....	104
Table 3-120. Function dac_wave_mode_config	105
Table 3-121. Function dac_lfsr_noise_config	105
Table 3-122. Function dac_triangle_noise_config.....	106
Table 3-123. Function dac_concurrent_enable	107
Table 3-124. Function dac_concurrent_disable	107
Table 3-125. Function dac_concurrent_software_trigger_enable	108
Table 3-126. Function dac_concurrent_output_buffer_enable	108

Table 3-127. Function <code>dac_concurrent_output_buffer_disable</code>	109
Table 3-128. Function <code>dac_concurrent_data_set</code>	109
Table 3-129. DBG Registers.....	110
Table 3-130. DBG firmware function.....	110
Table 3-131. Enum <code>dbg_periph_enum</code>	111
Table 3-132. Function <code>dbg_id_get</code>	111
Table 3-133. Function <code>dbg_low_power_enable</code>	112
Table 3-134. Function <code>dbg_low_power_disable</code>	112
Table 3-135. Function <code>dbg_periph_enable</code>	113
Table 3-136. Function <code>dbg_periph_disable</code>	114
Table 3-137. Function <code>dbg_trace_pin_enable</code>	114
Table 3-138. Function <code>dbg_trace_pin_disable</code>	115
Table 3-139. Function <code>dbg_trace_pin_mode_set</code>	115
Table 3-140. DMA Registers	116
Table 3-141. DMA firmware function.....	117
Table 3-142. Structure <code>dma_parameter_struct</code>	117
Table 3-143. Function <code>dma_deinit</code>	118
Table 3-144. Function <code>dma_struct_para_init</code>	118
Table 3-145. Function <code>dma_init</code>	119
Table 3-146. Function <code>dma_circulation_enable</code>	120
Table 3-147. Function <code>dma_circulation_disable</code>	120
Table 3-148. Function <code>dma_memory_to_memory_enable</code>	121
Table 3-149. Function <code>dma_memory_to_memory_disable</code>	122
Table 3-150. Function <code>dma_channel_enable</code>	122
Table 3-151. Function <code>dma_channel_disable</code>	123
Table 3-152. Function <code>dma_periph_address_config</code>	123
Table 3-153. Function <code>dma_memory_address_config</code>	124
Table 3-154. Function <code>dma_transfer_number_config</code>	125
Table 3-155. Function <code>dma_transfer_number_get</code>	125
Table 3-156. Function <code>dma_priority_config</code>	126
Table 3-157. Function <code>dma_memory_width_config</code>	127
Table 3-158. Function <code>dma_periph_width_config</code>	128
Table 3-159. Function <code>dma_memory_increase_enable</code>	128
Table 3-160. Function <code>dma_memory_increase_disable</code>	129
Table 3-161. Function <code>dma_periph_increase_enable</code>	130
Table 3-162. Function <code>dma_periph_increase_disable</code>	130
Table 3-163. Function <code>dma_transfer_direction_config</code>	131
Table 3-164. Function <code>dma_flag_get</code>	132
Table 3-165. Function <code>dma_flag_clear</code>	132
Table 3-166. Function <code>dma_interrupt_flag_get</code>	133
Table 3-167. Function <code>dma_interrupt_flag_clear</code>	134
Table 3-168. Function <code>dma_interrupt_enable</code>	135
Table 3-169. Function <code>dma_interrupt_disable</code>	135
Table 3-170. ENET Registers.....	136

Table 3-171. ENET firmware function.....	138
Table 3-172. Structure enet_descriptors_struct.....	141
Table 3-173. Structure enet_ptp_systime_struct.....	141
Table 3-174. Function enet_deinit.....	142
Table 3-175. Function enet_initpara_config	142
Table 3-176. Function enet_init.....	146
Table 3-177. Function enet_software_reset.....	147
Table 3-178. Function enet_rxframe_size_get.....	148
Table 3-179. Function enet_descriptors_chain_init.....	148
Table 3-180. Function enet_descriptors_ring_init.....	149
Table 3-181. Function enet_frame_receive	149
Table 3-182. Function enet_frame_transmit.....	150
Table 3-183. Function enet_transmit_checksum_config	150
Table 3-184. Function enet_enable	151
Table 3-185. Function enet_disable	152
Table 3-186. Function enet_mac_address_set	152
Table 3-187. Function enet_mac_address_get.....	153
Table 3-188. Function enet_flag_get.....	154
Table 3-189. Function enet_flag_clear.....	156
Table 3-190. Function enet_interrupt_enable.....	157
Table 3-191. Function enet_interrupt_disable.....	159
Table 3-192. Function enet_interrupt_flag_get.....	160
Table 3-193. Function enet_interrupt_flag_clear	162
Table 3-194. Function enet_tx_enable	163
Table 3-195. Function enet_tx_disable	164
Table 3-196. Function enet_rx_enable	164
Table 3-197. Function enet_rx_disable.....	164
Table 3-198. Function enet_registers_get.....	165
Table 3-199. Function enet_address_filter_enable	166
Table 3-200. Function enet_address_filter_disable	166
Table 3-201. Function enet_address_filter_config	167
Table 3-202. Function enet_phy_config.....	168
Table 3-203. Function enet_phy_write_read.....	169
Table 3-204. Function enet_phyloopback_enable	170
Table 3-205. Function enet_phyloopback_disable	170
Table 3-206. Function enet_forward_feature_enable	170
Table 3-207. Function enet_forward_feature_disable	171
Table 3-208. Function enet_filter_feature_enable	172
Table 3-209. Function enet_filter_feature_disable	173
Table 3-210. Function enet_pauseframe_generate	173
Table 3-211. Function enet_pauseframe_detect_config.....	174
Table 3-212. Function enet_pauseframe_config.....	175
Table 3-213. Function enet_flowcontrol_threshold_config	175
Table 3-214. Function enet_flowcontrol_feature_enable	177

Table 3-215. Function enet_flowcontrol_feature_disable	177
Table 3-216. Function enet_dmaprocess_state_get.....	178
Table 3-217. Function enet_dmaprocess_resume.....	179
Table 3-218. Function enet_rxprocess_check_recovery.....	180
Table 3-219. Function enet_txfifo_flush.....	180
Table 3-220. Function enet_current_desc_address_get.....	181
Table 3-221. Function enet_desc_information_get.....	181
Table 3-222. Function enet_missed_frame_counter_get.....	182
Table 3-223. Function enet_desc_flag_get.....	183
Table 3-224. Function enet_desc_flag_set.....	185
Table 3-225. Function enet_desc_flag_clear.....	186
Table 3-226. Function enet_desc_receive_complete_bit_enable.....	186
Table 3-227. Function enet_desc_receive_complete_bit_disable	187
Table 3-228. Function enet_rxframe_drop	188
Table 3-229. Function enet_dma_feature_enable	188
Table 3-230. Function enet_dma_feature_disable	189
Table 3-231. Function enet_ptp_normal_descriptors_chain_init.....	189
Table 3-232. Function enet_ptp_normal_descriptors_ring_init.....	190
Table 3-233. Function enet_ptpframe_receive_normal_mode	191
Table 3-234. Function enet_ptpframe_transmit_normal_mode	191
Table 3-235. Function enet_wum_filter_register_pointer_reset.....	192
Table 3-236. Function enet_wum_filter_config.....	193
Table 3-237. Function enet_wum_feature_enable	193
Table 3-238. Function enet_wum_feature_disable	194
Table 3-239. Function enet_msc_counters_reset.....	194
Table 3-240. Function enet_msc_feature_enable	195
Table 3-241. Function enet_msc_feature_disable	196
Table 3-242. Function enet_msc_counters_get.....	196
Table 3-243. Function enet_ptp_subsecond_2_nanosecond	197
Table 3-244. Function enet_ptp_nanosecond_2_subsecond	197
Table 3-245. Function enet_ptp_feature_enable	198
Table 3-246. Function enet_ptp_feature_disable	199
Table 3-247. Function enet_ptp_timestamp_function_config.....	199
Table 3-248. Function enet_ptp_subsecond_increment_config	200
Table 3-249. Function enet_ptp_timestamp_addend_config.....	200
Table 3-250. Function enet_ptp_timestamp_update_config	201
Table 3-251. Function enet_ptp_expected_time_config.....	202
Table 3-252. Function enet_ptp_system_time_get.....	202
Table 3-253. Function enet_ptp_start.....	203
Table 3-254. Function enet_ptp_finecorrection_adjfreq.....	204
Table 3-255. Function enet_ptp_coarsecorrection_systime_update	204
Table 3-256. Function enet_ptp_finecorrection_settime.....	205
Table 3-257. Function enet_ptp_flag_get.....	206
Table 3-258. Function enet_initpara_reset.....	206

Table 3-259. EXMC Registers.....	207
Table 3-260. EXMC firmware function.....	208
Table 3-261. Structure exmc_norsram_timing_parameter_struct	208
Table 3-262. Structure exmc_norsram_parameter_struct	209
Table 3-263. Structure exmc_nand_pccard_timing_parameter_struct	209
Table 3-264. Structure exmc_nand_parameter_struct.....	209
Table 3-265. Structure exmc_pccard_parameter_struct	210
Table 3-266. Function exmc_norsram_deinit.....	210
Table 3-267. Function exmc_norsram_struct_para_init.....	210
Table 3-268. Function exmc_norsram_init.....	211
Table 3-269. Function exmc_norsram_enable	212
Table 3-270. Function exmc_norsram_disable	213
Table 3-271. Function exmc_nand_deinit.....	214
Table 3-272. Function exmc_nand_init.....	214
Table 3-273. Function exmc_nand_struct_para_init.....	215
Table 3-274. Function exmc_nand_enable.....	216
Table 3-275. Function exmc_nand_disable.....	216
Table 3-276. Function exmc_nand_ecc_config	217
Table 3-277. Function exmc_ecc_get.....	217
Table 3-278. Function exmc_pccard_deinit.....	218
Table 3-279. Function exmc_pccard_init.....	218
Table 3-280. Function exmc_pccard_struct_para_init.....	219
Table 3-281. Function exmc_pccard_enable	220
Table 3-282. Function exmc_pccard_disable	220
Table 3-283. Function exmc_flag_get.....	221
Table 3-284. Function exmc_flag_clear.....	222
Table 3-285. Function exmc_interrupt_enable	223
Table 3-286. Function exmc_interrupt_disable	223
Table 3-287. Function exmc_interrupt_flag_get.....	224
Table 3-288. Function exmc_interrupt_flag_clear	225
Table 3-289. EXTI Registers.....	226
Table 3-290. EXTI firmware function.....	226
Table 3-291. Enum exti_line_enum.....	227
Table 3-292. Enum exti_mode_enum	227
Table 3-293. Enum exti_trig_type_enum	227
Table 3-294. Function exti_deinit.....	228
Table 3-295. Function exti_init	228
Table 3-296. Function exti_interrupt_enable	229
Table 3-297. Function exti_interrupt_disable	229
Table 3-298. Function exti_event_enable	230
Table 3-299. Function exti_event_disable	230
Table 3-300. Function exti_software_interrupt_enable	231
Table 3-301. Function exti_software_interrupt_disable	231
Table 3-302. Function exti_flag_get.....	232

Table 3-303. Function exti_flag_clear	232
Table 3-304. Function exti_interrupt_flag_get.....	233
Table 3-305. Function exti_interrupt_flag_clear.....	233
Table 3-306. FMC Registers.....	234
Table 3-307. FMC firmware function.....	234
Table 3-308. fmc_state_enum.....	235
Table 3-309. fmc_int_enum.....	235
Table 3-310. fmc_flag_enum	236
Table 3-311. fmc_interrupt_flag_enum	236
Table 3-312. Function fmc_wscnt_set.....	237
Table 3-313. Function fmc_unlock.....	237
Table 3-314. Function fmc_bank0_unlock.....	238
Table 3-315. Function fmc_bank1_unlock.....	238
Table 3-316. Function fmc_lock.....	239
Table 3-317. Function fmc_bank0_lock.....	239
Table 3-318. Function fmc_bank1_lock.....	240
Table 3-319. Function fmc_page_erase.....	240
Table 3-320. Function fmc_mass_erase.....	241
Table 3-321. Function fmc_bank0_erase	241
Table 3-322. Function fmc_bank1_erase	242
Table 3-323. Function fmc_word_program.....	242
Table 3-324. Function fmc_halfword_program.....	243
Table 3-325. Function ob_unlock.....	243
Table 3-326. Function ob_lock.....	244
Table 3-327. Function ob_erase.....	244
Table 3-328. Function ob_write_protection_enable	245
Table 3-329. Function ob_security_protection_config.....	245
Table 3-330. Function ob_user_write	246
Table 3-331. Function ob_data_program	247
Table 3-332. Function ob_user_get.....	247
Table 3-333. Function ob_data_get.....	248
Table 3-334. Function ob_write_protection_get.....	248
Table 3-335. Function ob_spc_get.....	248
Table 3-336. Function fmc_interrupt_enable	249
Table 3-337. Function fmc_interrupt_disable	250
Table 3-338. Function fmc_flag_get.....	250
Table 3-339. Function fmc_flag_clear	251
Table 3-340. Function fmc_interrupt_flag_get.....	252
Table 3-341. Function fmc_interrupt_flag_clear.....	253
Table 3-342. Function fmc_bank0_state_get.....	254
Table 3-343. Function fmc_bank1_state_get.....	254
Table 3-344. Function fmc_bank0_ready_wait.....	255
Table 3-345. Function fmc_bank0_ready_wait.....	255
Table 3-346. FWDGT Registers.....	256

Table 3-347. FWDGT firmware function.....	256
Table 3-348. Function fwdgt_write_enable.....	256
Table 3-349. Function fwdgt_write_disable	257
Table 3-350. Function fwdgt_enable.....	257
Table 3-351. Function fwdgt_prescaler_value_config	258
Table 3-352. Function fwdgt_reload_value_config.....	258
Table 3-353. Function fwdgt_counter_reload.....	259
Table 3-354. Function fwdgt_config	259
Table 3-355. Function fwdgt_flag_get.....	260
Table 3-356. GPIO Registers	261
Table 3-357. GPIO firmware function	261
Table 3-358. Function gpio_deinit.....	262
Table 3-359. Function gpio_afio_deinit.....	262
Table 3-360. Function gpio_init.....	263
Table 3-361. Function gpio_bit_set.....	264
Table 3-362. Function gpio_bit_reset.....	265
Table 3-363. Function gpio_bit_write	265
Table 3-364. Function gpio_port_write	266
Table 3-365. Function gpio_input_bit_get.....	266
Table 3-366. Function gpio_input_port_get.....	267
Table 3-367. Function gpio_output_bit_get.....	268
Table 3-368. Function gpio_output_port_get.....	268
Table 3-369. Function gpio_pin_remap_config	269
Table 3-370. Function gpio_exti_source_select.....	271
Table 3-371. Function gpio_event_output_config	272
Table 3-372. Function gpio_event_output_enable	272
Table 3-373. Function gpio_event_output_disable	273
Table 3-374. Function gpio_pin_lock	273
Table 3-375. Function gpio_ethernet_phy_select.....	274
Table 3-376. I2C Registers	274
Table 3-377. I2C firmware function	275
Table 3-378. Enum i2c_flag_enum.....	276
Table 3-379. Enum i2c_interrupt_enum.....	276
Table 3-380. Enum i2c_interrupt_flag_enum.....	277
Table 3-381. Function i2c_deinit.....	277
Table 3-382. Function i2c_clock_config.....	278
Table 3-383. Function i2c_mode_addr_config	278
Table 3-384. Function i2c_smbus_type_config	279
Table 3-385. Function i2c_ack_config	280
Table 3-386. Function i2c_ackpos_config	280
Table 3-387. Function i2c_master_addressing.....	281
Table 3-388. Function i2c_dualaddr_enable	282
Table 3-389. Function i2c_dualaddr_disable.....	282
Table 3-390. Function i2c_enable	283

Table 3-391. Function i2c_disable.....	283
Table 3-392. Function i2c_start_on_bus.....	284
Table 3-393. Function i2c_stop_on_bus.....	284
Table 3-394. Function i2c_data_transmit.....	285
Table 3-395. Function i2c_data_receive.....	285
Table 3-396. Function i2c_dma_config.....	286
Table 3-397. Function i2c_dma_last_transfer_config	286
Table 3-398. Function i2c_stretch_scl_low_config.....	287
Table 3-399. Function i2c_slave_response_to_gcall_config.....	288
Table 3-400. Function i2c_software_reset_config.....	288
Table 3-401. Function i2c_pec_config.....	289
Table 3-402. Function i2c_pec_transfer_config	289
Table 3-403. Function i2c_pec_value_get.....	290
Table 3-404. Function i2c_smbus_alert_config.....	291
Table 3-405. Function i2c_smbus_arb_config.....	291
Table 3-406. Function i2c_flag_get.....	292
Table 3-407. Function i2c_flag_clear.....	293
Table 3-408. Function i2c_interrupt_enable	294
Table 3-409. Function i2c_interrupt_disable	295
Table 3-410. Function i2c_interrupt_flag_get.....	295
Table 3-411. Function i2c_interrupt_flag_clear	297
Table 3-412. NVIC Registers.....	298
Table 3-413. SysTick Registers.....	298
Table 3-414. IRQn_Type	299
Table 3-415. MISC firmware function	301
Table 3-416. Function nvic_priority_group_set.....	301
Table 3-417. Function nvic_irq_enable.....	302
Table 3-418. Function nvic_irq_disable.....	302
Table 3-419. Function nvic_vector_table_set.....	303
Table 3-420. Function system_lowpower_set.....	303
Table 3-421. Function system_lowpower_reset.....	304
Table 3-422. Function systick_clksource_set.....	305
Table 3-423. PMU Registers.....	305
Table 3-424. PMU firmware function.....	306
Table 3-425. Function pmu_deinit.....	306
Table 3-426. Function pmu_lvd_select.....	306
Table 3-427. Function pmu_lvd_disable	307
Table 3-428. Function pmu_to_sleepmode	308
Table 3-429. Function pmu_to_deepsleepmode	308
Table 3-430. Function pmu_to_standbymode.....	309
Table 3-431. Function pmu_wakeup_pin_enable.....	309
Table 3-432. Function pmu_wakeup_pin_disable.....	310
Table 3-433. Function pmu_backup_write_enable	310
Table 3-434. Function pmu_backup_write_disable.....	311

Table 3-435. Function pmu_flag_get.....	311
Table 3-436. Function pmu_flag_clear.....	312
Table 3-437. RCU Registers (MD, HD, XD series).....	313
Table 3-438. RCU Registers (CL series)	313
Table 3-439. RCU firmware function.....	313
Table 3-440. Enum rcu_periph_enum.....	314
Table 3-441. Enum rcu_periph_sleep_enum	316
Table 3-442. Enum rcu_periph_reset_enum.....	316
Table 3-443. Enum rcu_flag_enum.....	317
Table 3-444. Enum rcu_int_flag_enum	318
Table 3-445. Enum rcu_int_flag_clear_enum	318
Table 3-446. Enum rcu_int_enum.....	319
Table 3-447. Enum rcu_osc_type_enum.....	319
Table 3-448. Enum rcu_clock_freq_enum.....	319
Table 3-449. Function rcu_deinit.....	320
Table 3-450. Function rcu_periph_clock_enable	320
Table 3-451. Function rcu_periph_clock_disable	321
Table 3-452. Function rcu_periph_clock_sleep_enable	321
Table 3-453. Function rcu_periph_clock_sleep_disable	322
Table 3-454. Function rcu_periph_reset_enable	322
Table 3-455. Function rcu_periph_reset_disable	323
Table 3-456. Function rcu_bkp_reset_enable	323
Table 3-457. Function rcu_bkp_reset_disable	324
Table 3-458. Function rcu_system_clock_source_config	324
Table 3-459. Function rcu_system_clock_source_get.....	325
Table 3-460. Function rcu_ahb_clock_config	326
Table 3-461. Function rcu_apb1_clock_config	326
Table 3-462. Function rcu_apb2_clock_config	327
Table 3-463. Function rcu_ckout0_config	328
Table 3-464. Function rcu_pll_config.....	329
Table 3-465. Function rcu_prdv0_config	329
Table 3-466. Function rcu_prdv0_config	330
Table 3-467. Function rcu_prdv1_config	330
Table 3-468. Function rcu_pll1_config	331
Table 3-469. Function rcu_pll2_config	331
Table 3-470. Function rcu_adc_clock_config	332
Table 3-471. Function rcu_usb_clock_config	333
Table 3-472. Function rcu_rtc_clock_config	333
Table 3-473. Function rcu_i2s1_clock_config.....	334
Table 3-474. Function rcu_i2s2_clock_config.....	334
Table 3-475. Function rcu_osc_stab_wait.....	335
Table 3-476. Function rcu_osc_on.....	336
Table 3-477. Function rcu_osc_off	336
Table 3-478. Function rcu_osc_bypass_mode_enable	337

Table 3-479. Function rcu_osc1_bypass_mode_disable	338
Table 3-480. Function rcu_hxtal_clock_monitor_enable	339
Table 3-481. Function rcu_hxtal_clock_monitor_disable	339
Table 3-482. Function rcu_irc8m_adjust_value_set.....	340
Table 3-483. Function rcu_deepsleep_voltage_set.....	340
Table 3-484. Function rcu_clock_freq_get.....	341
Table 3-485. Function rcu_flag_get.....	341
Table 3-486. Function rcu_all_reset_flag_clear.....	342
Table 3-487. Function rcu_interrupt_flag_get.....	342
Table 3-488. Function rcu_interrupt_flag_clear.....	343
Table 3-489. Function rcu_interrupt_enable.....	344
Table 3-490. Function rcu_interrupt_disable.....	344
Table 3-491. RTC Registers	345
Table 3-492. RTC firmware function	345
Table 3-493. Function rtc_configuration_mode_enter.....	346
Table 3-494. Function rtc_configuration_mode_exit.....	346
Table 3-495. Function rtc_counter_set.....	347
Table 3-496. Function rtc_prescaler_set.....	347
Table 3-497. Function rtc_lwoff_wait.....	348
Table 3-498. Function rtc_register_sync_wait.....	349
Table 3-499. Function rtc_alarm_config.....	349
Table 3-500. Function rtc_counter_get.....	350
Table 3-501. Function rtc_divider_get.....	350
Table 3-502. Function rtc_flag_get.....	351
Table 3-503. Function rtc_flag_clear.....	351
Table 3-504. Function rtc_interrupt_flag_get.....	352
Table 3-505. Function rtc_interrupt_flag_clear.....	353
Table 3-506. Function rtc_interrupt_enable.....	353
Table 3-507. Function rtc_interrupt_disable.....	354
Table 3-508. SDIO Registers.....	355
Table 3-509. SDIO firmware function.....	355
Table 3-510. Function sdio_deinit.....	357
Table 3-511. Function sdio_clock_config.....	357
Table 3-512. Function sdio_hardware_clock_enable	358
Table 3-513. Function sdio_hardware_clock_disable	359
Table 3-514. Function sdio_bus_mode_set.....	359
Table 3-515. Function sdio_power_state_set.....	360
Table 3-516. Function sdio_power_state_get.....	360
Table 3-517. Function sdio_clock_enable	361
Table 3-518. Function sdio_clock_disable	361
Table 3-519. Function sdio_command_response_config.....	362
Table 3-520. Function sdio_wait_type_set.....	363
Table 3-521. Function sdio_csm_enable	363
Table 3-522. Function sdio_csm_disable	364

Table 3-523. Function sdio_command_index_get.....	364
Table 3-524. Function sdio_response_get.....	365
Table 3-525. Function sdio_data_config.....	365
Table 3-526. Function sdio_data_transfer_config.....	367
Table 3-527. Function sdio_dsm_enable	367
Table 3-528. Function sdio_dsm_disable	368
Table 3-529. Function sdio_data_write.....	368
Table 3-530. Function sdio_data_read.....	369
Table 3-531. Function sdio_data_counter_get.....	369
Table 3-532. Function sdio_data_counter_get.....	370
Table 3-533. Function sdio_dma_enable	370
Table 3-534. Function sdio_dma_disable	371
Table 3-535. Function sdio_flag_get.....	371
Table 3-536. Function sdio_flag_clear.....	372
Table 3-537. Function sdio_interrupt_enable.....	373
Table 3-538. Function sdio_interrupt_disable.....	375
Table 3-539. Function sdio_interrupt_flag_get.....	376
Table 3-540. Function sdio_interrupt_flag_clear.....	377
Table 3-541. Function sdio_readwait_enable	378
Table 3-542. Function sdio_readwait_disable.....	378
Table 3-543. Function sdio_stop_readwait_enable.....	378
Table 3-544. Function sdio_stop_readwait_disable.....	379
Table 3-545. Function sdio_readwait_type_set.....	379
Table 3-546. Function sdio_operation_enable.....	380
Table 3-547. Function sdio_operation_disable.....	380
Table 3-548. Function sdio_suspend_enable.....	381
Table 3-549. Function sdio_suspend_disable.....	381
Table 3-550. Function sdio_ceata_command_enable	382
Table 3-551. Function sdio_ceata_command_disable	382
Table 3-552. Function sdio_ceata_interrupt_enable	383
Table 3-553. Function sdio_ceata_interrupt_disable.....	383
Table 3-554. Function sdio_ceata_command_completion_enable	384
Table 3-555. Function sdio_ceata_command_completion_disable	384
Table 3-556. SPI/I2S Registers.....	385
Table 3-557. SPI/I2S firmware function.....	385
Table 3-558. spi_parameter_struct.....	386
Table 3-559. Function spi_i2s_deinit.....	387
Table 3-560. Function spi_struct_para_init.....	387
Table 3-561. Function spi_init.....	388
Table 3-562. Function spi_enable.....	389
Table 3-563. Function spi_disable.....	389
Table 3-564. Function i2s_init.....	390
Table 3-565. Function i2s_psc_config.....	391
Table 3-566. Function i2s_enable	392

Table 3-567. Function i2s_disable.....	393
Table 3-568. Function spi_nss_output_enable.....	393
Table 3-569. Function spi_nss_output_disable.....	394
Table 3-570. Function spi_nss_internal_high	394
Table 3-571. Function spi_nss_internal_low	395
Table 3-572. Function spi_dma_enable.....	395
Table 3-573. Function spi_dma_disable.....	396
Table 3-574. Function spi_i2s_data_frame_format_config	396
Table 3-575. Function spi_bidirectional_transfer_config	397
Table 3-576. Function spi_i2s_data_transmit	398
Table 3-577. Function spi_i2s_data_receive.....	398
Table 3-578. Function spi_crc_polynomial_set.....	399
Table 3-579. Function spi_crc_polynomial_get.....	399
Table 3-580. Function spi_crc_on.....	400
Table 3-581. Function spi_crc_off.....	400
Table 3-582. Function spi_crc_next.....	401
Table 3-583. Function spi_crc_get.....	401
Table 3-584. Function spi_i2s_flag_get.....	402
Table 3-585. Function spi_i2s_interrupt_enable	403
Table 3-586. Function spi_i2s_interrupt_disable	403
Table 3-587. Function spi_i2s_interrupt_flag_get	404
Table 3-588. Function spi_crc_error_clear.....	405
Table 3-589. TIMERx Registers.....	406
Table 3-590.TIMERx firmware function.....	406
Table 3-591. Structure timer_parameter_struct.....	408
Table 3-592. Structure timer_break_parameter_struct	409
Table 3-593. Structure timer_oc_parameter_struct.....	409
Table 3-594. Structure timer_ic_parameter_struct.....	410
Table 3-595. Function timer_deinit.....	410
Table 3-596. Function timer_struct_para_init	410
Table 3-597. Function timer_init	411
Table 3-598. Function timer_enable.....	412
Table 3-599. Function timer_disable	413
Table 3-600. Function timer_auto_reload_shadow_enable	413
Table 3-601. Function timer_auto_reload_shadow_disable	414
Table 3-602. Function timer_update_event_enable	414
Table 3-603. Function timer_update_event_disable	415
Table 3-604. Function timer_counter_alignment.....	415
Table 3-605. Function timer_counter_up_direction.....	416
Table 3-606. timer_counter_down_direction.....	416
Table 3-607. Function timer_prescaler_config	417
Table 3-608. Function timer_repetition_value_config	418
Table 3-609. Function timer_autoreload_value_config	418
Table 3-610. Function timer_counter_value_config.....	419

Table 3-611. Function timer_counter_read.....	419
Table 3-612. Function timer_prescaler_read.....	420
Table 3-613. Function timer_single_pulse_mode_config	420
Table 3-614. Function timer_update_source_config	421
Table 3-615. Function timer_dma_enable.....	422
Table 3-616. Function timer_dma_disable	422
Table 3-617. Function timer_channel_dma_request_source_select.....	423
Table 3-618. Function timer_dma_transfer_config	424
Table 3-619. Function timer_event_software_generate.....	425
Table 3-620. Function timer_break_struct_para_init.....	426
Table 3-621. Function timer_break_config.....	427
Table 3-622. Function timer_break_enable	428
Table 3-623. Function timer_break_disable	429
Table 3-624. Function timer_automatic_output_enable	429
Table 3-625. Function timer_automatic_output_disable	430
Table 3-626. Function timer_primary_output_config	430
Table 3-627. Function timer_channel_control_shadow_config.....	431
Table 3-628. Function timer_channel_control_shadow_update_config.....	432
Table 3-629. Function timer_channel_output_struct_para_init.....	432
Table 3-630. Function timer_channel_output_config	433
Table 3-631. Function timer_channel_output_mode_config	434
Table 3-632. Function timer_channel_output_pulse_value_config.....	435
Table 3-633. Function timer_channel_output_shadow_config.....	436
Table 3-634. Function timer_channel_output_fast_config.....	437
Table 3-635. Function timer_channel_output_clear_config.....	438
Table 3-636. Function timer_channel_output_polarity_config.....	439
Table 3-637. Function timer_channel_complementary_output_polarity_config	439
Table 3-638. Function timer_channel_output_state_config.....	440
Table 3-639. Function timer_channel_complementary_output_state_config	441
Table 3-640. Function timer_channel_input_struct_para_init.....	443
Table 3-641. Function timer_input_capture_config	443
Table 3-642. Function timer_channel_input_capture_prescaler_config	445
Table 3-643. Function timer_channel_capture_value_register_read.....	445
Table 3-644. Function timer_input_pwm_capture_config.....	446
Table 3-645. Function timer_hall_mode_config	447
Table 3-646. Function timer_input_trigger_source_select.....	448
Table 3-647. Function timer_master_output_trigger_source_select.....	449
Table 3-648. Function timer_slave_mode_select.....	450
Table 3-649. Function timer_master_slave_mode_config	451
Table 3-650. Function timer_external_trigger_config	451
Table 3-651. Function timer_quadrature_decoder_mode_config	452
Table 3-652. Function timer_internal_clock_config.....	453
Table 3-653. Function timer_internal_trigger_as_external_clock_config	454
Table 3-654. Function timer_external_trigger_as_external_clock_config	455

Table 3-655. Function timer_external_clock_mode0_config	456
Table 3-656. Function timer_external_clock_mode1_config	456
Table 3-657. Function timer_external_clock_mode1_disable	457
Table 3-658. Function timer_interrupt_enable	458
Table 3-659. Function timer_interrupt_disable	459
Table 3-660. Function timer_interrupt_flag_get	459
Table 3-661. Function timer_interrupt_flag_clear	460
Table 3-662. Function timer_flag_get	461
Table 3-663. Function timer_flag_clear	462
Table 3-664. USART Registers	463
Table 3-665. USART firmware function	463
Table 3-666. Function usart_deinit	464
Table 3-667. Function usart_baudrate_set	465
Table 3-668. Function usart_parity_config	465
Table 3-669. Function usart_word_length_set	466
Table 3-670. Function usart_stop_bit_set	467
Table 3-671. Function usart_enable	467
Table 3-672. Function usart_disable	468
Table 3-673. Function usart_transmit_config	468
Table 3-674. Function usart_receive_config	469
Table 3-675. Function usart_data_transmit	470
Table 3-676. Function usart_data_receive	470
Table 3-677. Function usart_address_config	471
Table 3-678. Function usart_mute_mode_enable	471
Table 3-679. Function usart_mute_mode_disable	472
Table 3-680. Function usart_mute_mode_wakeup_config	472
Table 3-681. Function usart_lin_mode_enable	473
Table 3-682. Function usart_lin_mode_disable	474
Table 3-683. Function usart_lin_break_detection_length_config	474
Table 3-684. Function usart_send_break	475
Table 3-685. Function usart_halfduplex_enable	475
Table 3-686. Function usart_halfduplex_disable	476
Table 3-687. Function usart_synchronous_clock_enable	476
Table 3-688. Function usart_synchronous_clock_disable	477
Table 3-689. Function usart_synchronous_clock_config	477
Table 3-690. Function usart_guard_time_config	478
Table 3-691. Function usart_smartcard_mode_enable	479
Table 3-692. Function usart_smartcard_mode_disable	479
Table 3-693. Function usart_smartcard_mode_nack_enable	480
Table 3-694. Function usart_smartcard_mode_nack_disable	480
Table 3-695. Function usart_irda_mode_enable	481
Table 3-696. Function usart_irda_mode_disable	481
Table 3-697. Function usart_prescaler_config	482
Table 3-698. Function usart_irda_lowpower_config	482

Table 3-699. Function usart.hardware_flow_rts_config.....	483
Table 3-700. Function usart.hardware_flow_cts_config	484
Table 3-701. Function usart.dma_receive_config.....	484
Table 3-702. Function usart.dma_transmit_config.....	485
Table 3-703. Function usart.flag_get.....	486
Table 3-704. Function usart.flag_clear	487
Table 3-705. Function usart.interrupt_enable	487
Table 3-706. Function usart.interrupt_disable	488
Table 3-707. Function usart.interrupt_flag_get.....	489
Table 3-708. Function usart.interrupt_flag_clear.....	490
Table 3-709. WWDGT Registers.....	491
Table 3-710. WWDGT firmware function.....	491
Table 3-711. Function wwdgt_deinit.....	491
Table 3-712. Function wwdgt_enable.....	492
Table 3-713. Function wwdgt_counter_update.....	492
Table 3-714. Function wwdgt_config	493
Table 3-715. Function wwdgt_interrupt_enable	494
Table 3-716. Function wwdgt_flag_get.....	494
Table 3-717. Function wwdgt_flag_clear.....	495
Table 4-1. Revision history	496

1. Introduction

This manual introduces firmware library of GD32F10x devices which are 32-bit microcontrollers based on the ARM processor.

The firmware library is a firmware function package, including program, data structure and macro definitions, all the performance features of peripherals of GD32F10x devices are involved in the package. The peripheral driving code and firmware examples on evaluation board are also included in firmware library. Users need not learn each peripherals in details and it's easy to apply a peripheral by using the firmware library. Using firmware library can greatly reduce programming time, thereby reducing development costs.

The driving code of each peripheral is concluded by a group of functions, which describes all the performance features of the peripheral. Users can drive a peripheral by a group of APIs (application programming interface), all the APIs are standardized about the code structure, function name and parameter names.

All the driving source code accord with MISRA-C:2004 standard (example files accord with extended ANSI-C standard), and will not be influenced by differences of IDEs, except the startup files which are written differently according to the IDEs.

The commonly used firmware library includes all the functions of all the peripherals, so the code size and the execution speed may not be the optimal. For most applications, users can use the library functions directly, while for the applications which are strict with the code size and execution speed, the firmware library can be used as the reference resource of how to configure a peripheral, and users adjust the code according to actual needs.

The overall structure of the firmware library user manual is shown as below:

- Rules of user manual and firmware library;
- Firmware library overview;
- Functions and registers descriptions of firmware library.

1.1. Rules of User Manual and Firmware Library

1.1.1. Peripherals

Table 1-1. Peripherals

Peripherals	Descriptions
ADC	Analog-to-digital converter
BKP	Backup registers
CAN	Controller area network
CRC	CRC calculation unit
DAC	Digital-to-analog converter
DBG	Debug

Peripherals	Descriptions
DMA	Direct memory access controller
ENET	Ethernet
EXMC	External memory controller
EXTI	Interrupt/event controller
FMC	Flash memory controller
FWDGT	Free watchdog timer
GPIO/APIO	General-purpose and alternate-function I/Os
I2C	Inter-integrated circuit interface
MISC	Nested Vectored Interrupt Controller
PMU	Power management unit
RCU	Reset and clock unit
RTC	Real-time Clock
SDIO	Secure digital input/output interface
SP/I2S	Serial peripheral interface/Inter-IC sound
TIMER	TIMER
USART	Universal synchronous/asynchronous receiver /transmitter
WWDGT	Window watchdog timer
USBD	Universal Serial Bus full-speed device interface
USBFS	Universal serial bus full-speed interface

1.1.2. Naming rules

The firmware library naming rules are shown as below:


- The peripherals are shortened in XXX format, such as: ADC. More shorten information of peripherals refer to [Peripherals](#);
- The name of sourcefile and header file are started with “gd32f10x_”, such as: gd32f10x_adc.h;
- The constants used only in one file should be defined in the used file; the constants used in many files should be defined in corresponding header file. All the constants are written in uppercase of English letters;
- Registers are handled as constants. The naming of them are written in uppercase of English letters. In most cases, register names are shortened accord with the user manual;
- Variables are written in lowercase, when concluded by several words, underlines should be adapted among words;
- The naming of peripheral functions are started with the peripheral abbreviation added with an underline, when the function name is concluded by several words, underlines should be adapted among words, and all the peripheral functions are written in lowercase.

2. Firmware Library Overview

2.1. File Structure of Firmware Library

GD32F10x_Firmware_Library, the file structure is shown as below:

Figure 2-1. File structure of firmware library of GD32F10x

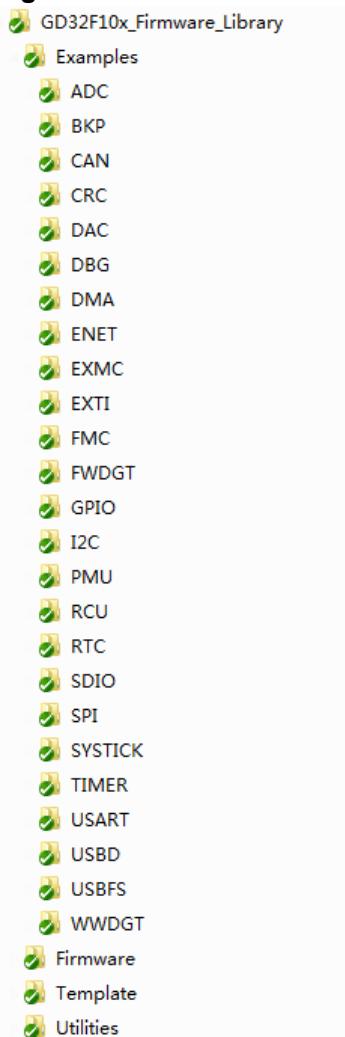

2.1.1. Examples Folder

Examples folder, each of GD32 peripheral has a subfolder. Each subfolder contains one or more examples of the peripheral, to show how to use the peripheral correctly. Each of the example subfolder includes the files shown as below:

- readme.txt: the description and using guide of the example;
- gd32f10x_libopt.h: the header file configures all the peripherals used in the example, included by different “DEFINE” sentences (all the peripherals are enabled by default);
- gd32f10x_it.c: the source file include all the interrupt service routines (if no interrupt is

- used, then all the function bodies are empty);
- gd32f10x_it.h: the header file include all the prototypes of the interrupt service routines;
 - systick.c: the source file include the precise time delay functions by using systick;
 - systick.h: the header file include the prototype of the precise time delay functions by using systick;
 - main.c: example code. Note: all the examples are not influenced by software IDEs.

2.1.2. Firmware Folder

Firmware folder includes all the subfolder and files which are the core part of the firmware:

- CMSIS subfolder includes the Cortex M3 kernel support files, the startup file based on the Cortex M3 kernel processor, the global header file of GD32F10x and system configuration file;
- GD32F10x_standard_peripheral subfolder:
 - Include subfolder includes all the header files of firmware library, users need not modify this folder;
 - Source subfolder includes all the source files of firmware library, users need not modify this folder;
- GD32F10x_usbd_driver subfolder includes all the related files about USBD peripheral:
 - Include subfolder includes the header files of USBD peripheral, users need not modify this folder;
 - Source subfolder includes the source files of USBD peripheral, users need not modify this folder;
- GD32F10x_usbfs_driver subfolder includes all the related files about USBFS peripheral:
 - Include subfolder includes the header files of USBFS peripheral, users need not modify this folder;
 - Source subfolder includes the source files of USBFS peripheral, users need not modify this folder;

Note: All the codes accord with MISRA-C:2004 standard, and will not be influenced by different software IDEs.


2.1.3. Template Folder

Template folder includes a simple demo of how to use LED, how to print by USART and use key to control, (IAR_project is run in IAR, Keil_project5 is run in Keil5, and Keil_project4 is run in Keil4). User can use the project template to compile the formware examples, the steps are shown as below:

Select files

Open “Examples” folder, select the module to be tested, such as SPI, open “SPI” folder, select an example of SPI, such as “SPI_master_transmit_slave_receive_interrupt”, shown as below:


Figure 2-2. Select peripheral example files

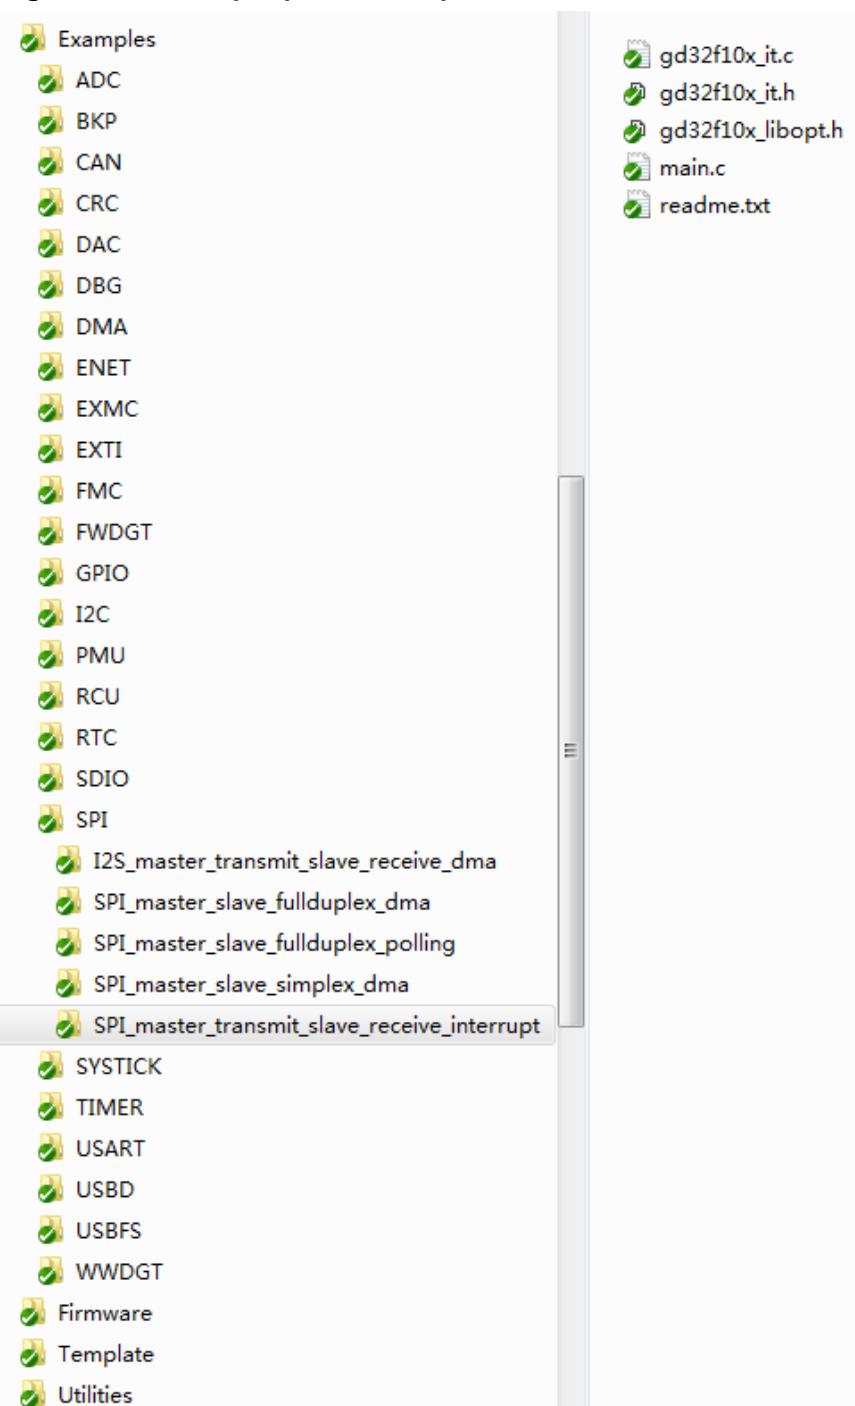

Copy files

Open “Template” folder, keep the folders of “IAR_project” and “Keil_project”, and delete the other files, then copy all the files in “SPI_master_transmit_slave_receive_interrupt” folder to the “Template” subfolder, shown as below:


Figure 2-3. Copy the peripheral example files

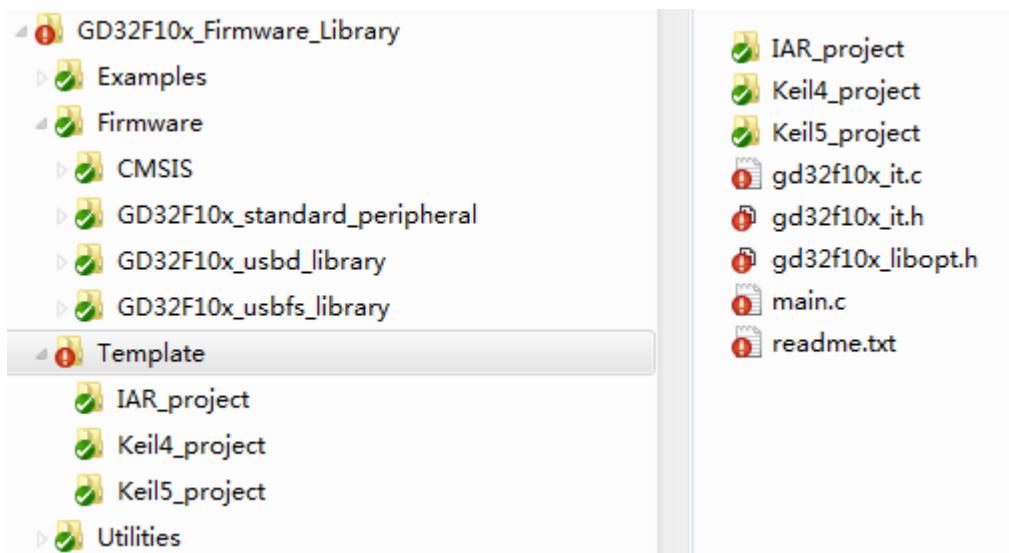

Open a project


GD provides project in Keil and IAR, users can open project in different IDEs according to their need, such as “Keil5_project”, open \Template\Keil5_project\Project.uvprojx, shown as below:

Figure 2-4. Open the project file

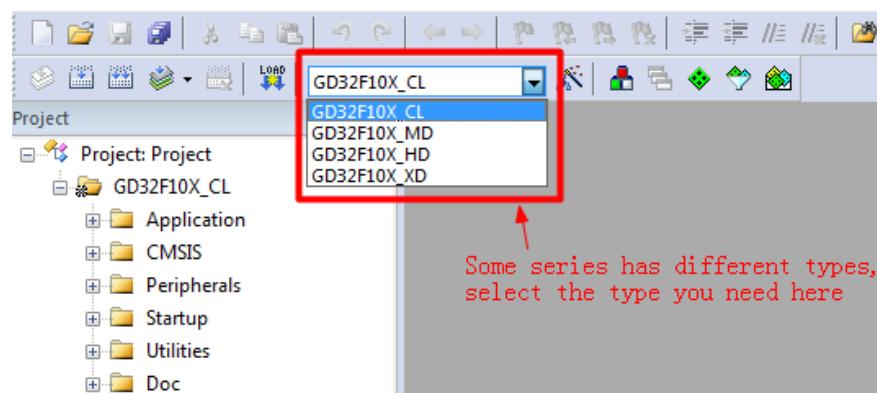

Because different module and different functions adopt different files, users should add or delete the files in project according to the copied files, shown as below:


Figure 2-5. Configure project files

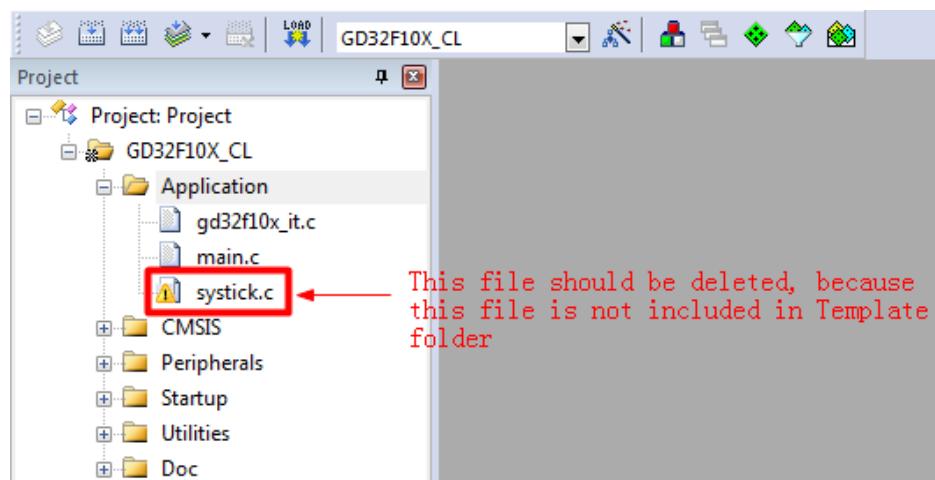

Compile-Debug-Download

First compile the project, if there is no error, then select the right jumper cap according to the description of readme, download the project to the target board, and there will be the phenomenon showed accord with the description of readme. The usage of IDE can refer to corresponding software user guide. If users are using Keil, the figure is shown as below:

Figure 2-6. Compile-debug-download

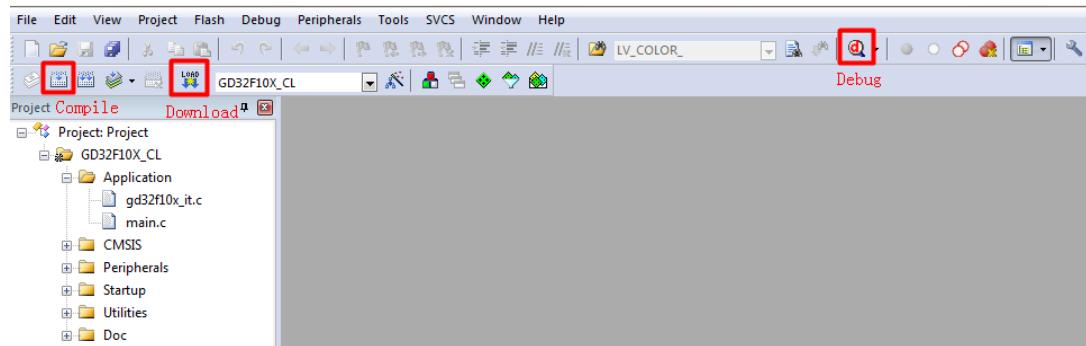

2.1.4. Utilities Folder

Utilities folder includes files about the firmware examples on evaluation board:

- Binary、LCD_Common and Third_Party subfolders include files for USB tests;
- gd32f10x_eval.h and gd32f10x_lcd_eval.h are related header files of the evaluation board about running the firmware examples;
- gd32f10x_eval.c and gd32f10x_lcd_eval.c are related source files of the evaluation board about running the firmware examples.

Note: All the codes accord with MISRA-C:2004 standard, and will not be influenced by different software IDEs.

2.2. File descriptions of Firmware Library

The major files about the firmware library are listed and described in the table below.

Table 2-1. Function descriptions of Firmware Library

Files	Descriptions
gd32f10x_libopt.h	The header file about all the header files of peripherals. It is the only one file which is necessity to be included in the user's application, to connect the firmware library and the application.
main.c	Example of main function.
gd32f10x_it.h	Header file, including all the prototypes of interrupt service routines.
gd32f10x_it.c	Source files about interrupt service routines of peripherals. User can written his own interrupt functions in this file. For the different interrupt service requests to the same interrupt vector, users can confirm the interrupt source by functions of judging interrupt flags of peripherals. The functions are included in the firmware library.
gd32f10x_xxx.h	The header file of peripheral PPP, including functions about peripheral PPP, and the variables used for functions.
gd32f10x_xxx.c	The C source file for driving peripheral PPP.
systick.h	The header file of systick.c, including prototypes of systick configuration function and delay function.
systick.c	The source file about systick configuration function and delay function.
readme.txt	Description document about how to configure and how to use the firmware example.

3. Firmware Library of Standard Peripherals

3.1. Overview of Firmware Library of Standard Peripherals

The description format of firmware functions are shown as below:

Table 3-1. Peripheral function format of Firmware Library

Function name	Name of peripheral function
Function prototype	Declaration prototype
Function descriptions	Explain the function how to work
Precondition	Requirements should meet before calling this function
The called functions	Other firmw are functions called in this functin
Input parameter{in}	
Input parameter name	Description
xxxx	Description of input parameters
Output parameter{out}	
Output parameter name	Description
xxxx	Description of output parameters
Return value	
Return value type	The range of return value

3.2. ADC

The 12-bit ADC is an analog-to-digital converter using the successive approximation method.

The ADC registers are listed in chapter [3.2.1](#), the ADC firmware functions are introduced in chapter [3.2.2](#).

3.2.1. Descriptions of Peripheral registers

ADC registers are listed in the table shown as below:

Table 3-2. ADC Registers

Registers	Descriptions
ADC_STAT	Status register
ADC_CTL0	Control register 0
ADC_CTL1	Control register 1
ADC_SAMPT0	Sampling time register 0
ADC_SAMPT1	Sampling time register 1
ADC_IOFFx (x=0..3)	Inserted channel data offset register x
ADC_WDHT	Watchdog high threshold register

Registers	Descriptions
ADC_WDLT	Watchdog low threshold register
ADC_RSQ0	Regular sequence register 0
ADC_RSQ1	Regular sequence register 1
ADC_RSQ2	Regular sequence register 2
ADC_ISQ	Inserted sequence register
ADC_IDATAx (x=0..3)	Inserted data register x
ADC_RDATA	Regular data register

3.2.2. Descriptions of Peripheral functions

ADC firmware functions are listed in the table shown as below:

Table 3-3. ADC firmware function

Function name	Function description
adc_deinit	reset ADC peripheral
adc_mode_config	configure the ADC sync mode
adc_special_function_config	enable or disable ADC special function
adc_data_alignment_config	configure ADC data alignment
adc_enable	enable ADC interface
adc_disable	disable ADC interface
adc_calibration_enable	ADC calibration and reset calibration
adc_tempsensor_vrefint_enable	enable the temperature sensor and Vrefint channel
adc_tempsensor_vrefint_disable	disable the temperature sensor and Vrefint channel
adc_dma_mode_enable	enable DMA request
adc_dma_mode_disable	disable DMA request
adc_discontinuous_mode_config	configure ADC discontinuous mode
adc_channel_length_config	configure the length of regular channel group or inserted channel group
adc_regular_channel_config	configure ADC regular channel
adc_inserted_channel_config	configure ADC inserted channel
adc_inserted_channel_offset_config	configure ADC inserted channel offset
adc_external_trigger_source_config	configure ADC external trigger source
adc_external_trigger_config	enable ADC external trigger
adc_softw are_trigger_enable	enable ADC softw are trigger
adc_regular_data_read	read ADC regular group data register
adc_inserted_data_read	read ADC inserted group data register
adc_sync_mode_convert_value_read	read the last ADC0 and ADC1 conversion result data in sync mode
adc_watchdog_single_channel_enable	configure ADC analog watchdog single channel
adc_watchdog_group_channel	configure ADC analog watchdog group channel

Function name	Function description
_enable	
adc_watchdog_disable	disable ADC analog watchdog
adc_watchdog_threshold_config	configure ADC analog watchdog threshold
adc_flag_get	get the ADC flag bits
adc_flag_clear	clear the ADC flag bits
adc_regular_software_startconv_flag_get	get the bit state of ADC software start conversion
adc_inserted_software_startconv_flag_get	get the bit state of ADC software inserted channel start conversion
adc_interrupt_flag_get	get the ADC interrupt bits
adc_interrupt_flag_clear	clear the ADC flag
adc_interrupt_enable	enable ADC interrupt
adc_interrupt_disable	disable ADC interrupt

adc_deinit

The description of adc_deinit is shown as below:

Table 3-4. Function adc_deinit

Function name	adc_deinit
Function prototype	void adc_deinit(uint32_t adc_periph);
Function descriptions	Reset ADC peripheral
Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset ADC0 */
adc_deinit(ADC0);
```

adc_mode_config

The description of adc_mode_config is shown as below:

Table 3-5. Function adc_mode_config

Function name	adc_mode_config
Function prototype	void adc_mode_config(uint32_t mode);

Function descriptions	Configure the ADC sync mode
Precondition	-
The called functions	-
Input parameter{in}	
mode	ADC mode
<i>ADC_MODE_FREE</i>	all the ADC work independently
<i>ADC_DAUL_REGULAR_PARALLEL_INSERTED_PARALLEL</i>	ADC0 and ADC1 work in combined regular parallel + inserted parallel mode
<i>ADC_DAUL_REGULAR_PARALLEL_INSERTED_ROTATION</i>	ADC0 and ADC1 work in combined regular parallel + trigger rotation mode
<i>ADC_DAUL_INSERTED_PARALLEL_REGULAR_FOLLOWUP_FAST</i>	ADC0 and ADC1 work in combined inserted parallel + follow-up fast mode
<i>ADC_DAUL_INSERTED_PARALLEL_REGULAR_FOLLOWUP_SLOW</i>	ADC0 and ADC1 work in combined inserted parallel + follow-up slow mode
<i>ADC_DAUL_INSERTED_PARALLEL</i>	ADC0 and ADC1 work in inserted parallel mode only
<i>ADC_DAUL_REGULAR_PARALLEL</i>	ADC0 and ADC1 work in regular parallel mode only
<i>ADC_DAUL_REGULAR_FOLLOWUP_FAST</i>	ADC0 and ADC1 work in follow-up fast mode only
<i>ADC_DAUL_REGULAR_FOLLOWUP_SLOW</i>	ADC0 and ADC1 work in follow-up slow mode only
<i>ADC_DAUL_INSERTED_TRIGGER_ROTATION</i>	ADC0 and ADC1 work in trigger rotation mode only
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the ADC sync mode */

adc_mode_config(ADC_MODE_FREE);
```

adc_special_function_config

The description of `adc_special_function_config` is shown as below:

Table 3-6. Function adc_special_function_config

Function name	adc_special_function_config
Function prototype	void adc_special_function_config(uint32_t adc_periph, uint32_t function, ControlStatus new value);
Function descriptions	Enable or disable ADC special function
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
function	the function to config
ADC_SCAN_MODE	scan mode select
ADC_INSERTED_CHANNEL_AUTO	inserted channel group convert automatically
ADC_CONTINUOUS_MODE	continuous mode select
Input parameter{in}	
new value	control value
ENABLE	enable function
DISABLE	disable function
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ADC0 scan mode */
adc_special_function_config(ADC0, ADC_SCAN_MODE, ENABLE);
```

adc_data_alignment_config

The description of adc_data_alignment_config is shown as below:

Table 3-7. Function adc_data_alignment_config

Function name	adc_data_alignment_config
Function prototype	void adc_data_alignment_config(uint32_t adc_periph, uint32_t data_alignment);
Function descriptions	Configure ADC data alignment
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral

<i>ADCx</i>	x=0,1,2
Input parameter{in}	
data_alignment	data alignment select
<i>ADC_DATAALIGN_RIGHT</i>	LSB alignment
<i>ADC_DATAALIGN_LEFT</i>	MSB alignment
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ADC0 data alignment */
adc_data_alignment_config(ADC0, ADC_DATAALIGN_RIGHT);
```

adc_enable

The description of `adc_enable` is shown as below:

Table 3-8. Function `adc_enable`

Function name	adc_enable
Function prototype	void adc_enable(uint32_t adc_periph);
Function descriptions	Enable ADC interface
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
<i>ADCx</i>	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ADC0 */
adc_enable(ADC0);
```

adc_disable

The description of `adc_disable` is shown as below:

Table 3-9. Function `adc_disable`

Function name	adc_disable
----------------------	-------------

Function prototype	void adc_disable(uint32_t adc_periph);
Function descriptions	Disable ADC interface
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ADC0 */
adc_disable(ADC0);
```

adc_calibration_enable

The description of `adc_calibration_enable` is shown as below:

Table 3-10. Function `adc_calibration_enable`

Function name	adc_calibration_enable
Function prototype	void adc_calibration_enable(uint32_t adc_periph);
Function descriptions	ADC calibration and reset calibration
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* ADC0 calibration and reset calibration */
adc_calibration_enable(ADC0);
```

adc_tempsensor_vrefint_enable

The description of `adc_tempsensor_vrefint_enable` is shown as below:

Table 3-11. Function `adc_tempsensor_vrefint_enable`

Function name	adc_tempsensor_vrefint_enable
----------------------	-------------------------------

Function prototype	void adc_tempsensor_vrefint_enable(void);
Function descriptions	Enable the temperature sensor and Vrefint channel
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the temperature sensor and Vrefint channel */

adc_tempsensor_vrefint_enable();
```

adc_tempsensor_vrefint_disable

The description of adc_tempsensor_vrefint_disable is shown as below:

Table 3-12. Function adc_tempsensor_vrefint_disable

Function name	adc_tempsensor_vrefint_disable
Function prototype	void adc_tempsensor_vrefint_disable(void);
Function descriptions	Disable the temperature sensor and Vrefint channel
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the temperature sensor and Vrefint channel */

adc_tempsensor_vrefint_disable();
```

adc_dma_mode_enable

The description of adc_dma_mode_enable is shown as below:

Table 3-13. Function adc_dma_mode_enable

Function name	adc_dma_mode_enable
Function prototype	void adc_dma_mode_enable(uint32_t adc_periph);
Function descriptions	Enable ADC DMA request

Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ADC0 DMA request */
adc_dma_mode_enable(ADC0);
```

adc_dma_mode_disable

The description of adc_dma_mode_disable is shown as below:

Table 3-14. Function adc_dma_mode_disable

Function name	adc_dma_mode_disable
Function prototype	void adc_dma_mode_disable(uint32_t adc_periph);
Function descriptions	Disable ADC DMA request
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ADC0 DMA request */
adc_dma_mode_disable(ADC0);
```

adc_discontinuous_mode_config

The description of adc_discontinuous_mode_config is shown as below:

Table 3-15. Function adc_discontinuous_mode_config

Function name	adc_discontinuous_mode_config
Function prototype	void adc_discontinuous_mode_config(uint32_t adc_periph, uint8_t adc_channel_group, uint8_t length);

Function descriptions	Configure ADC discontinuous mode
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_channel_group	select the channel group
ADC_REGULAR_CHANNEL	regular channel group
ADC_INSERTED_CHANNEL	inserted channel group
ADC_CHANNEL_DISCON_DISABLE	disable discontinuous mode of regular and inserted channel
Input parameter{in}	
length	number of conversions in discontinuous mode, the number can be 1..8 for regular channel, the number has no effect for inserted channel
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ADC0 discontinuous mode */
adc_discontinuous_mode_config(ADC0,ADC_REGULAR_CHANNEL, 6);
```

adc_channel_length_config

The description of adc_channel_length_config is shown as below:

Table 3-16. Function adc_channel_length_config

Function name	adc_channel_length_config
Function prototype	void adc_channel_length_config(uint32_t adc_periph, uint8_t adc_channel_group, uint32_t length);
Function descriptions	Configure the length of regular channel group or inserted channel group
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_channel_group	select the channel group
ADC_REGULAR	regular channel group

<u>_CHANNEL</u>	
<u>ADC_INSERTED_CHANNEL</u>	inserted channel group
Input parameter{in}	
length	the length of the channel, regular channel 1-16, inserted channel 1-4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the length of ADC0 regular channel */
adc_channel_length_config(ADC0,ADC_REGULAR_CHANNEL, 4);
```

adc_regular_channel_config

The description of adc_regular_channel_config is shown as below:

Table 3-17. Function adc_regular_channel_config

Function name	adc_regular_channel_config
Function prototype	void adc_regular_channel_config(uint32_t adc_periph, uint8_t rank, uint8_t adc_channel, uint32_t sample_time);
Function descriptions	Configure ADC regular channel
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
rank	the regular group sequence rank, this parameter must be between 0 to 15
Input parameter{in}	
adc_channel	the selected ADC channel
ADC_CHANNEL_x	ADC Channelx (x=0..17)(x=16 and x=17 are only for ADC0)
Input parameter{in}	
sample_time	the sample time value
ADC_SAMPLETIME_1POINT5	1.5 cycles
ADC_SAMPLETIME_7POINT5	7.5 cycles
ADC_SAMPLETIME_13POINT5	13.5 cycles
ADC_SAMPLETIME_28POINT5	28.5 cycles

<i>ADC_SAMPLETIME_41POINT5</i>	41.5 cycles
<i>ADC_SAMPLETIME_55POINT5</i>	55.5 cycles
<i>ADC_SAMPLETIME_71POINT5</i>	71.5 cycles
<i>ADC_SAMPLETIME_239POINT5</i>	239.5 cycles
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ADC0 regular channel */
adc_regular_channel_config(ADC0, 1, ADC_CHANNEL_0, ADC_SAMPLETIME_7POINT5);
```

adc_inserted_channel_config

The description of adc_inserted_channel_config is shown as below:

Table 3-18. Function adc_inserted_channel_config

Function name	adc_inserted_channel_config
Function prototype	void adc_inserted_channel_config(uint32_t adc_periph, uint8_t rank, uint8_t adc_channel, uint32_t sample_time);
Function descriptions	Configure ADC inserted channel
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
rank	the inserted group sequencer rank, this parameter must be between 0 to 3
Input parameter{in}	
adc_channel	the selected ADC channel
ADC_CHANNEL_x	ADC Channelx (x=0..17)(x=16 and x=17 are only for ADC0)
Input parameter{in}	
sample_time	the sample time value
<i>ADC_SAMPLETIME_1POINT5</i>	1.5 cycles
<i>ADC_SAMPLETIME_7POINT5</i>	7.5 cycles
<i>ADC_SAMPLETIME_13POINT5</i>	13.5 cycles

<code>_13POINT5</code>	
<code>ADC_SAMPLETIME_28POINT5</code>	28.5 cycles
<code>ADC_SAMPLETIME_41POINT5</code>	41.5 cycles
<code>ADC_SAMPLETIME_55POINT5</code>	55.5 cycles
<code>ADC_SAMPLETIME_71POINT5</code>	71.5 cycles
<code>ADC_SAMPLETIME_239POINT5</code>	239.5 cycles
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ADC0 inserted channel */
adc_inserted_channel_config(ADC0, 1, ADC_CHANNEL_0, ADC_SAMPLETIME_7POINT5);
```

adc_inserted_channel_offset_config

The description of `adc_inserted_channel_offset_config` is shown as below:

Table 3-19. Function `adc_inserted_channel_offset_config`

Function name	<code>adc_inserted_channel_offset_config</code>
Function prototype	<code>void adc_inserted_channel_offset_config(uint32_t adc_periph, uint8_t inserted_channel, uint16_t offset);</code>
Function descriptions	Configure ADC inserted channel offset
Precondition	-
The called functions	-
Input parameter{in}	
<code>adc_periph</code>	ADC peripheral
<code>ADCx</code>	x=0,1,2
Input parameter{in}	
<code>inserted_channel</code>	insert channel select
<code>ADC_INSERTED_CHANNEL_x</code>	inserted channel, x=0,1,2,3
Input parameter{in}	
<code>offset</code>	the offset data, this parameter must be between 0 to 4095
Output parameter{out}	
-	-
Return value	

Example:

```
/* configure ADC0 inserted channel offset */
adc_inserted_channel_offset_config(ADC0, ADC_INSERTED_CHANNEL_0, 100);
```

adc_external_trigger_source_config

The description of adc_external_trigger_source_config is shown as below:

Table 3-20. Function adc_external_trigger_source_config

Function name	adc_external_trigger_source_config
Function prototype	void adc_external_trigger_source_config(uint32_t adc_periph, uint8_t adc_channel_group, uint32_t external_trigger_source);
Function descriptions	Configure ADC external trigger source
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_channel_group	select the channel group
ADC_REGULAR_CHANNEL	regular channel group
ADC_INSERTED_CHANNEL	inserted channel group
Input parameter{in}	
external_trigger_source	regular or inserted group trigger source
ADC0_1_EXTTRIG_REGULAR_T0_CH0	TIMER0 CH0 event select for regular channel
ADC0_1_EXTTRIG_REGULAR_T0_CH1	TIMER0 CH1 event select for regular channel
ADC0_1_EXTTRIG_REGULAR_T0_CH2	TIMER0 CH2 event select for regular channel
ADC0_1_EXTTRIG_REGULAR_T1_CH1	TIMER1 CH1 event select for regular channel
ADC0_1_EXTTRIG_REGULAR_T2_TRGO	TIMER2 TRGO event select for regular channel
ADC0_1_EXTTRIG_REGULAR_T3_CH3	TIMER3 CH3 event select for regular channel
ADC0_1_EXTTRIG_REGULAR_T7_TRGO	TIMER7 TRGO event select for regular channel

<code>ADC0_1_EXTTRIG_REGULAR_EXTI_11</code>	external interrupt line 11 for regular channel
<code>ADC2_EXTTRIG_REGULAR_T2_CH0</code>	TIMER2 CH0 event select for regular channel
<code>ADC2_EXTTRIG_REGULAR_T1_CH2</code>	TIMER1 CH2 event select for regular channel
<code>ADC2_EXTTRIG_REGULAR_T0_CH2</code>	TIMER0 CH2 event select for regular channel
<code>ADC2_EXTTRIG_REGULAR_T7_CH0</code>	TIMER7 CH0 event select for regular channel
<code>ADC2_EXTTRIG_REGULAR_T7_TRGO</code>	TIMER7 TRGO event select for regular channel
<code>ADC2_EXTTRIG_REGULAR_T4_CH0</code>	TIMER4 CH0 event select for regular channel
<code>ADC2_EXTTRIG_REGULAR_T4_CH2</code>	TIMER4 CH2 event select for regular channel
<code>ADC0_1_2_EXTTRIG_REGULAR_NONE</code>	software trigger for regular channel
<code>ADC0_1_EXTTRIG_INSERTED_T0_TRGO</code>	TIMER0 TRGO event select for inserted channel
<code>ADC0_1_EXTTRIG_INSERTED_T0_CH3</code>	TIMER0 CH3 event select for inserted channel
<code>ADC0_1_EXTTRIG_INSERTED_T1_TRGO</code>	TIMER1 TRGO event select for inserted channel
<code>ADC0_1_EXTTRIG_INSERTED_T1_CH0</code>	TIMER1 CH0 event select for inserted channel
<code>ADC0_1_EXTTRIG_INSERTED_T2_CH3</code>	TIMER2 CH3 event select for inserted channel
<code>ADC0_1_EXTTRIG_INSERTED_T3_TRGO</code>	TIMER3 TRGO event select for inserted channel
<code>ADC0_1_EXTTRIG_INSERTED_EXTI_15</code>	external interrupt line 15 for inserted channel
<code>ADC0_1_EXTTRIG_INSERTED_T7_CH3</code>	TIMER7 CH3 event select for inserted channel
<code>ADC2_EXTTRIG_INSERTED_T0_TRGO</code>	TIMER0 TRGO event select for inserted channel
<code>ADC2_EXTTRIG_INSERTED_T0_CH3</code>	TIMER0 CH3 event select for inserted channel
<code>ADC2_EXTTRIG_INSERTED_T3_CH2</code>	TIMER3 CH2 event select for inserted channel
<code>ADC2_EXTTRIG_INSERTED_T7_CH1</code>	TIMER7 CH1 event select for inserted channel
<code>ADC2_EXTTRIG_INSERTED</code>	TIMER7 CH3 event select for inserted channel

<i>RTED_T7_CH3</i>	
<i>ADC2_EXTTRIG_INSE</i> <i>RTED_T4_TRGO</i>	TIMER4 TRGO event select for inserted channel
<i>ADC2_EXTTRIG_INSE</i> <i>RTED_T4_CH3</i>	TIMER4 CH3 event select for inserted channel
<i>ADC0_1_2_EXTTRIG_I</i> <i>INSERTED_NONE</i>	softw are trigger for inserted channel
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ADC0 regular channel external trigger source */

adc_external_trigger_source_config(ADC0,ADC_REGULAR_CHANNEL,
ADC0_1_EXTTRIG_REGULAR_T0_CH0);
```

adc_external_trigger_config

The description of adc_external_trigger_config is shown as below:

Table 3-21. Function adc_external_trigger_config

Function name	adc_external_trigger_config
Function prototype	void adc_external_trigger_config(uint32_t adc_periph, uint8_t adc_channel_group, ControlStatus new value);
Function descriptions	Configure ADC external trigger
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_channel_group	select the channel group
ADC_REGULAR_CHA NNEL	regular channel group
ADC_INSERTED_CHA NNEL	inserted channel group
Input parameter{in}	
new value	control value
ENABLE	enable function
DISABLE	disable function
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* enable ADC0 inserted channel group external trigger */
adc_external_trigger_config(ADC0,ADC_INSERTED_CHANNEL_0,ENABLE);
```

adc_software_trigger_enable

The description of adc_software_trigger_enable is shown as below:

Table 3-22. Function adc_software_trigger_enable

Function name	adc_software_trigger_enable
Function prototype	void adc_software_trigger_enable(uint32_t adc_periph, uint8_t adc_channel_group);
Function descriptions	Enable ADC software trigger
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_channel_group	select the channel group
ADC_REGULAR_CHANNEL	regular channel group
ADC_INSERTED_CHANNEL	inserted channel group
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ADC0 regular channel group software trigger */
adc_software_trigger_enable(ADC0,ADC_REGULAR_CHANNEL);
```

adc_regular_data_read

The description of adc_regular_data_read is shown as below:

Table 3-23. Function adc_regular_data_read

Function name	adc_regular_data_read
Function prototype	uint16_t adc_regular_data_read(uint32_t adc_periph);
Function descriptions	Read ADC regular group data register

Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Output parameter{out}	
-	-
Return value	
uint16_t	ADC conversion value (0-0xFFFF)

Example:

```
/* read ADC0 regular group data register */

uint16_t adc_value = 0;

adc_value = adc_regular_data_read(ADC0);
```

adc_inserted_data_read

The description of `adc_inserted_data_read` is shown as below:

Table 3-24. Function `adc_inserted_data_read`

Function name	adc_inserted_data_read
Function prototype	uint16_t adc_inserted_data_read(uint32_t adc_periph, uint8_t inserted_channel);
Function descriptions	Read ADC inserted group data register
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
inserted_channel	insert channel select
ADC_INSERTED_CHA_NNEL_x	inserted Channelx, x=0,1,2,3
Output parameter{out}	
-	-
Return value	
uint16_t	ADC conversion value (0-0xFFFF)

Example:

```
/* read ADC0 inserted group data register */

uint16_t adc_value = 0;

adc_value = adc_inserted_data_read(ADC0, ADC_INSERTED_CHANNEL_0);
```

adc_sync_mode_convert_value_read

The description of adc_sync_mode_convert_value_read is shown as below:

Table 3-25. Function adc_sync_mode_convert_value_read

Function name	adc_sync_mode_convert_value_read
Function prototype	uint32_t adc_sync_mode_convert_value_read(void);
Function descriptions	Read the last ADC0 and ADC1 conversion result data in sync mode
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint32_t	ADC conversion value (0-0xFFFFFFFF)

Example:

```
/* read the last ADC0 and ADC1 conversion result data in sync mode */

uint32_t adc_value = 0;

adc_value = adc_sync_mode_convert_value_read();
```

adc_watchdog_single_channel_enable

The description of adc_watchdog_single_channel_enable is shown as below:

Table 3-26. Function adc_watchdog_single_channel_enable

Function name	adc_watchdog_single_channel_enable
Function prototype	void adc_watchdog_single_channel_enable(uint32_t adc_periph, uint8_t adc_channel);
Function descriptions	Configure ADC analog watchdog single channel
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_channel	the selected ADC channel
ADC_CHANNEL_x	ADC Channelx(x=0..17) (x=16 and x=17 are only for ADC0)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ADC0 analog watchdog single channel */
adc_watchdog_single_channel_enable(ADC0,ADC_CHANNEL_1);
```

adc_watchdog_group_channel_enable

The description of adc_watchdog_group_channel_enable is shown as below:

Table 3-27. Function adc_watchdog_group_channel_enable

Function name	adc_watchdog_group_channel_enable
Function prototype	void adc_watchdog_group_channel_enable(uint32_t adc_periph, uint8_t adc_channel_group);
Function descriptions	Configure ADC analog watchdog group channel
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_channel_group	the channel group use analog watchdog
ADC_REGULAR_CHANNEL	regular channel group
ADC_INSERTED_CHANNEL	inserted channel group
ADC_REGULAR_INSERTED_CHANNEL	both regular and inserted group
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ADC0 analog watchdog group channel */
adc_watchdog_group_channel_enable(ADC0,ADC_REGULAR_CHANNEL);
```

adc_watchdog_disable

The description of adc_watchdog_disable is shown as below:

Table 3-28. Function adc_watchdog_disable

Function name	adc_watchdog_disable
Function prototype	void adc_watchdog_disable(uint32_t adc_periph);
Function descriptions	Disable ADC analog watchdog

Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ADC0 analog watchdog */
adc_watchdog_disable(ADC0);
```

adc_watchdog_threshold_config

The description of **adc_watchdog_threshold_config** is shown as below:

Table 3-29. Function adc_watchdog_threshold_config

Function name	adc_watchdog_threshold_config
Function prototype	void adc_watchdog_threshold_config(uint32_t adc_periph, uint16_t low_threshold, uint16_t high_threshold);
Function descriptions	Configure ADC analog watchdog threshold
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
low_threshold	analog watchdog low threshold, 0..4095
Input parameter{in}	
high_threshold	analog watchdog high threshold, 0..4095
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ADC0 analog watchdog threshold */
adc_watchdog_threshold_config(ADC0, 0x0400, 0x0A00);
```

adc_flag_get

The description of adc_flag_get is shown as below:

Table 3-30. Function adc_flag_get

Function name	adc_flag_get
Function prototype	FlagStatus adc_flag_get(uint32_t adc_periph , uint32_t adc_flag);
Function descriptions	Get the ADC flag bits
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_flag	the adc flag bits
ADC_FLAG_WDE	analog watchdog event flag
ADC_FLAG_EOC	end of group conversion flag
ADC_FLAG_EOIC	end of inserted group conversion flag
ADC_FLAG_STIC	start flag of inserted channel group
ADC_FLAG_STRC	start flag of regular channel group
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get the ADC0 analog watchdog flag bits*/
FlagStatus flag_value;
flag_value = adc_flag_get(ADC0, ADC_FLAG_WDE);
```

adc_flag_clear

The description of adc_flag_clear is shown as below:

Table 3-31. Function adc_flag_clear

Function name	adc_flag_clear
Function prototype	void adc_flag_clear(uint32_t adc_periph, uint32_t adc_flag);
Function descriptions	Clear the ADC flag bits
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2

Input parameter{in}	
adc_flag	the adc flag bits
ADC_FLAG_WDE	analog watchdog event flag
ADC_FLAG_EOC	end of group conversion flag
ADC_FLAG_EOIC	end of inserted group conversion flag
ADC_FLAG_STIC	start flag of inserted channel group
ADC_FLAG_STRC	start flag of regular channel group
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear the ADC0 analog watchdog flag bits*/
adc_flag_clear(ADC0, ADC_FLAG_WDE);
```

adc_regular_software_startconv_flag_get

The description of **adc_regular_software_startconv_flag_get** is shown as below:

Table 3-32. Function adc_regular_software_startconv_flag_get

Function name	adc_regular_software_startconv_flag_get
Function prototype	FlagStatus adc_regular_software_startconv_flag_get(uint32_t adc_periph);
Function descriptions	Get the bit state of ADC software regular channel start conversion
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get the bit state of ADC0 software regular channel start conversion */
FlagStatus flag_value;
flag_value = adc_regular_software_startconv_flag_get(ADC0);
```

adc_inserted_software_startconv_flag_get

The description of **adc_inserted_software_startconv_flag_get** is shown as below:

Table 3-33. Function adc_inserted_software_startconv_flag_get

Function name	adc_inserted_softw are_startconv_flag_get
Function prototype	FlagStatus adc_inserted_softw are_startconv_flag_get(uint32_t adc_periph);
Function descriptions	Get the bit state of ADC softw are inserted channel start conversion
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get the bit state of ADC0 software inserted channel start conversion */

FlagStatus flag_value;

flag_value = adc_inserted_software_startconv_flag_get(ADC0);
```

adc_interrupt_flag_get

The description of adc_interrupt_flag_get is shown as below:

Table 3-34. Function adc_interrupt_flag_get

Function name	adc_interrupt_flag_get
Function prototype	FlagStatus adc_interrupt_flag_get(uint32_t adc_periph, uint32_t adc_interrupt);
Function descriptions	Get the ADC interrupt bits
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_interrupt	the adc interrupt bits
ADC_INT_FLAG_WDE	analog watchdog interrupt
ADC_INT_FLAG_EOC	end of group conversion interrupt
ADC_INT_FLAG_EOIC	end of inserted group conversion interrupt
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```

/* get the ADC0 analog watchdog interrupt bits*/

FlagStatus flag_value;

flag_value = adc_interrupt_flag_get(ADC0, ADC_INT_WDE);

adc_interrupt_flag_clear
  
```

The description of `adc_interrupt_flag_clear` is shown as below:

Table 3-35. Function `adc_interrupt_flag_clear`

Function name	adc_interrupt_flag_clear
Function prototype	void adc_interrupt_flag_clear(uint32_t adc_periph, uint32_t adc_interrupt);
Function descriptions	Clear the ADC interrupt bits
Precondition	-
The called functions	-
Input parameter{in}	
<code>adc_periph</code>	ADC peripheral
<code>ADCx</code>	x=0,1,2
Input parameter{in}	
<code>adc_interrupt</code>	the adc interrupt bits
<code>ADC_INT_FLAG_WDE</code>	analog watchdog interrupt
<code>ADC_INT_FLAG_EOC</code>	end of group conversion interrupt
<code>ADC_INT_FLAG_EOIC</code>	end of inserted group conversion interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* clear the ADC0 analog watchdog interrupt bits*/

adc_interrupt_flag_clear(ADC0, ADC_INT_WDE);
  
```

adc_interrupt_enable

The description of `adc_interrupt_enable` is shown as below:

Table 3-36. Function `adc_interrupt_enable`

Function name	adc_interrupt_enable
Function prototype	void adc_interrupt_enable(uint32_t adc_periph, uint32_t adc_interrupt);
Function descriptions	Enable ADC interrupt
Precondition	-
The called functions	-
Input parameter{in}	

adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_interrupt	the adc interrupt
ADC_INT_WDE	analog watchdog interrupt
ADC_INT_EOC	end of group conversion interrupt
ADC_INT_EOIC	end of inserted group conversion interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ADC0 analog watchdog interrupt */
adc_interrupt_enable(ADC0, ADC_INT_WDE);
```

adc_interrupt_disable

The description of `adc_interrupt_disable` is shown as below:

Table 3-37. Function `adc_interrupt_disable`

Function name	adc_interrupt_disable
Function prototype	void adc_interrupt_disable(uint32_t adc_periph , uint32_t adc_interrupt);
Function descriptions	Disable ADC interrupt
Precondition	-
The called functions	-
Input parameter{in}	
adc_periph	ADC peripheral
ADCx	x=0,1,2
Input parameter{in}	
adc_interrupt	the adc interrupt
ADC_INT_WDE	analog watchdog interrupt
ADC_INT_EOC	end of group conversion interrupt
ADC_INT_EOIC	end of inserted group conversion interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ADC0 interrupt */
adc_interrupt_disable(ADC0, ADC_INT_WDE);
```

3.3. BKP

The Backup registers are located in the Backup domain that remains powered-on by V_{BAT} even if V_{DD} power is shut down, there are forty two 16-bit (84 bytes) registers for data protection of user application data, and the wake-up action from Standby mode or system reset do not affect these registers. The BKP registers are listed in chapter [3.3.1](#), the BKP firmware functions are introduced in chapter [3.3.2](#).

3.3.1. Descriptions of Peripheral registers

BKP registers are listed in the table shown as below:

Table 3-38. BKP Registers

Registers	Descriptions
BKP_DATAx ($x=0..41$)	Backup BKP register
BKP_OCTL	RTC signal output control register
BKP_TPCTL	Tamper pin control register
BKP_TPCS	Tamper control and status register

3.3.2. Descriptions of Peripheral functions

BKP firmware functions are listed in the table shown as below:

Table 3-39. BKP firmware function

Function name	Function description
bkp_deinit	reset data registers
bkp_data_w rite	w rite data register
bkp_data_read	read data register
bkp_RTC_calibration_output_enable	enable RTC clock calibration output
bkp_RTC_calibration_output_disable	disable RTC clock calibration output
bkp_RTC_signal_output_enable	enable RTC alarm or second signal output
bkp_RTC_signal_output_disable	disable RTC alarm or second signal output
bkp_RTC_output_select	select RTC output, the RTC output can be select as alarm pulse or second pulse
bkp_RTC_calibration_value_set	set RTC clock calibration value
bkp_tamper_detection_enable	enable tamper detection
bkp_tamper_detection_disable	disable tamper detection
bkp_tamper_active_level_set	set tamper pin active level
bkp_interrupt_enable	enable tamper interrupt
bkp_interrupt_disable	disable tamper interrupt
bkp_flag_get	get bkp flag state
bkp_flag_clear	clear bkp flag state

Function name	Function description
bkp_interrupt_flag_get	get bkp interrupt flag state
bkp_interrupt_flag_clear	clear bkp interrupt flag state

Enum bkp_data_register_enum

Table 3-40. Enum bkp_data_register_enum

Member name	Function description
BKP_DATA_0	bkp data register number 0
BKP_DATA_1	bkp data register number 1
BKP_DATA_2	bkp data register number 2
BKP_DATA_3	bkp data register number 3
BKP_DATA_4	bkp data register number 4
BKP_DATA_5	bkp data register number 5
BKP_DATA_6	bkp data register number 6
BKP_DATA_7	bkp data register number 7
BKP_DATA_8	bkp data register number 8
BKP_DATA_9	bkp data register number 9
BKP_DATA_10	bkp data register number 10
BKP_DATA_11	bkp data register number 11
BKP_DATA_12	bkp data register number 12
BKP_DATA_13	bkp data register number 13
BKP_DATA_14	bkp data register number 14
BKP_DATA_15	bkp data register number 15
BKP_DATA_16	bkp data register number 16
BKP_DATA_17	bkp data register number 17
BKP_DATA_18	bkp data register number 18
BKP_DATA_19	bkp data register number 19
BKP_DATA_20	bkp data register number 20
BKP_DATA_21	bkp data register number 21
BKP_DATA_22	bkp data register number 22
BKP_DATA_23	bkp data register number 23
BKP_DATA_24	bkp data register number 24
BKP_DATA_25	bkp data register number 25
BKP_DATA_26	bkp data register number 26
BKP_DATA_27	bkp data register number 27
BKP_DATA_28	bkp data register number 28
BKP_DATA_29	bkp data register number 29
BKP_DATA_30	bkp data register number 30
BKP_DATA_31	bkp data register number 31
BKP_DATA_32	bkp data register number 32
BKP_DATA_33	bkp data register number 33
BKP_DATA_34	bkp data register number 34

Member name	Function description
BKP_DATA_35	bkp data register number 35
BKP_DATA_36	bkp data register number 36
BKP_DATA_37	bkp data register number 37
BKP_DATA_38	bkp data register number 38
BKP_DATA_39	bkp data register number 39
BKP_DATA_40	bkp data register number 40
BKP_DATA_41	bkp data register number 41

bkp_deinit

The description of bkp_deinit is shown as below:

Table 3-41. Function bkp_deinit

Function name	bkp_deinit
Function prototype	void bkp_deinit(void);
Function descriptions	reset BKP registers
Precondition	-
The called functions	rcu_bkp_reset_enable / rcu_bkp_reset_disable
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset BKP registers */
bkp_deinit();
```

bkp_data_write

The description of bkp_data_write is shown as below:

Table 3-42. Function bkp_data_write

Function name	bkp_data_w rite
Function prototype	void bkp_data_w rite(bkp_data_register_enum register_number, uint16_t data);
Function descriptions	w rite data register
Precondition	-
The called functions	-
Input parameter{in}	
register_number	refer to Table 3-40. Enum bkp_data_register_enum
BKP_DATA_x(x =	bkp data register number x

0..41)	
Input parameter{in}	
data	the data to be write in BKP data register
0-0xffff	data value
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* write BKP data register */
bkp_data_write(BKP_DATA_0, 0x1226);
```

bkp_data_read

The description of bkp_data_read is shown as below:

Table 3-43. Function bkp_data_read

Function name	bkp_data_read
Function prototype	uint16_t bkp_data_read(bkp_data_register_enum register_number);
Function descriptions	read data register
Precondition	-
The called functions	-
Input parameter{in}	
register_number	refer to Table 3-40. Enum bkp_data_register enum
BKP_DATA_x(x = 0..41)	bkp data register number x
Output parameter{out}	
-	-
Return value	
uint16_t	0-0xffff

Example:

```
/* read BKP data register */
uint16_t data;
data = bkp_data_read(BKP_DATA_0);
```

bkp_rtc_calibration_output_enable

The description of bkp_rtc_calibration_output_enable is shown as below:

Table 3-44. Function bkp_rtc_calibration_output_enable

Function name	bkp_rtc_calibration_output_enable
---------------	-----------------------------------

Function prototype	void bkp_rtc_calibration_output_enable(void);
Function descriptions	enable RTC clock calibration output
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable RTC clock calibration output */
bkp_rtc_calibration_output_enable();
```

bkp_rtc_calibration_output_disable

The description of bkp_rtc_calibration_output_disable is shown as below:

Table 3-45. Function bkp_rtc_calibration_output_disable

Function name	bkp_rtc_calibration_output_disable
Function prototype	void bkp_rtc_calibration_output_disable(void);
Function descriptions	disable RTC clock calibration output
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable RTC clock calibration output */
bkp_rtc_calibration_output_disable();
```

bkp_rtc_signal_output_enable

The description of bkp_rtc_signal_output_enable is shown as below:

Table 3-46. Function bkp_rtc_signal_output_enable

Function name	bkp_rtc_signal_output_enable
Function prototype	void bkp_rtc_signal_output_enable (void);
Function descriptions	enable RTC alarm or second signal output

Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable RTC alarm or second signal output */
bkp_rtc_signal_output_enable();
```

bkp_rtc_signal_output_disable

The description of bkp_rtc_signal_output_disable is shown as below:

Table 3-47. Function bkp_rtc_signal_output_disable

Function name	bkp_rtc_signal_output_disable
Function prototype	void bkp_rtc_signal_output_disable (void);
Function descriptions	disable RTC alarm or second signal output
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable RTC alarm or second signal output */
bkp_rtc_signal_output_disable();
```

bkp_rtc_output_select

The description of bkp_rtc_output_select is shown as below:

Table 3-48. Function bkp_rtc_output_select

Function name	bkp_rtc_output_select
Function prototype	void bkp_rtc_output_select (uint16_t outputsel);
Function descriptions	select RTC output, the RTC output can be select as alarm pulse or second pulse
Precondition	-

The called functions	-
Input parameter{in}	
outputsel	RTC output selection
<i>RTC_OUTPUT_ALARM_PULSE</i>	RTC alarm pulse is selected as the RTC output
<i>RTC_OUTPUT_SECOND_PULSE</i>	RTC second pulse is selected as the RTC output
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* select RTC output alarm signal output */
bkp_rtc_output_select(RTC_OUTPUT_ALARM_PULSE);
```

bkp_rtc_calibration_value_set

The description of bkp_rtc_calibration_value_set is shown as below:

Table 3-49. Function bkp_rtc_calibration_value_set

Function name	bkp_rtc_calibration_value_set
Function prototype	void bkp_rtc_calibration_value_set(uint8_t value);
Function descriptions	set RTC clock calibration value
Precondition	-
The called functions	-
Input parameter{in}	
value	RTC clock calibration value
0x00 - 0x7F	value
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set RTC clock calibration value */
bkp_rtc_calibration_value_set(0x7f);
```

bkp_tamper_detection_enable

The description of bkp_tamper_detection_enable is shown as below:

Table 3-50. Function bkp_tamper_detection_enable

Function name	bkp_tamper_detection_enable
----------------------	-----------------------------

Function prototype	void bkp_tamper_detection_enable (void);
Function descriptions	enable tamper detection
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable tamper pin detection */
bkp_tamper_detection_enable();
```

bkp_tamper_detection_disable

The description of bkp_tamper_detection_disable is shown as below:

Table 3-51. Function bkp_tamper_detection_disable

Function name	bkp_tamper_detection_disable
Function prototype	void bkp_tamper_detection_disable (void);
Function descriptions	disable tamper detection
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable tamper pin detection */
bkp_tamper_detection_disable();
```

bkp_tamper_active_level_set

The description of bkp_tamper_active_level_set is shown as below:

Table 3-52. Function bkp_tamper_active_level_set

Function name	bkp_tamper_active_level_set
Function prototype	void bkp_tamper_active_level_set (uint16_t level);
Function descriptions	set tamper pin active level

Precondition	-
The called functions	-
Input parameter{in}	
level	tamper pin active level
<i>TAMPER_PIN_ACTIVE_HIGH</i>	the tamper pin is active high
<i>TAMPER_PIN_ACTIVE_LOW</i>	the tamper pin is active low
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set tamper pin active level high */
bkp_tamper_active_level_set(TAMPER_PIN_ACTIVE_HIGH);
```

bkp_interrupt_enable

The description of bkp_interrupt_enable is shown as below:

Table 3-53. Function bkp_interrupt_enable

Function name	bkp_interrupt_enable
Function prototype	void bkp_interrupt_enable (void);
Function descriptions	enable tamper interrupt
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable tamper pin interrupt */
bkp_interrupt_enable();
```

bkp_interrupt_disable

The description of bkp_interrupt_disable is shown as below:

Table 3-54. Function bkp_interrupt_disable

Function name	bkp_interrupt_disable
----------------------	-----------------------

Function prototype	void bkp_interrupt_disable (void);
Function descriptions	disable tamper interrupt
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable tamper pin interrupt */
bkp_interrupt_disable();
```

bkp_flag_get

The description of bkp_flag_get is shown as below:

Table 3-55. Function bkp_flag_get

Function name	bkp_flag_get
Function prototype	FlagStatus bkp_flag_get(void);
Function descriptions	get bkp flag state
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get BKP flag state */
FlagStatus status;
status = bkp_flag_get();
```

bkp_flag_clear

The description of bkp_flag_clear is shown as below:

Table 3-56. Function bkp_flag_clear

Function name	bkp_flag_clear
----------------------	----------------

Function prototype	void bkp_flag_clear(void);
Function descriptions	clear bkp flag state
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear BKP flag state */
bkp_flag_clear();
```

bkp_interrupt_flag_get

The description of bkp_interrupt_flag_get is shown as below:

Table 3-57. Function bkp_interrupt_flag_get

Function name	bkp_interrupt_flag_get
Function prototype	FlagStatus bkp_interrupt_flag_get(void);
Function descriptions	get bkp interrupt flag state
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get BKP interrupt flag state */
bkp_interrupt_flag_get();
```

bkp_interrupt_flag_clear

The description of bkp_interrupt_flag_clear is shown as below:

Table 3-58. Function bkp_interrupt_flag_clear

Function name	bkp_interrupt_flag_clear
Function prototype	void bkp_interrupt_flag_clear(void);
Function descriptions	clear bkp interrupt flag state

Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear BKP interrupt flag state */

bkp_interrupt_flag_clear();
```

3.4. CAN

CAN bus (for Controller Area Network) is a bus standard designed to allow microcontrollers and devices to communicate with each other without a host computer. The CAN registers are listed in chapter [3.4.1](#), the CAN firmware functions are introduced in chapter [3.4.2](#).

3.4.1. Descriptions of Peripheral registers

CAN registers are listed in the table shown as below:

Table 3-59. CAN Registers

Registers	Descriptions
CAN_CTL	Control register
CAN_STAT	Status register
CAN_TSTAT	Transmit status register
CAN_RFIFO0	Receive message FIFO0 register
CAN_RFIFO1	Receive message FIFO1 register
CAN_INTEN	Interrupt enable register
CAN_ERR	Error register
CAN_BT	Bit timing register
CAN_TMIx	Transmit mailbox identifier register
CAN_TMPx	Transmit mailbox property register
CAN_TMDATA0x	Transmit mailbox data0 register
CAN_TMDATA1x	Transmit mailbox data1 register
CAN_RFIFOMIx	Receive FIFO mailbox identifier register
CAN_RFIFOMPx	Receive FIFO mailbox property register
CAN_RFIFODAT A0x	Receive FIFO mailbox data0 register
CAN_RFIFODAT	Receive FIFO mailbox data1 register

Registers	Descriptions
A1x	
CAN_FCTL	Filter control register
CAN_FMCFG	Filter mode configuration register
CAN_FSCFG	Filter scale configuration register
CAN_FA FIFO	Filter associated FIFO register
CAN_FW	Filter working register
CAN_FxDATAy	Filter x data y register

3.4.2. Descriptions of Peripheral functions

CAN firmware functions are listed in the table shown as below:

Table 3-60. CAN firmware function

Function name	Function description
can_deinit	deinitialize CAN
can_struct_para_init	initialize CAN struct
can_init	initialize CAN
can_filter_init	CAN filter initialize
can1_filter_start_bank	set can1 filter start bank number
can_debug_freeze_enable	CAN debug freeze enable
can_debug_freeze_disable	CAN debug freeze disable
can_time_trigger_mode_enable	CAN time trigger mode enable
can_time_trigger_mode_disable	CAN time trigger mode disable
can_message_transmit	transmit CAN message
can_transmit_states	get CAN transmit state
can_transmission_stop	stop CAN transmission
can_message_receive	CAN receive message
can_fifo_release	CAN release fifo
can_receive_message_length_get	CAN receive message length
can_working_mode_set	CAN working mode
can_wakeup	CAN wakeup from sleep mode
can_error_get	CAN get error
can_receive_error_number_get	get CAN receive error number
can_transmit_error_number_get	get CAN transmit error number
can_interrupt_enable	CAN interrupt enable
can_interrupt_disable	CAN interrupt disable
can_flag_get	CAN get flag state
can_flag_clear	CAN clear flag state
can_interrupt_flag_get	CAN get interrupt flag state
can_interrupt_flag_clear	CAN clear interrupt flag state

Structure can_parameter_struct

Table 3-61. can_parameter_struct

Member name	Function description
w orking_mode	CAN w orking mode
resync_jump_w idth	CAN resynchronization jump w idth
time_segment_1	time segment 1
time_segment_2	time segment 2
time_triggered	time triggered communication mode
auto_bus_off_recov ery	automatic bus-off recovery
auto_w ake_up	automatic w ake-up mode
no_auto_retrans	automatic retransmission mode disable
rec_fifo_overw rite	receive FIFO overw rite mode
trans_fifo_order	transmit FIFO order
prescaler	baudrate prescaler

Structure can_trasnmit_message_struct

Table 3-62. can_trasnmit_message_struct

Member name	Function description
tx_sfid	standard format frame identifier
tx_efid	extended format frame identifier
tx_ff	format of frame, standard or extended format
tx_ft	type of frame, data or remote
tx_dlen	data length
tx_data[8]	transmit data

Structure can_receive_message_struct

Table 3-63. can_receive_message_struct

Member name	Function description
rx_sfid	standard format frame identifier
rx_efid	extended format frame identifier
rx_ff	format of frame, standard or extended format
rx_ft	type of frame, data or remote
rx_dlen	data length
rx_data[8]	receive data
rx_fi	filtering index

Structure can_filter_parameter_struct

Table 3-64. can_filter_parameter_struct

Member name	Function description
filter_list_high	filter list number high bits
filter_list_low	filter list number low bits
filter_mask_high	filter mask number high bits
filter_mask_low	filter mask number low bits
filter_fifo_number	receive FIFO associated with the filter
filter_number	filter number
filter_mode	filter mode, list or mask
filter_bits	filter scale
filter_enable	filter work or not

Enum can_flag_enum

Table 3-65. can_flag_enum

Member name	Function description
CAN_FLAG_RXL	RX level
CAN_FLAG_LASTRX	last sample value of RX pin
CAN_FLAG_RS	receiving state
CAN_FLAG_TS	transmitting state
CAN_FLAG_SLPIF	status change flag of entering sleep working mode
CAN_FLAG_WUIF	status change flag of wakeup from sleep working mode
CAN_FLAG_ERRIF	error flag
CAN_FLAG_SLPWS	sleep working state
CAN_FLAG_IWS	initial working state
CAN_FLAG_TMLS2	transmit mailbox 2 last sending in Tx FIFO
CAN_FLAG_TMLS1	transmit mailbox 1 last sending in Tx FIFO
CAN_FLAG_TMLS0	transmit mailbox 0 last sending in Tx FIFO
CAN_FLAG_TME2	transmit mailbox 2 empty
CAN_FLAG_TME1	transmit mailbox 1 empty
CAN_FLAG_TME0	transmit mailbox 0 empty
CAN_FLAG_MTE2	mailbox 2 transmit error
CAN_FLAG_MTE1	mailbox 1 transmit error
CAN_FLAG_MTE0	mailbox 0 transmit error
CAN_FLAG_MAL2	mailbox 2 arbitration lost
CAN_FLAG_MAL1	mailbox 1 arbitration lost
CAN_FLAG_MAL0	mailbox 0 arbitration lost
CAN_FLAG_MTFNERR2	mailbox 2 transmit finished with no error
CAN_FLAG_MTFNERR1	mailbox 1 transmit finished with no error
CAN_FLAG_MTFNERR0	mailbox 0 transmit finished with no error
CAN_FLAG_MTF2	mailbox 2 transmit finished

Member name	Function description
CAN_FLAG_MTF1	mailbox 1 transmit finished
CAN_FLAG_MTF0	mailbox 0 transmit finished
CAN_FLAG_RF00	receive FIFO0 overfull
CAN_FLAG_RFF0	receive FIFO0 full
CAN_FLAG_RF01	receive FIFO1 overfull
CAN_FLAG_RFF1	receive FIFO1 full
CAN_FLAG_BOERR	bus-off error
CAN_FLAG_PERR	passive error
CAN_FLAG_WERR	w arning error

Enum can_interrupt_flag_enum

Table 3-66. can_interrupt_flag_enum

Member name	Function description
CAN_INT_FLAG_SLPIF	status change interrupt flag of sleep w orking mode entering
CAN_INT_FLAG_WUIF	status change interrupt flag of w akup from sleep w orking mode
CAN_INT_FLAG_ERRIF	error interrupt flag
CAN_INT_FLAG_MTF2	mailbox 2 transmit finished interrupt flag
CAN_INT_FLAG_MTF1	mailbox 1 transmit finished interrupt flag
CAN_INT_FLAG_MTF0	mailbox 0 transmit finished interrupt flag
CAN_INT_FLAG_RF00	receive FIFO0 overfull interrupt flag
CAN_INT_FLAG_RFF0	receive FIFO0 full interrupt flag
CAN_INT_FLAG_RFL0	receive FIFO0 not empty interrupt flag
CAN_INT_FLAG_RF01	receive FIFO1 overfull interrupt flag
CAN_INT_FLAG_RFF1	receive FIFO1 full interrupt flag
CAN_INT_FLAG_RFL1	receive FIFO1 not empty interrupt flag
CAN_INT_FLAG_ERRN	error number interrupt flag
CAN_INT_FLAG_BOERR	bus-off error interrupt flag
CAN_INT_FLAG_PERR	passive error interrupt flag
CAN_INT_FLAG_WERR	w arning error interrupt flag

Enum can_error_enum

Table 3-67. can_error_enum

Member name	Function description
CAN_ERROR_NONE	no error
CAN_ERROR_FILL	fill error
CAN_ERROR_FORMATE	format error
CAN_ERROR_ACK	ACK error
CAN_ERROR_BITRECESSIVE	bit recessive error
CAN_ERROR_BITDOMINANTER	bit dominant error
CAN_ERROR_CRC	CRC error

Member name	Function description
CAN_ERROR_SOFTWARECFG	software configure

Enum can_transmit_state_enum

Table 3-68. can_transmit_state_enum

Member name	Function description
CAN_TRANSMIT_FAILED	CAN transmitted failure
CAN_TRANSMIT_OK	CAN transmitted success
CAN_TRANSMIT_PENDING	CAN transmitted pending
CAN_TRANSMIT_NO_MAILBOX	no empty mailbox to be used for CAN

Enum can_struct_type_enum

Table 3-69. can_struct_type_enum

Member name	Function description
CAN_INIT_STRUCT	CAN initialize parameters struct
CAN_FILTER_STRUCT	CAN filter parameters struct
CAN_TX_MESSAGE_STRUCT	CAN transmit message struct
CAN_RX_MESSAGE_STRUCT	CAN receive message struct

can_deinit

The description of can_deinit is shown as below:

Table 3-70. Function can_deinit

Function name	can_deinit
Function prototype	void can_deinit(uint32_t can_periph);
Function descriptions	deinitialize CAN
Precondition	-
The called functions	rcu_periph_reset_enable/ rcu_periph_reset_disable
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* CAN0 deinitialize */
```

```
can_deinit(CAN0);
```

can_struct_para_init

The description of can_struct_para_init is shown as below:

Table 3-71. Function can_struct_para_init

Function name	can_struct_para_init
Function prototype	void can_struct_para_init(can_struct_type_enum type, void* p_struct)
Function descriptions	initialize CAN parameter struct with a default value
Precondition	-
The called functions	-
Input parameter{in}	
type	Struct refer to Table 3-69. can_struct_type enum
CAN_INIT_STRUCT	CAN initilaze parameters struct
CAN_FILTER_STRUCT T	CAN filter parameters struct
CAN_TX_MESSAGE_STRUCT	CAN transmit message struct
CAN_RX_MESSAGE_STRUCT	CAN receive message struct
Input parameter{in}	
p_struct	the pointer of the specific struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* CAN parameter initialize */
can_init(CAN_INIT_STRUCT, &can_parameter);
```

can_init

The description of can_init is shown as below:

Table 3-72. Function can_init

Function name	can_init
Function prototype	ErrStatus can_init(uint32_t can_periph, can_parameter_struct* can_parameter_init);
Function descriptions	initialize CAN
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL

Input parameter{in}	
can_parameter_init	CAN parameter initialization stuct, the structure members can refer to members of the structure Table 3-61. can_parameter_struct
Output parameter{out}	
-	-
Return value	
ErrStatus	SUCCESS / ERROR

Example:

```
/* CAN0 initialize*/

can_parameter_struct can_parameter;
can_init(CAN0, &can_parameter);
```

can_filter_init

The description of can_filter_init is shown as below:

Table 3-73. Function can_filter_init

Function name	can_filter_init
Function prototype	void can_filter_init(can_filter_parameter_struct* can_filter_parameter_init);
Function descriptions	initialize CAN filter
Precondition	-
The called functions	-
Input parameter{in}	
can_filter_parameter_init	CAN filter initialization stuct, the structure members can refer to members of the structure Table 3-64. can_filter_parameter_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* initialize CAN filter */

can_filter_parameter_struct can_filter;
can_filter_init(&can_filter);
```

can1_filter_start_bank

The description of can1_filter_start_bank is shown as below:

Table 3-74. Function can1_filter_start_bank

Function name	can1_filter_start_bank
Function prototype	void can1_filter_start_bank(uint8_t start_bank);

Function descriptions	set CAN1 filter start bank number
Precondition	-
The called functions	-
Input parameter{in}	
start_bank	CAN1 start bank number
1.27	start number
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set CAN1 filter start bank number 15*/
can1_filter_start_bank(15);
```

can_debug_freeze_enable

The description of can_debug_freeze_enable is shown as below:

Table 3-75. Function can_debug_freeze_enable

Function name	can_debug_freeze_enable
Function prototype	void can_debug_freeze_enable(uint32_t can_periph);
Function descriptions	enable CAN debug freeze
Precondition	-
The called functions	dbg_periph_enable
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable CAN0 debug freeze */
can_debug_freeze_enable(CAN0);
```

can_debug_freeze_disable

The description of can_debug_freeze_disable is shown as below:

Table 3-76. Function can_debug_freeze_disable

Function name	can_debug_freeze_disable
Function prototype	void can_debug_freeze_disable(uint32_t can_periph);

Function descriptions	disable CAN debug freeze
Precondition	-
The called functions	dbg_periph_disable
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable CAN0 debug freeze */

can_debug_freeze_disable(CAN0);
```

can_time_trigger_mode_enable

The description of can_time_trigger_mode_enable is shown as below:

Table 3-77. Function can_time_trigger_mode_enable

Function name	can_time_trigger_mode_enable
Function prototype	void can_time_trigger_mode_enable(uint32_t can_periph);
Function descriptions	enable CAN time trigger mode
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable CAN0 time trigger mode */

can_time_trigger_mode_enable(CAN0);
```

can_time_trigger_mode_disable

The description of can_time_trigger_mode_disable is shown as below:

Table 3-78. Function can_time_trigger_mode_disable

Function name	can_time_trigger_mode_disable
Function prototype	void can_time_trigger_mode_disable(uint32_t can_periph);

Function descriptions	disable CAN time trigger mode
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable CAN0 time trigger mode */
can_time_trigger_mode_disable(CAN0);
```

can_message_transmit

The description of can_message_transmit is shown as below:

Table 3-79. Function can_message_transmit

Function name	can_message_transmit
Function prototype	uint8_t can_message_transmit(uint32_t can_periph, can_transmit_message_struct* transmit_message);
Function descriptions	transmit CAN message
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
transmit_message	CAN transmit message stuct, the structure members can refer to members of the structure Table 3-62. can_transmit_message_struct
Output parameter{out}	
-	-
Return value	
uint8_t	0x00-0x03

Example:

```
/* CAN0 transmit message and return the mailbox number*/
uint8_t transmit_mailbox = 0;
transmit_mailbox = can_message_transmit(CAN0, &transmit_message);
```

can_transmit_states

The description of can_transmit_states is shown as below:

Table 3-80. Function can_transmit_states

Function name	can_transmit_states
Function prototype	can_transmit_state_enum can_transmit_states(uint32_t can_periph, uint8_t mailbox_number);
Function descriptions	get CAN transmit state
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
mailbox_number	Mailbox number
CAN_MAILBOXx(x=0,1,2)	CAN_MAILBOXx
Output parameter{out}	
-	-
Return value	
can_transmit_state_enum	Refer to Table 3-68. can_transmit_state enum

Example:

```
/* CAN0 mailbox0 transmit state */

can_transmit_state_enum transmit_state = CAN_TRANSMIT_FAILED;

transmit_state = can_transmit_states(CAN0, CAN_MAILBOX0);
```

can_transmission_stop

The description of can_transmission_stop is shown as below:

Table 3-81. Function can_transmission_stop

Function name	can_transmission_stop
Function prototype	void can_transmission_stop(uint32_t can_periph, uint8_t mailbox_number);
Function descriptions	stop CAN transmission
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	

mailbox_number	Mailbox number
CAN_MAILBOXx(x=0,1, 2)	CAN_MAILBOXx
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* stop CAN0 mailbox0 transmission */

can_transmission_stop(CAN0, CAN_MAILBOX0);
```

can_message_receive

The description of can_message_receive is shown as below:

Table 3-82. Function can_message_receive

Function name	can_message_receive
Function prototype	void can_message_receive(uint32_t can_periph, uint8_t fifo_number, can_receive_message_struct* receive_message);
Function descriptions	CAN receive message
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
fifo_number	Fifo number
CAN_FIFOx(x=0,1)	CAN_FIFOx
Input parameter{in}	
receive_message	CAN message receive struct, the structure members can refer to members of the structure Table 3-63. can_receive_message_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* CAN0 FIFO0 receive message */

can_message_receive(CAN0, CAN_FIFO0, &receive_message);
```

can_fifo_release

The description of can_fifo_release is shown as below:

Table 3-83. Function can_fifo_release

Function name	can_fifo_release
Function prototype	void can_fifo_release(uint32_t can_periph, uint8_t fifo_number);
Function descriptions	release FIFO0
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
fifo_number	Fifo number
CAN_FIFOx(x=0,1)	CAN_FIFOx
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* CAN0 release FIFO0*/
can_fifo_release(CAN0,CAN_FIFO0);
```

can_receive_message_length_get

The description of can_receive_message_length_get is shown as below:

Table 3-84. Function can_receive_message_length_get

Function name	can_receive_message_length_get
Function prototype	uint8_t can_receive_message_length_get(uint32_t can_periph, uint8_t fifo_number);
Function descriptions	CAN receive message length
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
fifo_number	Fifo number
CAN_FIFOx(x=0,1)	CAN_FIFOx
Output parameter{out}	
-	-

Return value	
uint8_t	0..3

Example:

```
/* CAN0 FIFO0 receive message length */
uint8_t frame_number = 0;
frame_number = can_receive_message_length_get(CAN0, CAN_FIFO0);
```

can_working_mode_set

The description of can_working_mode_set is shown as below:

Table 3-85. Function can_working_mode_set

Function name	can_working_mode_set
Function prototype	ErrStatus can_working_mode_set(uint32_t can_periph, uint8_t working_mode);
Function descriptions	set CAN working mode
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
can_working_mode	Mode select
CAN_MODE_INITIALIZE	Initialize mode
CAN_MODE_NORMAL	Normal mode
CAN_MODE_SLEEP	Sleep mode
Output parameter{out}	
-	-
Return value	
ErrStatus	SUCCESS / ERROR

Example:

```
/* set CAN0 working at initialize mode */
can_working_mode_set(CAN0, CAN_MODE_INITIALIZE);
```

can_wakeup

The description of can_wakeup is shown as below:

Table 3-86. Function can_wakeup

Function name	can_wakeup
---------------	------------

Function prototype	ErrStatus can_wakeup(uint32_t can_periph);
Function descriptions	wake up CAN
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Output parameter{out}	
-	-
Return value	
ErrStatus	SUCCESS / ERROR

Example:

```
/* wake up CAN0 */
can_wakeup(CAN0);
```

can_error_get

The description of can_error_get is shown as below:

Table 3-87. Function can_error_get

Function name	can_error_get
Function prototype	can_error_enum can_error_get(uint32_t can_periph);
Function descriptions	get CAN error type
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Output parameter{out}	
-	-
Return value	
can_error_enum	Refer to Table 3-67. can_error_enum

Example:

```
/* get CAN0 error type */
can_error_enum err_type;
err_type = can_error_get(CAN0);
```

can_receive_error_number_get

The description of can_receive_error_number_get is shown as below:

Table 3-88. Function can_receive_error_number_get

Function name	can_receive_error_number_get
Function prototype	uint8_t can_receive_error_number_get(uint32_t can_periph);
Function descriptions	get CAN receive error number
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Output parameter{out}	
-	-
Return value	
uint8_t	0..255

Example:

```
/* get CAN0 receive error number */

uint8_t error_num;

error_num = can_receive_error_number_get(CAN0);
```

can_transmit_error_number_get

The description of can_transmit_error_number_get is shown as below:

Table 3-89. Function can_transmit_error_number_get

Function name	can_transmit_error_number_get
Function prototype	uint8_t can_transmit_error_number_get(uint32_t can_periph);
Function descriptions	get CAN transmit error number
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Output parameter{out}	
-	-
Return value	
uint8_t	0..255

Example:

```
/* get CAN0 transmit error number */

uint8_t error_num;

error_num = can_transmit_error_number_get(CAN0);
```

can_interrupt_enable

The description of can_interrupt_enable is shown as below:

Table 3-90. Function can_interrupt_enable

Function name	can_interrupt_enable
Function prototype	void can_interrupt_enable(uint32_t can_periph, uint32_t interrupt);
Function descriptions	enable CAN interrupt
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
interrupt	Interrupt type
CAN_INT_TME	transmit mailbox empty interrupt enable
CAN_INT_RFNE0	receive FIFO0 not empty interrupt enable
CAN_INT_RFF0	receive FIFO0 full interrupt enable
CAN_INT_RF00	receive FIFO0 overfull interrupt enable
CAN_INT_RFNE1	receive FIFO1 not empty interrupt enable
CAN_INT_RFF1	receive FIFO1 full interrupt enable
CAN_INT_RF01	receive FIFO1 overfull interrupt enable
CAN_INT_WERR	warning error interrupt enable
CAN_INT_PERR	passive error interrupt enable
CAN_INT_BO	bus-off interrupt enable
CAN_INT_ERRN	error number interrupt enable
CAN_INT_ERR	error interrupt enable
CAN_INT_WU	wakeup interrupt enable
CAN_INT_SLPW	sleep working interrupt enable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* CAN0 transmit mailbox empty interrupt enable */
can_interrupt_enable(CAN0, CAN_INT_TME);
```

can_interrupt_disable

The description of can_interrupt_disable is shown as below:

Table 3-91. Function can_interrupt_disable

Function name	can_interrupt_disable
----------------------	-----------------------

Function prototype	void can_interrupt_disable(uint32_t can_periph, uint32_t interrupt);
Function descriptions	disable CAN interrupt
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
interrupt	Interrupt type
CAN_INT_TME	transmit mailbox empty interrupt enable
CAN_INT_RFNE0	receive FIFO0 not empty interrupt enable
CAN_INT_RFF0	receive FIFO0 full interrupt enable
CAN_INT_RFO0	receive FIFO0 overfull interrupt enable
CAN_INT_RFNE1	receive FIFO1 not empty interrupt enable
CAN_INT_RFF1	receive FIFO1 full interrupt enable
CAN_INT_RFO1	receive FIFO1 overfull interrupt enable
CAN_INT_WERR	warning error interrupt enable
CAN_INT_PERR	passive error interrupt enable
CAN_INT_BO	bus-off interrupt enable
CAN_INT_ERRN	error number interrupt enable
CAN_INT_ERR	error interrupt enable
CAN_INT_WU	wakeup interrupt enable
CAN_INT_SLPW	sleep working interrupt enable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* CAN0 transmit mailbox empty interrupt disable */
can_interrupt_disable(CAN0, CAN_INT_TME);
```

can_flag_get

The description of can_flag_get is shown as below:

Table 3-92. Function can_flag_get

Function name	can_flag_get
Function prototype	FlagStatus can_flag_get(uint32_t can_periph, can_flag_enum flag);
Function descriptions	get CAN flag state
Precondition	-
The called functions	-
Input parameter{in}	

<code>can_periph</code>	CAN peripheral
<code>CANx(x=0,1)</code>	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
<code>flag</code>	CAN flags refer to Table 3-65. can_flag_enum
<code>CAN_FLAG_RXL</code>	RX level
<code>CAN_FLAG_LASTRX</code>	last sample value of RX pin
<code>CAN_FLAG_RS</code>	receiving state
<code>CAN_FLAG_TS</code>	transmitting state
<code>CAN_FLAG_SLPIF</code>	status change flag of entering sleep working mode
<code>CAN_FLAG_WUIF</code>	status change flag of wakeup from sleep working mode
<code>CAN_FLAG_ERRIF</code>	error flag
<code>CAN_FLAG_SLPWS</code>	sleep working state
<code>CAN_FLAG_IWS</code>	initial working state
<code>CAN_FLAG_TMLS2</code>	transmit mailbox 2 last sending in Tx FIFO
<code>CAN_FLAG_TMLS1</code>	transmit mailbox 1 last sending in Tx FIFO
<code>CAN_FLAG_TMLS0</code>	transmit mailbox 0 last sending in Tx FIFO
<code>CAN_FLAG_TME2</code>	transmit mailbox 2 empty
<code>CAN_FLAG_TME1</code>	transmit mailbox 1 empty
<code>CAN_FLAG_TME0</code>	transmit mailbox 0 empty
<code>CAN_FLAG_MTE2</code>	mailbox 2 transmit error
<code>CAN_FLAG_MTE1</code>	mailbox 1 transmit error
<code>CAN_FLAG_MTE0</code>	mailbox 0 transmit error
<code>CAN_FLAG_MAL2</code>	mailbox 2 arbitration lost
<code>CAN_FLAG_MAL1</code>	mailbox 1 arbitration lost
<code>CAN_FLAG_MAL0</code>	mailbox 0 arbitration lost
<code>CAN_FLAG_MTFNER R2</code>	mailbox 2 transmit finished with no error
<code>CAN_FLAG_MTFNER R1</code>	mailbox 1 transmit finished with no error
<code>CAN_FLAG_MTFNER R0</code>	mailbox 0 transmit finished with no error
<code>CAN_FLAG_MTF2</code>	mailbox 2 transmit finished
<code>CAN_FLAG_MTF1</code>	mailbox 1 transmit finished
<code>CAN_FLAG_MTF0</code>	mailbox 0 transmit finished
<code>CAN_FLAG_RFO0</code>	receive FIFO0 overfull
<code>CAN_FLAG_RFF0</code>	receive FIFO0 full
<code>CAN_FLAG_RFO1</code>	receive FIFO1 overfull
<code>CAN_FLAG_RFF1</code>	receive FIFO1 full
<code>CAN_FLAG_BOERR</code>	bus-off error
<code>CAN_FLAG_PERR</code>	passive error
<code>CAN_FLAG_WERR</code>	warning error
Output parameter{out}	

-	-
Return value	
FlagStatus	SET / RESET

Example:

```
/* get CAN0 mailbox 0 transmit finished flag */
can_flag_get(CAN0, CAN_FLAG_MTF0);
```

can_flag_clear

The description of can_flag_clear is shown as below:

Table 3-93. Function can_flag_clear

Function name	can_flag_clear
Function prototype	void can_flag_clear(uint32_t can_periph, can_flag_enum flag);
Function descriptions	clear CAN flag state
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
flag	CAN flags refer to Table 3-65. can_flag_enum
CAN_FLAG_SLPIF	status change flag of entering sleep working mode
CAN_FLAG_WUIF	status change flag of wakeup from sleep working mode
CAN_FLAG_ERRIF	error flag
CAN_FLAG_MTE2	mailbox 2 transmit error
CAN_FLAG_MTE1	mailbox 1 transmit error
CAN_FLAG_MTE0	mailbox 0 transmit error
CAN_FLAG_MAL2	mailbox 2 arbitration lost
CAN_FLAG_MAL1	mailbox 1 arbitration lost
CAN_FLAG_MAL0	mailbox 0 arbitration lost
CAN_FLAG_MTFNER R2	mailbox 2 transmit finished with no error
CAN_FLAG_MTFNER R1	mailbox 1 transmit finished with no error
CAN_FLAG_MTFNER R0	mailbox 0 transmit finished with no error
CAN_FLAG_MTF2	mailbox 2 transmit finished
CAN_FLAG_MTF1	mailbox 1 transmit finished
CAN_FLAG_MTF0	mailbox 0 transmit finished
CAN_FLAG_RFO0	receive FIFO0 overfull
CAN_FLAG_RFF0	receive FIFO0 full

CAN_FLAG_RFO1	receive FIFO1 overfull
CAN_FLAG_RFF1	receive FIFO1 full
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear CAN0 mailbox 0 transmit error flag*/
can_flag_clear(CAN0, CAN_FLAG_MTE0);
```

can_interrupt_flag_get

The description of can_interrupt_flag_get is shown as below:

Table 3-94. Function can_interrupt_flag_get

Function name	can_interrupt_flag_get
Function prototype	FlagStatus can_interrupt_flag_get(uint32_t can_periph, can_interrupt_flag_enum flag);
Function descriptions	get CAN interrupt flag state
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
flag	CAN interrupt flags refer to Table 3-66. can_interrupt_flag_enum
CAN_INT_FLAG_SLPI_F	status change interrupt flag of sleep working mode entering
CAN_INT_FLAG_WUIF	status change interrupt flag of wakeup from sleep working mode
CAN_INT_FLAG_ERRI_F	error interrupt flag
CAN_INT_FLAG_MTF2	mailbox 2 transmit finished interrupt flag
CAN_INT_FLAG_MTF1	mailbox 1 transmit finished interrupt flag
CAN_INT_FLAG_MTF0	mailbox 0 transmit finished interrupt flag
CAN_INT_FLAG_RFO0	receive FIFO0 overfull interrupt flag
CAN_INT_FLAG_RFF0	receive FIFO0 full interrupt flag
CAN_INT_FLAG_RFO1	receive FIFO1 overfull interrupt flag
CAN_INT_FLAG_RFF1	receive FIFO1 full interrupt flag
CAN_INT_FLAG_ERR_N	error number interrupt flag
CAN_INT_FLAG_BOE_RR	bus-off error interrupt flag

CAN_INT_FLAG_PER	passive error interrupt flag
R	
CAN_INT_FLAG_WER	w arning error interrupt flag
R	
Output parameter{out}	
-	-
Return value	
FlagStatus	SET / RESET

Example:

```
/* get CAN0 mailbox 0 transmit finished interrupt flag */
```

```
FlagStatus Status;
```

```
Status = can_interrupt_flag_get(CAN0, CAN_INT_FLAG_MTF0);
```

can_interrupt_flag_clear

The description of can_interrupt_flag_clear is shown as below:

Table 3-95. Function can_interrupt_flag_clear

Function name	can_interrupt_flag_clear
Function prototype	void can_interrupt_flag_clear(uint32_t can_periph, can_interrupt_flag_enum flag);
Function descriptions	clear CAN interrupt flag state
Precondition	-
The called functions	-
Input parameter{in}	
can_periph	CAN peripheral
CANx(x=0,1)	CAN peripheral selection, the CAN1 only for GD32F10x_CL
Input parameter{in}	
flag	CAN interrupt flags refer to Table 3-66. can_interrupt_flag_enum
CAN_INT_FLAG_SLPI	status change interrupt flag of sleep w orking mode entering
F	
CAN_INT_FLAG_WUIF	status change interrupt flag of w akcup from sleep w orking mode
CAN_INT_FLAG_ERRI	error interrupt flag
F	
CAN_INT_FLAG_MTF2	mailbox 2 transmit finished interrupt flag
CAN_INT_FLAG_MTF1	mailbox 1 transmit finished interrupt flag
CAN_INT_FLAG_MTF0	mailbox 0 transmit finished interrupt flag
CAN_INT_FLAG_RF00	receive FIFO0 overfull interrupt flag
CAN_INT_FLAG_RFF0	receive FIFO0 full interrupt flag
CAN_INT_FLAG_RF01	receive FIFO1 overfull interrupt flag
CAN_INT_FLAG_RFF1	receive FIFO1 full interrupt flag
Output parameter{out}	

-	-	-
Return value		
-	-	-

Example:

```
/* clear CAN0 mailbox 0 transmit finished interrupt flag */
can_interrupt_flag_clear (CAN0, CAN_INT_FLAG_MTF0);
```

3.5. CRC

A cyclic redundancy check (CRC) is an error-detecting code commonly used in digital networks and storage devices to detect accidental changes to raw data. The CRC registers are listed in chapter [3.5.1](#), the CRC firmware functions are introduced in chapter [3.5.2](#).

3.5.1. Descriptions of Peripheral registers

CRC registers are listed in the table shown as below:

Table 3-96. CRC Registers

Registers	Descriptions
CRC_DATA	CRC data register
CRC_FDATA	CRC free data register
CRC_CTL	CRC control register

3.5.2. Descriptions of Peripheral functions

CRC firmware functions are listed in the table shown as below:

Table 3-97. CRC firmware function

Function name	Function description
crc_deinit	deinit CRC calculation unit
crc_data_register_reset	reset data register to the value of initializaiton data register
crc_data_register_read	read the value of the data register
crc_free_data_register_read	read the value of the free data register
crc_free_data_register_write	w rite data to the free data register
crc_single_data_calculate	calculate the CRC value of a 32-bit data
crc_block_data_calculate	calculate the CRC value of an array of 32-bit values

crc_deinit

The description of crc_deinit is shown as below:

Table 3-98. Function crc_deinit

Function name	crc_deinit

Function prototype	void crc_deinit(void);
Function descriptions	deinit CRC calculation unit
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset crc */
crc_deinit();
```

crc_data_register_reset

The description of `crc_data_register_reset` is shown as below:

Table 3-99. Function `crc_data_register_reset`

Function name	crc_data_register_reset
Function prototype	void crc_data_register_reset(void);
Function descriptions	reset data register to the value of initialaiton data register
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset crc data register */
crc_data_register_reset();
```

crc_data_register_read

The description of `crc_data_register_read` is shown as below:

Table 3-100. Function `crc_data_register_read`

Function name	crc_data_register_read
Function prototype	uint32_t crc_data_register_read(void);
Function descriptions	read the value of the data register

Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint32_t	32-bit value of the data register (0-0xFFFFFFFF)

Example:

```
/* read crc data register */

uint32_t crc_value = 0;

crc_value = crc_data_register_read();
```

crc_free_data_register_read

The description of `crc_free_data_register_read` is shown as below:

Table 3-101. Function `crc_free_data_register_read`

Function name	<code>crc_free_data_register_read</code>
Function prototype	<code>uint8_t crc_free_data_register_read(void);</code>
Function descriptions	read the value of the free data register
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint8_t	8-bit value of the free data register (0-0xFF)

Example:

```
/* read crc free data register */

uint8_t crc_value = 0;

crc_value = crc_free_data_register_read();
```

crc_free_data_register_write

The description of `crc_free_data_register_write` is shown as below:

Table 3-102. Function `crc_free_data_register_write`

Function name	<code>crc_free_data_register_w rite</code>
Function prototype	<code>void crc_free_data_register_w rite(uint8_t free_data);</code>

Function descriptions	w rite data to the free data register
Precondition	-
The called functions	-
Input parameter{in}	
free_data	specify 8-bit data
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* write the free data register */

crc_free_data_register_write(0x11);
```

crc_single_data_calculate

The description of **crc_single_data_calculate** is shown as below:

Table 3-103. Function crc_single_data_calculate

Function name	crc_single_data_calculate
Function prototype	uint32_t crc_single_data_calculate(uint32_t sdata);
Function descriptions	calculate the CRC value of a 32-bit data
Precondition	-
The called functions	-
Input parameter{in}	
sdata	specify 32-bit data
Output parameter{out}	
-	-
Return value	
uint32_t	32-bit CRC calculate value (0-0xFFFFFFFF)

Example:

```
/* CRC calculate a 32-bit data */

uint32_t val = 0, valcrc = 0;

val = (uint32_t)0xabcd1234;

rcu_periph_clock_enable(RCU_CRC);

valcrc = crc_single_data_calculate(val);
```

crc_block_data_calculate

The description of **crc_block_data_calculate** is shown as below:

Table 3-104. Function crc_block_data_calculate

Function name	crc_block_data_calculate
Function prototype	uint32_t crc_block_data_calculate(uint32_t array[], uint32_t size);
Function descriptions	calculate the CRC value of an array of 32-bit values
Precondition	-
The called functions	-
Input parameter{in}	
array	pointer to an array of 32 bit data words
Input parameter{in}	
size	size of the array
Output parameter{out}	
-	-
Return value	
uint32_t	32-bit CRC calculate value (0-0xFFFFFFFF)

Example:

```
/* CRC calculate a 32-bit data array */

#define BUFFER_SIZE      6

uint32_t valcrc = 0;

static const uint32_t data_buffer[BUFFER_SIZE] = {

0x00001111, 0x00002222, 0x00003333, 0x00004444, 0x00005555, 0x00006666};

rcu_periph_clock_enable(RCU_CRC);

valcrc = crc_block_data_calculate((uint32_t *) data_buffer, BUFFER_SIZE);
```

3.6. DAC

The Digital-to-analog converter converts 12-bit digital data to a voltage on the external pins. The DAC registers are listed in chapter [3.6.1](#) the DAC firmware functions are introduced in chapter [3.6.2](#).

3.6.1. Peripheral register description

DAC registers are listed in the table shown as below:

Table 3-105. DAC Registers

Register	Descriptions
DAC_CTL0	DACx control register 0
DAC_SWT	DACx software trigger register
DAC_OUT0_R12DH	DACx_OUT0 12-bit right-aligned data holding register
DAC_OUT0_L12DH	DACx_OUT0 12-bit left-aligned data holding register

Register	Descriptions
DAC_OUT0_R8DH	DACx_OUT0 8-bit right-aligned data holding register
DAC_OUT1_R12DH	DACx_OUT1 12-bit right-aligned data holding register
DAC_OUT1_L12DH	DACx_OUT1 12-bit left-aligned data holding register
DAC_OUT1_R8DH	DACx_OUT1 8-bit right-aligned data holding register
DACC_R12DH	DACx concurrent mode 12-bit right-aligned data holding register
DACC_L12DH	DACx concurrent mode 12-bit left-aligned data holding register
DACC_R8DH	DACx concurrent mode 8-bit right-aligned data holding register
DAC_OUT0_DO	DACx_OUT0 data output register
DAC_OUT1_DO	DACx_OUT1 data output register

3.6.2. Descriptions of Peripheral functions

DAC firmware functions are listed in the table shown as below:

Table 3-106. DAC firmware functions

Function name	Function description
dac_deinit	deinitialize DAC
dac_enable	enable DAC
dac_disable	disable DAC
dac_dma_enable	enable DAC DMA function
dac_dma_disable	disable DAC DMA function
dac_output_buffer_enable	enable DAC output buffer
dac_output_buffer_disable	disable DAC output buffer
dac_output_value_get	get DAC output value
dac_data_set	set DAC data holding register value
dac_trigger_enable	enable DAC trigger
dac_trigger_disable	disable DAC trigger
dac_trigger_source_config	configure DAC trigger source
dac_softw are_trigger_enable	enable DAC softw are trigger
dac_w ave_mode_config	configure DAC w ave mode
dac_lfsr_noise_config	configure DAC LFSR noise mode
dac_triangle_noise_config	configure DAC triangle noise mode
dac_concurrent_enable	enable DAC concurrent mode
dac_concurrent_disable	disable DAC concurrent mode
dac_concurrent_softw are_trigger _enable	enable DAC concurrent softw are trigger
dac_concurrent_output_buffer_enable	enable DAC concurrent buffer function
dac_concurrent_output_buffer_disable	disable DAC concurrent buffer function
dac_concurrent_data_set	set DAC concurrent mode data holding register value

dac_deinit

The description of dac_deinit is shown as below:

Table 3-107. Function dac_deinit

Function name	dac_deinit
Function prototype	void dac_deinit(uint32_t dac_periph);
Function descriptions	deinitialize DAC
Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection(x = 0)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* deinitialize DAC0 */

dac_deinit(DAC0);
```

dac_enable

The description of dac_enable is shown as below:

Table 3-108. Function dac_enable

Function name	dac_enable
Function prototype	void dac_enable(uint32_t dac_periph, uint8_t dac_out);
Function descriptions	enable DAC
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection(x = 0)
Input parameter{in}	
dac_out	DAC output
DAC_OUTx	DAC output channel selection(x = 0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable DAC0_OUT0 */

dac_enable(DAC0, DAC_OUT0);
```

dac_disable

The description of dac_disable is shown as below:

Table 3-109. Function dac_disable

Function name	dac_disable
Function prototype	void dac_disable(uint32_t dac_periph, uint8_t dac_out);
Function descriptions	disable DAC
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection (x = 0)
Input parameter{in}	
dac_out	DAC output
DAC_OUTx	DAC output channel selection (x = 0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable DAC0_OUT0 */
dac_disable(DAC0, DAC_OUT0);
```

dac_dma_enable

The description of dac_dma_enable is shown as below:

Table 3-110. Function dac_dma_enable

Function name	dac_dma_enable
Function prototype	void dac_dma_enable(uint32_t dac_periph, uint8_t dac_out);
Function descriptions	enable DAC DMA function
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection (x = 0)
Input parameter{in}	
dac_out	DAC output
DAC_OUTx	DAC output channel selection (x = 0,1)
Output parameter{out}	
-	-
Return value	

-	-
---	---

Example:

```
/* enable DAC0_OUT0 DMA function */
dac_dma_enable(DAC0, DAC_OUT0);
```

dac_dma_disable

The description of `dac_dma_disable` is shown as below:

Table 3-111. Function `dac_dma_disable`

Function name	dac_dma_disable
Function prototype	void dac_dma_disable(uint32_t dac_periph, uint8_t dac_out);
Function descriptions	disable DAC DMA function
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection(x = 0)
Input parameter{in}	
dac_out	DAC output
DAC_OUTx	DAC output channel selection(x = 0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable DAC0_OUT0 DMA function */
dac_dma_disable(DAC0, DAC_OUT0);
```

dac_output_buffer_enable

The description of `dac_output_buffer_enable` is shown as below:

Table 3-112. Function `dac_output_buffer_enable`

Function name	dac_output_buffer_enable
Function prototype	void dac_output_buffer_enable(uint32_t dac_periph, uint8_t dac_out);
Function descriptions	enable DAC output buffer
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection(x = 0)

Input parameter{in}	
dac_out	DAC output
<i>DAC_OUTx</i>	DAC output channel selection(x = 0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable DAC0_OUT0 output buffer */

dac_output_buffer_enable(DAC0, DAC_OUT0);
```

dac_output_buffer_disable

The description of `dac_output_buffer_disable` is shown as below:

Table 3-113. Function `dac_output_buffer_disable`

Function name	<code>dac_output_buffer_disable</code>
Function prototype	<code>void dac_output_buffer_disable(uint32_t dac_periph, uint8_t dac_out);</code>
Function descriptions	disable DAC output buffer
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
<i>DACx</i>	DAC peripheral selection(x = 0)
Input parameter{in}	
dac_out	DAC output
<i>DAC_OUTx</i>	DAC output channel selection(x = 0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable DAC0_OUT0 output buffer */

dac_output_buffer_disable(DAC0, DAC_OUT0);
```

dac_output_value_get

The description of `dac_output_value_get` is shown as below:

Table 3-114. Function `dac_output_value_get`

Function name	<code>dac_output_value_get</code>
Function prototype	<code>uint16_t dac_output_value_get(uint32_t dac_periph, uint8_t dac_out);</code>

Function descriptions	get DAC output value
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection(x = 0)
Input parameter{in}	
dac_out	DAC output
DAC_OUTx	DAC output channel selection(x = 0,1)
Output parameter{out}	
-	-
Return value	
uint16_t	DAC output data (0~4095)

Example:

```
/* get the DAC0_OUT0 last data output value */
uint16_t data=0;
data = dac_output_value_get(DAC0, DAC_OUT0);
```

dac_data_set

The description of **dac_data_set** is shown as below:

Table 3-115. Function dac_data_set

Function name	dac_data_set
Function prototype	void dac_data_set(uint32_t dac_periph, uint8_t dac_out, uint32_t dac_align, uint16_t data);
Function descriptions	set DAC data holding register value
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection(x = 0)
Input parameter{in}	
dac_out	DAC output
DAC_OUTx	DAC output channel selection(x = 0,1)
Input parameter{in}	
dac_align	DAC data alignment mode
DAC_ALIGN_12B_R	12-bit right-aligned data
DAC_ALIGN_12B_L	12-bit left-aligned data
DAC_ALIGN_8B_R	8-bit right-aligned data
Input parameter{in}	
data	DAC_OUTx data to be loaded (0~4095)

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set DAC0_OUT0 data holding register value */

dac_data_set(DAC0, DAC_OUT0, DAC_ALIGN_8B_R, 0xFF);
```

dac_trigger_enable

The description of dac_trigger_enable is shown as below:

Table 3-116. Function dac_trigger_enable

Function name	dac_trigger_enable
Function prototype	void dac_trigger_enable(uint32_t dac_periph, uint8_t dac_out);
Function descriptions	enable DAC trigger
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection (x = 0)
Input parameter{in}	
dac_out	DAC output
DAC_OUTx	DAC output channel selection (x = 0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable DAC0_OUT0 trigger */

dac_trigger_enable(DAC0, DAC_OUT0);
```

dac_trigger_disable

The description of dac_trigger_disable is shown as below:

Table 3-117. Function dac_trigger_disable

Function name	dac_trigger_disable
Function prototype	void dac_trigger_disable(uint32_t dac_periph, uint8_t dac_out);
Function descriptions	disable DAC trigger
Precondition	-
The called functions	-

Input parameter{in}	
dac_periph	DAC peripheral
<i>DACx</i>	DAC peripheral selection (<i>x</i> = 0)
Input parameter{in}	
dac_out	DAC output
<i>DAC_OUTx</i>	DAC output channel selection (<i>x</i> = 0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable DAC0_OUT0 trigger */
dac_trigger_disable(DAC0, DAC_OUT0);
```

dac_trigger_source_config

The description of **dac_trigger_source_config** is shown as below:

Table 3-118. Function dac_trigger_source_config

Function name	dac_trigger_source_config
Function prototype	void dac_trigger_source_config(uint32_t dac_periph , uint8_t dac_out , uint32_t triggersource);
Function descriptions	configure DAC trigger source
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
<i>DACx</i>	DAC peripheral selection (<i>x</i> = 0)
Input parameter{in}	
dac_out	DAC output
<i>DAC_OUTx</i>	DAC output channel selection (<i>x</i> = 0,1)
Input parameter{in}	
triggersource	external trigger of DAC
<i>DAC_TRIGGER_T5_TRG_O</i>	TIMER5 TRGO
<i>DAC_TRIGGER_T2_TRG_O</i>	TIMER2 TRGO, only for GD32F10X_CL devices
<i>DAC_TRIGGER_T7_TRG_O</i>	TIMER7 TRGO, only for GD32F10X_MD, GD32F10X_HD, GD32F10X_XD devices
<i>DAC_TRIGGER_T6_TRG_O</i>	TIMER6 TRGO
<i>DAC_TRIGGER_T4_TRG</i>	TIMER4 TRGO

O	
DAC_TRIGGER_T1_TRGO	TIMER1 TRGO
O	
DAC_TRIGGER_T3_TRGO	TIMER3 TRGO
O	
DAC_TRIGGER_EXTI_9	EXTI interrupt line9 event
DAC_TRIGGER_SOFTWARE	software trigger
RE	
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure DAC0_OUT0 trigger source */
dac_trigger_source_config(DAC0, DAC_OUT0, DAC_TRIGGER_T1_TRGO);
```

dac_software_trigger_enable

The description of dac_software_trigger_enable is shown as below:

Table 3-119. Function dac_software_trigger_enable

Function name	dac_software_trigger_enable
Function prototype	void dac_software_trigger_enable(uint32_t dac_periph, uint8_t dac_out);
Function descriptions	enable DAC software trigger
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection(x = 0)
Input parameter{in}	
dac_out	DAC output
DAC_OUTx	DAC output channel selection(x = 0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable DAC0_OUT0 software trigger */
dac_software_trigger_enable(DAC0, DAC_OUT0);
```

dac_wave_mode_config

The description of dac_wave_mode_config is shown as below:

Table 3-120. Function dac_wave_mode_config

Function name	dac_wave_mode_config
Function prototype	void dac_wave_mode_config(uint32_t dac_periph, uint8_t dac_out, uint32_t wave_mode);
Function descriptions	configure DAC wave mode
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection (x = 0)
Input parameter{in}	
dac_out	DAC output
DAC_OUTx	DAC output channel selection (x = 0,1)
Input parameter{in}	
wave_mode	DAC wave mode
DAC_WAVE_DISABLE	wave mode disable
DAC_WAVE_MODE_LFSR	LFSR noise mode
DAC_WAVE_MODE_TRIANGLE	triangle noise mode
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure DAC0_OUT0 wave mode */
dac_wave_mode_config(DAC0, DAC_OUT0, DAC_WAVE_DISABLE);
```

dac_lfsr_noise_config

The description of dac_lfsr_noise_config is shown as below:

Table 3-121. Function dac_lfsr_noise_config

Function name	dac_lfsr_noise_config
Function prototype	void dac_lfsr_noise_config(uint32_t dac_periph, uint8_t dac_out, uint32_t unmask_bits);
Function descriptions	configure DAC LFSR noise mode
Precondition	-
The called functions	-
Input parameter{in}	

dac_periph	DAC peripheral
<i>DACx</i>	DAC peripheral selection (<i>x</i> = 0)
Input parameter{in}	
dac_out	DAC output
<i>DAC_OUTx</i>	DAC output channel selection (<i>x</i> = 0,1)
Input parameter{in}	
unmask_bits	LFSR noise unmask bits
<i>DAC_LFSR_BIT0</i>	unmask the LFSR bit0
<i>DAC_LFSR_BITSx_0</i>	unmask the LFSR bits [x:0] (<i>x</i> = 1,2,3..11)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure DAC0_OUT0 LFSR noise mode */
dac_lfsr_noise_config(DAC0, DAC_OUT0, DAC_LFSR_BIT0);
```

dac_triangle_noise_config

The description of **dac_triangle_noise_config** is shown as below:

Table 3-122. Function *dac_triangle_noise_config*

Function name	<i>dac_triangle_noise_config</i>
Function prototype	void <i>dac_triangle_noise_config</i> (uint32_t <i>dac_periph</i> , uint8_t <i>dac_out</i> , uint32_t <i>amplitude</i>);
Function descriptions	configure DAC triangle noise mode
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
<i>DACx</i>	DAC peripheral selection (<i>x</i> = 0)
Input parameter{in}	
dac_out	DAC output
<i>DAC_OUTx</i>	DAC output channel selection (<i>x</i> = 0,1)
Input parameter{in}	
amplitude	the amplitude of the triangle
<i>DAC_TRIANGLE_AMPLITUDE_x</i>	$x = 2^{n-1}$ (<i>n</i> = 1..12)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure DAC0_OUT0 triangle noise mode */
dac_triangle_noise_config(DAC0, DAC_OUT0, DAC_TRIANGLE_AMPLITUDE_1);
```

dac_concurrent_enable

The description of `dac_concurrent_enable` is shown as below:

Table 3-123. Function `dac_concurrent_enable`

Function name	dac_concurrent_enable
Function prototype	void dac_concurrent_enable(uint32_t dac_periph);
Function descriptions	enable DAC concurrent mode
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection (x = 0)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable DAC0 concurrent mode */
dac_concurrent_enable(DAC0);
```

dac_concurrent_disable

The description of `dac_concurrent_disable` is shown as below:

Table 3-124. Function `dac_concurrent_disable`

Function name	dac_concurrent_disable
Function prototype	void dac_concurrent_disable(uint32_t dac_periph);
Function descriptions	disable DAC concurrent mode
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection(x = 0)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable DAC0 concurrent mode */
```

```
dac_concurrent_disable(DAC0);
```

dac_concurrent_software_trigger_enable

The description of `dac_concurrent_software_trigger_enable` is shown as below:

Table 3-125. Function `dac_concurrent_software_trigger_enable`

Function name	dac_concurrent_software_trigger_enable
Function prototype	void dac_concurrent_software_trigger_enable(uint32_t dac_periph);
Function descriptions	enable DAC concurrent software trigger
Precondition	-
The called functions	-
Input parameter{in}	
<code>dac_periph</code>	DAC peripheral
<code>DACx</code>	DAC peripheral selection (x = 0)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable DAC0 concurrent software trigger */
```

```
dac_concurrent_software_trigger_enable(DAC0);
```

dac_concurrent_output_buffer_enable

The description of `dac_concurrent_output_buffer_enable` is shown as below:

Table 3-126. Function `dac_concurrent_output_buffer_enable`

Function name	dac_concurrent_output_buffer_enable
Function prototype	void dac_concurrent_output_buffer_enable(uint32_t dac_periph);
Function descriptions	enable DAC concurrent buffer function
Precondition	-
The called functions	-
Input parameter{in}	
<code>dac_periph</code>	DAC peripheral
<code>DACx</code>	DAC peripheral selection(x = 0)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable DAC0 concurrent buffer function */
dac_concurrent_output_buffer_enable(DAC0);
```

dac_concurrent_output_buffer_disable

The description of dac_concurrent_output_buffer_disable is shown as below:

Table 3-127. Function dac_concurrent_output_buffer_disable

Function name	dac_concurrent_output_buffer_disable
Function prototype	void dac_concurrent_output_buffer_disable(uint32_t dac_periph);
Function descriptions	disable DAC concurrent buffer function
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection (x = 0)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable DAC0 concurrent buffer function */
dac_concurrent_output_buffer_disable(DAC0);
```

dac_concurrent_data_set

The description of dac_concurrent_data_set is shown as below:

Table 3-128. Function dac_concurrent_data_set

Function name	dac_concurrent_data_set
Function prototype	void dac_concurrent_data_set(uint32_t dac_periph, uint32_t dac_align, uint16_t data0, uint16_t data1);
Function descriptions	set DAC concurrent mode data holding register value
Precondition	-
The called functions	-
Input parameter{in}	
dac_periph	DAC peripheral
DACx	DAC peripheral selection(x = 0)
Input parameter{in}	
dac_align	DAC data alignment mode
DAC_ALIGN_12B_R	12-bit right-aligned data

<i>DAC_ALIGN_12B_L</i>	12-bit left-aligned data
<i>DAC_ALIGN_8B_R</i>	8-bit right-aligned data
Input parameter{in}	
data0	DAC_OUT0 data to be loaded (0~4095)
Input parameter{in}	
data1	DAC_OUT1 data to be loaded (0~4095)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set DAC0 concurrent mode data holding register value */
dac_concurrent_data_set(DAC0, DAC_ALIGN_8B_R, 0xFF, 0xFF);
```

3.7. **DBG**

The DBG hold unit helps debugger to debug power saving mode. The DBG registers are listed in chapter [3.7.1](#). the DBG firmware functions are introduced in chapter [3.7.2](#).

3.7.1. **Descriptions of Peripheral registers**

DBG registers are listed in the table shown as below:

Table 3-129. DBG Registers

Registers	Descriptions
DBG_ID	DBG ID code register
DBG_CTL	DBG control register

3.7.2. **Descriptions of Peripheral functions**

DBG firmware functions are listed in the table shown as below:

Table 3-130. DBG firmware function

Function name	Function description
dbg_id_get	read DBG_ID code register
dbg_low_power_enable	enable low power behavior when the MCU is in debug mode
dbg_low_power_disable	disable low power behavior when the MCU is in debug mode
dbg_periph_enable	enable peripheral behavior when the MCU is in debug mode
dbg_periph_disable	disable peripheral behavior when the MCU is in debug mode
dbg_trace_pin_enable	enable trace pin assignment
dbg_trace_pin_disable	disable trace pin assignment
dbg_trace_pin_mode_set	set trace pin mode

Enum dbg_periph_enum
Table 3-131. Enum dbg_periph_enum

Member name	Function description
DBG_FWDGT_HOLD	debug FWDGT kept when core is halted
DBG_WWDGT_HOLD	debug WWDGT kept when core is halted
DBG_TIMER0_HOLD	hold TIMER0 counter when core is halted
DBG_TIMER1_HOLD	hold TIMER1 counter when core is halted
DBG_TIMER2_HOLD	hold TIMER2 counter when core is halted
DBG_TIMER3_HOLD	hold TIMER3 counter when core is halted
DBG_CAN0_HOLD	debug CAN0 kept when core is halted
DBG_I2C0_HOLD	hold I2C0 smbus when core is halted
DBG_I2C1_HOLD	hold I2C1 smbus when core is halted
DBG_TIMER4_HOLD	hold TIMER4 counter when core is halted
DBG_TIMER5_HOLD	hold TIMER5 counter when core is halted
DBG_TIMER6_HOLD	hold TIMER6 counter when core is halted
DBG_TIMER7_HOLD	hold TIMER7 counter when core is halted
DBG_CAN1_HOLD	debug CAN1 kept when core is halted (only for GD32F10x CL series)
DBG_TIMER11_HOLD	hold TIMER11 counter when core is halted (only for GD32F10x CL and XD series)
DBG_TIMER12_HOLD	hold TIMER12 counter when core is halted (only for GD32F10x CL and XD series)
DBG_TIMER13_HOLD	hold TIMER13 counter when core is halted (only for GD32F10x CL and XD series)
DBG_TIMER8_HOLD	hold TIMER8 counter when core is halted (only for GD32F10x CL and XD series)
DBG_TIMER9_HOLD	hold TIMER9 counter when core is halted (only for GD32F10x CL and XD series)
DBG_TIMER10_HOLD	hold TIMER10 counter when core is halted (only for GD32F10x CL and XD series)

dbg_id_get

The description of `dbg_id_get` is shown as below:

Table 3-132. Function dbg_id_get

Function name	dbg_id_get
Function prototype	uint32_t dbg_id_get(void);
Function descriptions	Read DBG_ID code register
Precondition	-
The called functions	-
Input parameter{in}	
-	-

Output parameter{out}	
-	-
Return value	
uint32_t	DBG_ID code (0-0xFFFFFFFF)

Example:

```
/* read DBG_ID code register */

uint32_t id_value = 0;

id_value = dbg_id_get();
```

dbg_low_power_enable

The description of `dbg_low_power_enable` is shown as below:

Table 3-133. Function `dbg_low_power_enable`

Function name	dbg_low_power_enable
Function prototype	void dbg_low_power_enable(uint32_t dbg_low_power);
Function descriptions	Enable low power behavior when the mcu is in debug mode
Precondition	-
The called functions	-
Input parameter{in}	
dbg_low_power	low power mode
DBG_LOW_POWER_SLEEP	keep debugger connection during sleep mode
DBG_LOW_POWER_DEEPSLEEP	keep debugger connection during deepsleep mode
DBG_LOW_POWER_STANDBY	keep debugger connection during standby mode
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable low power behavior when the mcu is in debug mode */

dbg_low_power_enable(DBG_LOW_POWER_SLEEP);
```

dbg_low_power_disable

The description of `dbg_low_power_disable` is shown as below:

Table 3-134. Function `dbg_low_power_disable`

Function name	dbg_low_power_disable
---------------	-----------------------

Function prototype	void dbg_low_power_disable(uint32_t dbg_low_power);
Function descriptions	Disable low power behavior when the mcu is in debug mode
Precondition	-
The called functions	-
Input parameter{in}	
dbg_low_power	low power mode
DBG_LOW_POWER_SLEEP	keep debugger connection during sleep mode
DBG_LOW_POWER_DEEPSLEEP	keep debugger connection during deepsleep mode
DBG_LOW_POWER_STANDBY	keep debugger connection during standby mode
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable low power behavior when the mcu is in debug mode */
dbg_low_power_disable(DBG_LOW_POWER_SLEEP);
```

dbg_periph_enable

The description of dbg_periph_enable is shown as below:

Table 3-135. Function dbg_periph_enable

Function name	dbg_periph_enable
Function prototype	void dbg_periph_enable(dbg_periph_enum dbg_periph);
Function descriptions	Enable peripheral behavior when the mcu is in debug mode
Precondition	-
The called functions	-
Input parameter{in}	
dbg_periph	Peripheral refer to Table 3-131. Enum dbg_periph_enum
DBG_FWDGT_HOLD	debug FWDGT kept when core is halted
DBG_WWDGT_HOLD	debug WWDGT kept when core is halted
DBG_CANx_HOLD	x=0,1,CAN1 is only available for GD32F10x CL series, hold CANx counter when core is halted
DBG_I2Cx_HOLD	x=0,1, hold I2Cx smbus when core is halted
DBG_TIMERx_HOLD	x=0,1,2,3,4,5,6,7,8,9,10,11,12,13 (TIMER8..13 are only available for GD32F10x CL and XD series), hold TIMERx counter when core is halted
Output parameter{out}	
-	-
Return value	

Example:

```
/* enable peripheral behavior when the mcu is in debug mode */
dbg_periph_enable(DBG_TIMER0_HOLD);
```

dbg_periph_disable

The description of dbg_periph_disable is shown as below:

Table 3-136. Function dbg_periph_disable

Function name	dbg_periph_disable
Function prototype	void dbg_periph_disable(dbg_periph_enum dbg_periph);
Function descriptions	Disable peripheral behavior when the mcu is in debug mode
Precondition	-
The called functions	-
Input parameter{in}	
dbg_periph	peripheral refer to Table 3-131. Enum dbg_periph_enum
DBG_FWDGT_HOLD	debug FWDGT kept when core is halted
DBG_WWDGT_HOLD	debug WWDGT kept when core is halted
DBG_CANx_HOLD	x=0,1,CAN1 is only available for GD32F10x CL series, hold CANx counter when core is halted
DBG_I2Cx_HOLD	x=0,1, hold I2Cx smbus when core is halted
DBG_TIMERx_HOLD	x=0,1,2,3,4,5,6,7,8,9,10,11,12,13 (TIMER8..13 are only available for GD32F10x CL and XD series), hold TIMERx counter when core is halted
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable peripheral behavior when the mcu is in debug mode */
dbg_periph_disable(DBG_TIMER0_HOLD);
```

dbg_trace_pin_enable

The description of dbg_trace_pin_enable is shown as below:

Table 3-137. Function dbg_trace_pin_enable

Function name	dbg_trace_pin_enable
Function prototype	void dbg_trace_pin_enable(void);
Function descriptions	Enable trace pin assignment
Precondition	-
The called functions	-

Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable trace pin assignment */

dbg_trace_pin_enable();
```

dbg_trace_pin_disable

The description of dbg_trace_pin_disable is shown as below:

Table 3-138. Function dbg_trace_pin_disable

Function name	dbg_trace_pin_disable
Function prototype	void dbg_trace_pin_disable(void);
Function descriptions	Disable trace pin assignment
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable trace pin assignment */

dbg_trace_pin_disable();
```

dbg_trace_pin_mode_set

The description of dbg_trace_pin_mode_set is shown as below:

Table 3-139. Function dbg_trace_pin_mode_set

Function name	dbg_trace_pin_mode_set
Function prototype	void dbg_trace_pin_mode_set(uint32_t trace_mode);
Function descriptions	Trace pin mode selection
Precondition	-
The called functions	-
Input parameter{in}	
trace_mode	trace pin mode selection

<i>TRACE_MODE_ASYNC_C</i>	trace pin used for async mode
<i>TRACE_MODE_SYNC_DATASIZE_1</i>	trace pin used for sync mode and data size is 1
<i>TRACE_MODE_SYNC_DATASIZE_2</i>	trace pin used for sync mode and data size is 2
<i>TRACE_MODE_SYNC_DATASIZE_4</i>	trace pin used for sync mode and data size is 4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* trace pin mode selection */
dbg_trace_pin_mode_set(TRACE_MODE_ASYNC);
```

3.8. DMA

The direct memory access (DMA) controller provides a hardware method of transferring data between peripherals and/or memory without intervention from the CPU, thereby freeing up bandwidth for other system functions. The DMA registers are listed in chapter [3.8.1](#), the DMA firmware functions are introduced in chapter [3.8.2](#).

3.8.1. Descriptions of Peripheral registers

DMA registers are listed in the table shown as below:

Table 3-140. DMA Registers

Registers	Descriptions
DMA_INTF	Interrupt flag register
DMA_INTC	Interrupt flag clear register
DMA_CHxCTL (x=0..6)	Channel x control register
DMA_CHxCNT (x=0..6)	Channel x counter register
DMA_CHxPADDR (x=0..6)	Channel x peripheral base address register
DMA_CHxMADDR (x=0..6)	Channel x memory base address register

3.8.2. Descriptions of Peripheral functions

DMA firmware functions are listed in the table shown as below:

Table 3-141. DMA firmware function

Function name	Function description
dma_deinit	deinitialize DMA a channel registers
dma_struct_para_init	initialize the parameters of DMA struct with the default values
dma_init	initialize DMA channel
dma_circulation_enable	enable DMA circulation mode
dma_circulation_disable	disable DMA circulation mode
dma_memory_to_memory_enable	enable memory to memory mode
dma_memory_to_memory_disable	disable memory to memory mode
dma_channel_enable	enable DMA channel
dma_channel_disable	disable DMA channel
dma_periph_address_config	set DMA peripheral base address
dma_memory_address_config	set DMA memory base address
dma_transfer_number_config	set the number of remaining data to be transferred by the DMA
dma_transfer_number_get	get the number of remaining data to be transferred by the DMA
dma_priority_config	configure priority level of DMA channel
dma_memory_widht_config	configure transfer data size of memory
dma_periph_widht_config	configure transfer data size of peripheral
dma_memory_increase_enable	enable next address increasement algorithm of memory
dma_memory_increase_disable	disable next address increasement algorithm of memory
dma_periph_increase_enable	enable next address increasement algorithm of peripheral
dma_periph_increase_disable	disable next address increasement algorithm of peripheral
dma_transfer_direction_config	configure the direction of data transfer on the channel
dma_flag_get	check DMA flag is set or not
dma_flag_clear	clear DMA a channel flag
dma_interrupt_flag_get	check DMA flag and interrupt enable bit is set or not
dma_interrupt_flag_clear	clear DMA a channel flag
dma_interrupt_enable	enable DMA interrupt
dma_interrupt_disable	disable DMA interrupt

Structure dma_parameter_struct

Table 3-142. Structure dma_parameter_struct

Member name	Function description
periph_addr	peripheral base address
periph_widht	transfer data size of peripheral
memory_addr	memory base address

memory_w idth	transfer data size of memory
number	channel transfer number
priority	channel priority level
periph_inc	peripheral increasing mode
memory_inc	memory increasing mode
direction	channel data transfer direction

dma_deinit

The description of dma_deinit is shown as below:

Table 3-143. Function dma_deinit

Function name	dma_deinit
Function prototype	void dma_deinit(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	deinitialize DMA a channel registers
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0..1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* DMA0 channel0 initialize */
dma_deinit(DMA0, DMA_CH0);
```

dma_struct_para_init

The description of dma_struct_para_init is shown as below:

Table 3-144. Function dma_struct_para_init

Function name	dma_struct_para_init
Function prototype	void dma_struct_para_init(dma_parameter_struct* init_struct)
Function descriptions	Initialize the parameters of DMA struct with the default values
Precondition	-
The called functions	-
Input parameter{in}	
init_struct	the initialization data needed to initialize DMA channel, the structure

	members can refer to Table 3-142. Structure dma_parameter_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* Initialize the parameters of DMA struct with the default values */
dma_parameter_struct init_struct;
dma_struct_para_init (&init_struct);
```

dma_init

The description of dma_init is shown as below:

Table 3-145. Function dma_init

Function name	dma_init
Function prototype	void dma_init(uint32_t dma_periph, dma_channel_enum channelx, dma_parameter_struct *init_struct);
Function descriptions	initialize DMA channel
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0..1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Input parameter{in}	
init_struct	Structure for initialization, the structure members can refer to Table 3-142. Structure dma_parameter_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* DMA0 channel0 initialize */
dma_parameter_struct dma_init_struct;

dma_init_struct.direction = DMA_PERIPHERAL_TO_MEMORY;
dma_init_struct.memory_addr = (uint32_t)g_destbuf;
dma_init_struct.memory_inc = DMA_MEMORY_INCREASE_ENABLE;
```

```

dma_init_struct.memory_width = DMA_MEMORY_WIDTH_8BIT;
dma_init_struct.number = TRANSFER_NUM;
dma_init_struct.periph_addr = (uint32_t)BANK0_WRITE_START_ADDR;
dma_init_struct.periph_inc = DMA_PERIPH_INCREASE_ENABLE;
dma_init_struct.periph_width = DMA_PERIPHERAL_WIDTH_8BIT;
dma_init_struct.priority = DMA_PRIORITY_ULTRA_HIGH;
dma_init(DMA0, DMA_CH0, &dma_init_struct);
  
```

dma_circulation_enable

The description of `dma_circulation_enable` is shown as below:

Table 3-146. Function `dma_circulation_enable`

Function name	dma_circulation_enable
Function prototype	void dma_circulation_enable(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	enable DMA circulation mode
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0..1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* DMA0 channel0 mode configuration */
dma_circulation_enable(DMA0, DMA_CH0);
  
```

dma_circulation_disable

The description of `dma_circulation_disable` is shown as below:

Table 3-147. Function `dma_circulation_disable`

Function name	dma_circulation_disable
Function prototype	void dma_circulation_disable(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	disable DMA circulation mode
Precondition	-

The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* DMA0 channel0 mode configuration */
dma_circulation_disable(DMA0, DMA_CH0);
```

dma_memory_to_memory_enable

The description of **dma_memory_to_memory_enable** is shown as below:

Table 3-148. Function `dma_memory_to_memory_enable`

Function name	dma_memory_to_memory_enable
Function prototype	void dma_memory_to_memory_enable(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	enable memory to memory mode
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* DMA0 channel0 mode configuration */
dma_memory_to_memory_enable(DMA0, DMA_CH0);
```

dma_memory_to_memory_disable

The description of `dma_memory_to_memory_disable` is shown as below:

Table 3-149. Function `dma_memory_to_memory_disable`

Function name	dma_memory_to_memory_disable
Function prototype	<code>void dma_memory_to_memory_disable(uint32_t dma_periph, dma_channel_enum channelx);</code>
Function descriptions	disable memory to memory mode
Precondition	-
The called functions	-
Input parameter{in}	
<code>dma_periph</code>	DMA peripheral
<code>DMAx(x=0,1)</code>	DMA peripheral selection
Input parameter{in}	
<code>channelx</code>	DMA channel
<code>DMA_CHx(DMA0:x=..6; DMA1: x=..4)</code>	DMA channel selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* DMA0 channel0 mode configuration */
dma_memory_to_memory_enable(DMA0, DMA_CH0);
```

dma_channel_enable

The description of `dma_channel_enable` is shown as below:

Table 3-150. Function `dma_channel_enable`

Function name	dma_channel_enable
Function prototype	<code>void dma_channel_enable(uint32_t dma_periph, dma_channel_enum channelx);</code>
Function descriptions	enable DMA channel
Precondition	-
The called functions	-
Input parameter{in}	
<code>dma_periph</code>	DMA peripheral
<code>DMAx(x=0,1)</code>	DMA peripheral selection
Input parameter{in}	
<code>channelx</code>	DMA channel
<code>DMA_CHx(DMA0:x=..</code>	DMA channel selection

6; DMA1: x=0..4)	
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable DMA0 transfer */
dma_channel_enable(DMA0, DMA_CH0);
```

dma_channel_disable

The description of `dma_channel_disable` is shown as below:

Table 3-151. Function `dma_channel_disable`

Function name	dma_channel_disable
Function prototype	void dma_channel_disable(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	disable DMA channel
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=..6; DMA1: x=0..4)	DMA channel selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable DMA0 transfer */
dma_channel_disable(DMA0, DMA_CH0);
```

dma_periph_address_config

The description of `dma_periph_address_config` is shown as below:

Table 3-152. Function `dma_periph_address_config`

Function name	dma_periph_address_config
Function prototype	void dma_periph_address_config(uint32_t dma_periph, dma_channel_enum channelx, uint32_t address);

Function descriptions	set DMA peripheral base address
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
<i>DMAx(x=0,1)</i>	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
<i>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</i>	DMA channel selection
Input parameter{in}	
address	peripheral base address
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
#define BANK0_WRITE_START_ADDR ((uint32_t)0x08004000)
dma_periph_address_config(DMA0, DMA_CH0, BANK0_WRITE_START_ADDR);
```

dma_memory_address_config

The description of `dma_memory_address_config` is shown as below:

Table 3-153. Function `dma_memory_address_config`

Function name	dma_memory_address_config
Function prototype	void dma_memory_address_config(uint32_t dma_periph, dma_channel_enum channelx, uint32_t address);
Function descriptions	set DMA memory base address
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
<i>DMAx(x=0,1)</i>	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
<i>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</i>	DMA channel selection
Input parameter{in}	
address	memory base address
Output parameter{out}	
-	-
Return value	

Example:

```
uint8_t g_destbuf[TRANSFER_NUM];
dma_memory_address_config(DMA0, DMA_CH0, (uint32_t)g_destbuf);
```

dma_transfer_number_config

The description of `dma_transfer_number_config` is shown as below:

Table 3-154. Function `dma_transfer_number_config`

Function name	dma_transfer_number_config
Function prototype	void dma_transfer_number_config(uint32_t dma_periph, dma_channel_enum channelx, uint32_t number);
Function descriptions	set the number of remaining data to be transferred by the DMA
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
<i>DMAx(x=0..1)</i>	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
<i>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</i>	DMA channel selection
Input parameter{in}	
number	data transfer number
<i>0-0xffff</i>	number
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
#define TRANSFER_NUM          0x400
dma_transfer_number_config(DMA0, DMA_CH0, TRANSFER_NUM);
```

dma_transfer_number_get

The description of `dma_transfer_number_get` is shown as below:

Table 3-155. Function `dma_transfer_number_get`

Function name	dma_transfer_number_get
Function prototype	uint32_t dma_transfer_number_get(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	get the number of remaining data to be transferred by the DMA

Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
<i>DMAx(x=0,1)</i>	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
<i>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</i>	DMA channel selection
Output parameter{out}	
-	-
Return value	
uint32_t	0-0xffff

Example:

```
uint32_t number = 0;
number = dma_transfer_number_get(DMA0, DMA_CH0);
```

dma_priority_config

The description of **dma_priority_config** is shown as below:

Table 3-156. Function `dma_priority_config`

Function name	<code>dma_priority_config</code>
Function prototype	<code>void dma_priority_config(uint32_t dma_periph, dma_channel_enum channelx, uint32_t priority);</code>
Function descriptions	configure priority level of DMA channel
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
<i>DMAx(x=0,1)</i>	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
<i>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</i>	DMA channel selection
Input parameter{in}	
priority	priority Level of this channel
<i>DMA_PRIORITY_LOW</i>	low priority
<i>DMA_PRIORITY_MEDIUM</i>	medium priority
<i>DMA_PRIORITY_HIGH</i>	high priority
<i>DMA_PRIORITY_ULTRAHIGH</i>	ultra high priority

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
dma_priority_config(DMA0, DMA_CH0, DMA_PRIORITY_ULTRA_HIGH);
```

dma_memory_width_config

The description of `dma_memory_width_config` is shown as below:

Table 3-157. Function `dma_memory_width_config`

Function name	dma_memory_width_config
Function prototype	void dma_memory_width_config (uint32_t dma_periph, dma_channel_enum channelx, uint32_t mw_idth);
Function descriptions	configure transfer data size of memory
Precondition	-
The called functions	-
Input parameter{in}	
<code>dma_periph</code>	DMA peripheral
<code>DMAx(x=0, 1)</code>	DMA peripheral selection
Input parameter{in}	
<code>channelx</code>	DMA channel
<code>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</code>	DMA channel selection
Input parameter{in}	
<code>mw_idth</code>	transfer data width of memory
<code>DMA_MEMORY_WIDTH_8BIT</code>	transfer data width of memory is 8-bit
<code>DMA_MEMORY_WIDTH_16BIT</code>	transfer data width of memory is 16-bit
<code>DMA_MEMORY_WIDTH_32BIT</code>	transfer data width of memory is 32-bit
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
dma_memory_width_config(DMA0, DMA_CH0, DMA_MEMORY_WIDTH_8BIT);
```

dma_periph_width_config

The description of `dma_periph_width_config` is shown as below:

Table 3-158. Function `dma_periph_width_config`

Function name	dma_periph_width_config
Function prototype	void dma_periph_width_config(uint32_t dma_periph, dma_channel_enum channelx, uint32_t pwidth);
Function descriptions	configure transfer data size of peripheral
Precondition	-
The called functions	-
Input parameter{in}	
<code>dma_periph</code>	DMA peripheral
<code>DMAx(x=0,1)</code>	DMA peripheral selection
Input parameter{in}	
<code>channelx</code>	DMA channel
<code>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</code>	DMA channel selection
Input parameter{in}	
<code>pwidth</code>	transfer data width of peripheral
<code>DMA_PERIPHERAL_WIDTH_8BIT</code>	transfer data width of peripheral is 8-bit
<code>DMA_PERIPHERAL_WIDTH_16BIT</code>	transfer data width of peripheral is 16-bit
<code>DMA_PERIPHERAL_WIDTH_32BIT</code>	transfer data width of peripheral is 32-bit
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
dma_periph_width_config(DMA0, DMA_CH0, DMA_PERIPHERAL_WIDTH_8BIT);
```

dma_memory_increase_enable

The description of `dma_memory_increase_enable` is shown as below:

Table 3-159. Function `dma_memory_increase_enable`

Function name	dma_memory_increase_enable
Function prototype	void dma_memory_increase_enable(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	enable next address increasement algorithm of memory
Precondition	-

The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
dma_memory_increase_enable(DMA0, DMA_CH0);
```

dma_memory_increase_disable

The description of `dma_memory_increase_disable` is shown as below:

Table 3-160. Function `dma_memory_increase_disable`

Function name	dma_memory_increase_disable
Function prototype	void dma_memory_increase_disable(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	disable next address increasement algorithm of memory
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
dma_memory_increase_disable(DMA0, DMA_CH0);
```

dma_periph_increase_enable

The description of `dma_periph_increase_enable` is shown as below:

Table 3-161. Function `dma_periph_increase_enable`

Function name	dma_periph_increase_enable
Function prototype	void dma_periph_increase_enable(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	enable next address increasement algorithm of peripheral
Precondition	-
The called functions	-
Input parameter{in}	
<code>dma_periph</code>	DMA peripheral
<code>DMAx(x=0,1)</code>	DMA peripheral selection
Input parameter{in}	
<code>channelx</code>	DMA channel
<code>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</code>	DMA channel selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
dma_periph_increase_enable(DMA0, DMA_CH0);
```

dma_periph_increase_disable

The description of `dma_periph_increase_disable` is shown as below:

Table 3-162. Function `dma_periph_increase_disable`

Function name	dma_periph_increase_disable
Function prototype	void dma_periph_increase_disable(uint32_t dma_periph, dma_channel_enum channelx);
Function descriptions	disable next address increasement algorithm of peripheral
Precondition	-
The called functions	-
Input parameter{in}	
<code>dma_periph</code>	DMA peripheral
<code>DMAx(x=0,1)</code>	DMA peripheral selection
Input parameter{in}	
<code>channelx</code>	DMA channel
<code>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</code>	DMA channel selection

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
dma_periph_increase_disable(DMA0, DMA_CH0);
```

dma_transfer_direction_config

The description of `dma_transfer_direction_config` is shown as below:

Table 3-163. Function `dma_transfer_direction_config`

Function name	dma_transfer_direction_config
Function prototype	void dma_transfer_direction_config(uint32_t dma_periph, dma_channel_enum channelx, uint8_t direction);
Function descriptions	configure the direction of data transfer on the channel
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=..6; DMA1: x=0..4)	DMA channel selection
Input parameter{in}	
direction	specify the direction of data transfer
DMA_PERIPHERAL_TO_MEMORY	read from peripheral and write to memory
DMA_MEMORY_TO_PERIPHERAL	read from memory and write to peripheral
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
dma_transfer_direction_config(DMA0, DMA_CH0, DMA_PERIPHERAL_TO_MEMORY);
```

dma_flag_get

The description of `dma_flag_get` is shown as below:

Table 3-164. Function dma_flag_get

Function name	dma_flag_get
Function prototype	FlagStatus dma_flag_get(uint32_t dma_periph, dma_channel_enum channelx, uint32_t flag);
Function descriptions	check DMA flag is set or not
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Input parameter{in}	
flag	specify get which flag
DMA_FLAG_G	global interrupt flag of channel
DMA_FLAG_FTF	full transfer finish flag of channel
DMA_FLAG_HTF	half transfer finish flag of channel
DMA_FLAG_ERR	error flag of channel
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
FlagStatus flag = RESET;
flag = dma_flag_get(DMA0, DMA_CH0, DMA_FLAG_FTF);
```

dma_flag_clear

The description of dma_flag_clear is shown as below:

Table 3-165. Function dma_flag_clear

Function name	dma_flag_clear
Function prototype	void dma_flag_clear(uint32_t dma_periph, dma_channel_enum channelx, uint32_t flag);
Function descriptions	clear DMA a channel flag
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	

channelx	DMA channel
<i>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</i>	DMA channel selection
Input parameter{in}	
flag	specify get which flag
<i>DMA_FLAG_G</i>	global interrupt flag of channel
<i>DMA_FLAG_FTF</i>	full transfer finish flag of channel
<i>DMA_FLAG_HTF</i>	half transfer finish flag of channel
<i>DMA_FLAG_ERR</i>	error flag of channel
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
dma_flag_clear(DMA0, DMA_CH0, DMA_FLAG_FTF);
```

dma_interrupt_flag_get

The description of **dma_interrupt_flag_get** is shown as below:

Table 3-166. Function `dma_interrupt_flag_get`

Function name	<code>dma_interrupt_flag_get</code>
Function prototype	<code>FlagStatus dma_interrupt_flag_get(uint32_t dma_periph, dma_channel_enum channelx, uint32_t flag);</code>
Function descriptions	check DMA flag and interrupt enable bit is set or not
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
<i>DMAx(x=0,1)</i>	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
<i>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</i>	DMA channel selection
Input parameter{in}	
flag	specify get which flag
<i>DMA_INT_FLAG_FTF</i>	full transfer finish interrupt flag of channel
<i>DMA_INT_FLAG_HTF</i>	half transfer finish interrupt flag of channel
<i>DMA_INT_FLAG_ERR</i>	error interrupt flag of channel
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
if(dma_interrupt_flag_get(DMA0, DMA_CH3, DMA_INT_FLAG_FTF)){
    dma_interrupt_flag_clear(DMA0, DMA_CH3, DMA_INT_FLAG_FTF);
}
```

dma_interrupt_flag_clear

The description of `dma_interrupt_flag_clear` is shown as below:

Table 3-167. Function `dma_interrupt_flag_clear`

Function name	dma_interrupt_flag_clear
Function prototype	void dma_interrupt_flag_clear(uint32_t dma_periph, dma_channel_enum channelx, uint32_t flag);
Function descriptions	clear DMA a channel flag
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
<i>DMAx(x=0..1)</i>	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
<i>DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)</i>	DMA channel selection
Input parameter{in}	
flag	specify get which flag
<i>DMA_INT_FLAG_G</i>	global interrupt flag of channel
<i>DMA_INT_FLAG_FTF</i>	full transfer finish interrupt flag of channel
<i>DMA_INT_FLAG_HTF</i>	half transfer finish interrupt flag of channel
<i>DMA_INT_FLAG_ERR</i>	error interrupt flag of channel
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
if(dma_interrupt_flag_get(DMA0, DMA_CH3, DMA_INT_FLAG_FTF)){
    dma_interrupt_flag_clear(DMA0, DMA_CH3, DMA_INT_FLAG_G);
}
```

dma_interrupt_enable

The description of `dma_interrupt_enable` is shown as below:

Table 3-168. Function dma_interrupt_enable

Function name	dma_interrupt_enable
Function prototype	void dma_interrupt_enable(uint32_t dma_periph, dma_channel_enum channelx, uint32_t source);
Function descriptions	enable DMA interrupt
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel
DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Input parameter{in}	
source	DMA interrupt source
DMA_INT_FTF	full transfer finish interrupt of channel
DMA_INT_HTF	half transfer finish interrupt of channel
DMA_INT_ERR	error interrupt of channel
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* DMA0 channel0 interrupt configuration */
dma_interrupt_enable(DMA0, DMA_CH0, DMA_INT_FTF);
```

dma_interrupt_disable

The description of dma_interrupt_disable is shown as below:

Table 3-169. Function dma_interrupt_disable

Function name	dma_interrupt_disable
Function prototype	void dma_interrupt_disable(uint32_t dma_periph, dma_channel_enum channelx, uint32_t source);
Function descriptions	disable DMA interrupt
Precondition	-
The called functions	-
Input parameter{in}	
dma_periph	DMA peripheral
DMAx(x=0,1)	DMA peripheral selection
Input parameter{in}	
channelx	DMA channel

DMA_CHx(DMA0:x=0..6; DMA1: x=0..4)	DMA channel selection
Input parameter{in}	
source	DMA interrupt source
DMA_INT_FTF	full transfer finish interrupt of channel
DMA_INT_HTF	half transfer finish interrupt of channel
DMA_INT_ERR	error interrupt of channel
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* DMA0 channel0 interrupt configuration */
dma_interrupt_disable(DMA0, DMA_CH0, DMA_INT_FTF);
```

3.9. ENET

There is a media access controller (MAC) designed in Ethernet module to support 10/100Mbps interface speed. For more efficient data transfer between Ethernet and memory, a DMA controller is designed in this module. The support interface protocol for Ethernet is media independent interface (MII) and reduced media independent interface (RMII). The ENET registers are listed in chapter [3.9.1](#), the ENET firmware functions are introduced in chapter [3.9.2](#).

3.9.1. Descriptions of Peripheral registers

ENET registers are listed in the table shown as below:

Table 3-170. ENET Registers

Registers	Descriptions
ENET_MAC_CFG	MAC configuration register
ENET_MAC_FRMF	MAC frame filter register
ENET_MAC_HLH	MAC hash list high register
ENET_MAC_HLL	MAC hash list low register
ENET_MAC_PHY_CTL	MAC PHY control register
ENET_MAC_PHY_DATA	MAC PHY data register
ENET_MAC_FCTL	MAC flow control register
ENET_MAC_FCTH	MAC flow control threshold register
ENET_MAC_VLT	MAC VLAN tag register
ENET_MAC_RWFF	MAC remote wakeup frame filter register

Registers	Descriptions
ENET_MAC_WUM	MAC wakeup management register
ENET_MAC_INTF	MAC interrupt flag register
ENET_MAC_INTMS K	MAC interrupt mask register
ENET_MAC_ADDR 0H	MAC address 0 high register
ENET_MAC_ADDR 0L	MAC address 0 low register
ENET_MAC_ADDR 1H	MAC address 1 high register
ENET_MAC_ADDR 1L	MAC address 1 low register
ENET_MAC_ADDT 2H	MAC address 2 high register
ENET_MAC_ADDR 2L	MAC address 2 low register
ENET_MAC_ADDR 3H	MAC address 3 high register
ENET_MAC_ADDR 3L	MAC address 3 low register
ENET_MSC_CTL	MSC control register
ENET_MSC_RINTF	MSC receive interrupt flag register
ENET_MSC_TINTF	MSC transmit interrupt flag register
ENET_MSC_RINT MSK	MSC receive interrupt mask register
ENET_MSC_TINTM SK	MSC transmit interrupt mask register
ENET_MSC_SCCN T	MSC transmitted good frames after a single collision counter register
ENET_MSC_MSCC NT	MSC transmitted good frames after more than a single collision counter register
ENET_MSC_TGFC NT	MSC transmitted good frames counter register
ENET_MSC_RFCE CNT	MSC received frames with CRC error counter register
ENET_MSC_RFAE CNT	MSC received frames with alignment error counter register
ENET_MSC_RGUF CNT	MSC received good unicast frames counter register
ENET_PTP_TSCTL	PTP time stamp control register
ENET_PTP_SSINC	PTP subsecond increment register
ENET_PTP_TSH	PTP time stamp high register

Registers	Descriptions
ENET_PTP_TSL	PTP time stamp low register
ENET_PTP_TSUH	PTP time stamp update high register
ENET_PTP_TSUL	PTP time stamp update low register
ENET_PTP_TSADD END	PTP time stamp addend register
ENET_PTP_ETH	PTP expected time high register
ENET_PTP_ETL	PTP expected time low register
ENET_DMA_BCTL	DMA bus control register
ENET_DMA_TPEN	DMA transmit poll enable register
ENET_DMA_RPEN	DMA receive poll enable register
ENET_DMA_RDTA DDR	DMA receive descriptor table address register
ENET_DMA_TDTA DDR	DMA transmit descriptor table address register
ENET_DMA_STAT	DMA status register
ENET_DMA_CTL	DMA control register
ENET_DMA_INTEN	DMA interrupt enable register
ENET_DMA_MFBO CNT	DMA missed frame and buffer overflow counter register
ENET_DMA_CTDA DDR	DMA current transmit descriptor address register
ENET_DMA_CRDA DDR	DMA current receive descriptor address register
ENET_DMA_CTBA DDR	DMA current transmit buffer address register
ENET_DMA_CRBA DDR	DMA current receive buffer address register

3.9.2. Descriptions of Peripheral functions

ENET firmware functions are listed in the table shown as below:

Table 3-171. ENET firmware function

Function name	Function description
main function	
enet_deinit	deinitialize the ENET, and reset structure parameters for ENET initialization
enet_initpara_config	configure the parameters which are usually less cared for initialization
enet_init	initialize ENET peripheral with generally concerned parameters and the less cared parameters
enet_softw are_reset	reset all core internal registers located in CLK_TX and

Function name	Function description
	CLK_RX
enet_rxframe_size_get	check receive frame valid and return frame size
enet_descriptors_chain_init	initialize the dma tx/rx descriptors's parameters in chain mode
enet_descriptors_ring_init	initialize the dma tx/rx descriptors's parameters in ring mode
enet_frame_receive	handle current received frame data to application buffer
enet_frame_transmit	handle application buffer data to transmit it
enet_transmit_checksum_config	configure the transmit IP frame checksum offload calculation and insertion
enet_enable	ENET Tx and Rx function enable (include MAC and DMA module)
enet_disable	ENET Tx and Rx function disable (include MAC and DMA module)
enet_mac_address_set	configure MAC address
enet_mac_address_get	get MAC address
enet_flag_get	get the ENET MAC/MSC/PTP/DMA status flag
enet_flag_clear	clear the ENET DMA status flag
enet_interrupt_enable	enable ENET MAC/MSC/DMA interrupt
enet_interrupt_disable	disable ENET MAC/MSC/DMA interrupt
enet_interrupt_flag_get	get ENET MAC/MSC/DMA interrupt flag
enet_interrupt_flag_clear	clear ENET DMA interrupt flag
MAC function	
enet_tx_enable	ENET Tx function enable (include MAC and DMA module)
enet_tx_disable	ENET Tx function disable (include MAC and DMA module)
enet_rx_enable	ENET Rx function enable (include MAC and DMA module)
enet_rx_disable	ENET Rx function disable (include MAC and DMA module)
enet_registers_get	put registers value into the application buffer
enet_address_filter_enable	enable the MAC address filter
enet_address_filter_disable	disable the MAC address filter
enet_address_filter_config	configure the MAC address filter
enet_phy_config	PHY interface configuration (configure SMI clock and reset PHY chip)
enet_phy_write_read	write to/read from a PHY register
enet_phyloopback_enable	enable the loopback function of phy chip
enet_phyloopback_disable	disable the loopback function of phy chip
enet_forward_feature_enable	enable ENET forward feature
enet_forward_feature_disable	disable ENET forward feature
enet_filter_feature_enable	enable ENET filter feature
enet_filter_feature_disable	disable ENET filter feature
flow control function	
enet_pauseframe_generate	generate the pause frame, ENET will send pause frame after enable transmit flow control

Function name	Function description
enet_pauseframe_detect_config	configure the pause frame detect type
enet_pauseframe_config	configure the pause frame parameters
enet_flowcontrol_threshold_config	configure the threshold of the flow control(deactive and active threshold)
enet_flowcontrol_feature_enable	enable ENET flow control feature
enet_flowcontrol_feature_disable	disable ENET flow control feature
DMA function	
enet_dmaprocess_state_get	get the dma transmit/receive process state
enet_dmaprocess_resume	poll the dma transmission/reception enable
enet_rxprocess_check_recovery	check and recover the Rx process
enet_txfifo_flush	flush the ENET transmit fifo, and wait until the flush operation completes
enet_current_desc_address_get	get the transmit/receive address of current descriptor, or current buffer, or descriptor table
enet_desc_information_get	get the Tx or Rx descriptor information
enet_missed_frame_counter_get	get the number of missed frames during receiving
descriptor function	
enet_desc_flag_get	get the bit flag of ENET dma descriptor
enet_desc_flag_set	set the bit flag of ENET dma tx descriptor
enet_desc_flag_clear	clear the bit flag of ENET dma tx descriptor
enet_desc_receive_complete_bit_enable	when receiving the completed, set RS bit in ENET_DMA_STAT register will immediately set
enet_desc_receive_complete_bit_disable	when receiving the completed, set RS bit in ENET_DMA_STAT register will be set after a configurable delay time
enet_rxframe_drop	drop current receive frame
enet_dma_feature_enable	enable DMA feature
enet_dma_feature_disable	disable DMA feature
enet_ptp_normal_descriptors_chain_init	initialize the dma Tx/Rx descriptors's parameters in normal chain mode with ptp function
enet_ptp_normal_descriptors_ring_init	initialize the dma Tx/Rx descriptors's parameters in normal ring mode with ptp function
enet_ptpframe_receive_normal_mode	receive a packet data with timestamp values to application buffer, when the DMA is in normal mode
enet_ptpframe_transmit_normal_mode	send data with timestamp values in application buffer as a transmit packet, when the DMA is in normal mode
WUM function	
enet_wum_filter_register_pointer_reset	wakeup frame filter register pointer reset
enet_wum_filter_config	set the remote wakeup frame registers
enet_wum_feature_enable	enable wakeup management features
enet_wum_feature_disable	disable wakeup management features

Function name	Function description
MSC function	
enet_msc_counters_reset	reset the MAC statistics counters
enet_msc_feature_enable	enable the MAC statistics counter features
enet_msc_feature_disable	disable the MAC statistics counter features
enet_msc_counters_get	get MAC statistics counter
PTP function	
enet_ptp_subsecond_2_nanosecond	change subsecond to nanosecond
enet_ptp_nanosecond_2_subsecond	change nanosecond to subsecond
enet_ptp_feature_enable	enable the PTP features
enet_ptp_feature_disable	disable the PTP features
enet_ptp_timestamp_function_config	configure the PTP timestamp function
enet_ptp_subsecond_increment_config	configure the PTP system time subsecond increment value
enet_ptp_timestamp_addend_config	adjusting the PTP clock frequency only in fine update mode
enet_ptp_timestamp_update_config	initializing or adding/subtracting to second of the PTP system time
enet_ptp_expected_time_config	configure the PTP expected target time
enet_ptp_system_time_get	get the PTP current system time
enet_ptp_start	configure and start PTP timestamp counter
enet_ptp_finecorrection_adjfreq	adjust frequency in fine method by configure addend register
enet_ptp_coarsecorrection_systime_update	update system time in coarse method
enet_ptp_finecorrection_settime	set system time in fine method
enet_ptp_flag_get	get the ptpt flag status
Other	
enet_initpara_reset	reset the ENET initpara struct, call it before using enet_initpara_config()

Structure enet_descriptors_struct

Table 3-172. Structure enet_descriptors_struct

member name	Function description
status	status
control_buffer_size	control and buffer1,buffer2 lengths
buffer1_addr	buffer1 address pointer/timestamp low
buffer2_next_desc_addr	buffer2 or next descriptor address pointer/timestamp high

Structure enet_ptp_systime_struct

Table 3-173. Structure enet_ptp_systime_struct

member name	Function description

second	second of system time
nanosecond	nanosecond of system time
sign	sign of system time

enet_deinit

The description of enet_deinit is shown as below:

Table 3-174. Function enet_deinit

Function name	enet_deinit
Function prototype	void enet_deinit(void);
Function descriptions	deinitialize the ENET, and reset structure parameters for ENET initialization
Precondition	-
The called functions	rcu_periph_reset_enable() /rcu_periph_reset_disable()/enet_initpara_reset()
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* ENET deinitialize */

enet_deinit();
```

enet_initpara_config

The description of enet_initpara_config is shown as below:

Table 3-175. Function enet_initpara_config

Function name	enet_initpara_config
Function prototype	void enet_initpara_config(enet_option_enum option, uint32_t para)
Function descriptions	configure the parameters which are usually less cared for initialization, this function must be called before enet_init(), otherwise configuration will be no effect
Precondition	enet_initpara_reset(void)
The called functions	-
Input parameter{in}	
option	different function option, which is related to several parameters only one parameter can be selected which is shown as below
<i>FORWARD_OPTION</i>	choose to configure the frame forward related parameters
<i>DMABUS_OPTION</i>	choose to configure the DMA bus mode related parameters
<i>DMA_MAXBURST_OPTION</i>	choose to configure the DMA max burst related parameters

<code>DMA_ARBITRATION_OPTION</code>	choose to configure the DMA arbitration related parameters
<code>STORE_OPTION</code>	choose to configure the store forward mode related parameters
<code>DMA_OPTION</code>	choose to configure the DMA related parameters
<code>VLAN_OPTION</code>	choose to configure vlan related parameters
<code>FLOWCTL_OPTION</code>	choose to configure flow control related parameters
<code>HASHH_OPTION</code>	choose to configure hash high
<code>HASHL_OPTION</code>	choose to configure hash low
<code>FILTER_OPTION</code>	choose to configure frame filter related parameters
<code>HALFDUPLEX_OPTION_N</code>	choose to configure halfduplex mode related parameters
<code>TIMER_OPTION</code>	choose to configure time counter related parameters
<code>INTERFRAMEGAP_OPTION</code>	choose to configure the inter frame gap related parameters
Input parameter{in}	
<code>para</code> (the value according to the parameter <code>option</code>)	all the related values should be configured which are shown as below example: <code>para = (value1 value2 value3...)</code>
When value of parameter <code>option</code> is <code>FORWARD_OPTION</code>	
<code>value1</code>	<code>ENET_AUTO_PADCRC_DROP_ENABLE / ENET_AUTO_PADCRC_DROP_DISABLE</code>
<code>value2</code>	<code>ENET_FORWARD_ERRFRAMES_ENABLE / ENET_FORWARD_ERRFRAMES_DISABLE</code>
<code>value3</code>	<code>ENET_FORWARD_UNDERSZ_GOODFRAMES_ENABLE / ENET_FORWARD_UNDERSZ_GOODFRAMES_DISABLE</code>
When value of parameter <code>option</code> is <code>DMABUS_OPTION</code>	
<code>value1</code>	<code>ENET_ADDRESS_ALIGN_ENABLE / ENET_ADDRESS_ALIGN_DISABLE</code>
<code>value2</code>	<code>ENET_FIXED_BURST_ENABLE / ENET_FIXED_BURST_DISABLE</code>
When value of parameter <code>option</code> is <code>DMA_MAXBURST_OPTION</code>	
<code>value1</code>	<code>ENET_RXDP_1BEAT / ENET_RXDP_2BEAT / ENET_RXDP_4BEAT / ENET_RXDP_8BEAT / ENET_RXDP_16BEAT / ENET_RXDP_32BEAT / ENET_RXDP_4xPGBL_4BEAT / ENET_RXDP_4xPGBL_8BEAT / ENET_RXDP_4xPGBL_16BEAT / ENET_RXDP_4xPGBL_32BEAT / ENET_RXDP_4xPGBL_64BEAT / ENET_RXDP_4xPGBL_128BEAT</code>
<code>value2</code>	<code>ENET_PGBL_1BEAT / ENET_PGBL_2BEAT / ENET_PGBL_4BEAT / ENET_PGBL_8BEAT / ENET_PGBL_16BEAT / ENET_PGBL_32BEAT / ENET_PGBL_4xPGBL_4BEAT / ENET_PGBL_4xPGBL_8BEAT / ENET_PGBL_4xPGBL_16BEAT / ENET_PGBL_4xPGBL_32BEAT / ENET_PGBL_4xPGBL_64BEAT / ENET_PGBL_4xPGBL_128BEAT</code>
<code>value3</code>	<code>ENET_RXTX_DIFFERENT_PGBL / ENET_RXTX_SAME_PGBL</code>
When value of parameter <code>option</code> is <code>DMA_ARBITRATION_OPTION</code>	
<code>value1</code>	<code>ENET_ARBITRATION_RXPRIORTX / ENET_ARBITRATION_RXTX_1_1 / ENET_ARBITRATION_RXTX_2_1 / ENET_ARBITRATION_RXTX_3_1 /</code>

	<i>ENET_ARBITRATION_RXTX_4_1</i>
When value of parameter option is <i>STORE_OPTION</i>	
value1	<i>ENET_RX_MODE_STOREFORWARD / ENET_RX_MODE_CUTTHROUGH</i>
value2	<i>ENET_TX_MODE_STOREFORWARD / ENET_TX_MODE_CUTTHROUGH</i>
value3	<i>ENET_RX_THRESHOLD_64BYTES / ENET_RX_THRESHOLD_32BYTES / ENET_RX_THRESHOLD_96BYTES / ENET_RX_THRESHOLD_128BYTES</i>
value4	<i>ENET_TX_THRESHOLD_64BYTES / ENET_TX_THRESHOLD_128BYTES / ENET_TX_THRESHOLD_192BYTES / ENET_TX_THRESHOLD_256BYTES / ENET_TX_THRESHOLD_40BYTES / ENET_TX_THRESHOLD_32BYTES / ENET_TX_THRESHOLD_24BYTES / ENET_TX_THRESHOLD_16BYTES</i>
When value of parameter option is <i>DMA_OPTION</i>	
value1	<i>ENET_FLUSH_RXFRAME_ENABLE / ENET_FLUSH_RXFRAME_DISABLE</i>
value2	<i>ENET_SECONDFRAME_OPT_ENABLE / ENET_SECONDFRAME_OPT_DISABLE</i>
When value of parameter option is <i>VLAN_OPTION</i>	
value1	<i>ENET_VLANTAGCOMPARISON_12BIT / ENET_VLANTAGCOMPARISON_16BIT</i>
value2	<i>MAC_VLT_VLTI(regval)</i>
When value of parameter option is <i>FLOWCTL_OPTION</i>	
value1	<i>MAC_FCTL_PTM(regval)</i>
value2	<i>ENET_ZERO_QUANTA_PAUSE_ENABLE / ENET_ZERO_QUANTA_PAUSE_DISABLE</i>
value3	<i>ENET_PAUSETIME_MINUS4 / ENET_PAUSETIME_MINUS28 / ENET_PAUSETIME_MINUS144/ENET_PAUSETIME_MINUS256</i>
value4	<i>ENET_MAC0_AND_UNIQUE_ADDRESS_PAUSEDTECT / ENET_UNIQUE_PAUSEDTECT</i>
value5	<i>ENET_RX_FLOWCONTROL_ENABLE / ENET_RX_FLOWCONTROL_DISABLE</i>
value6	<i>ENET_TX_FLOWCONTROL_ENABLE / ENET_TX_FLOWCONTROL_DISABLE</i>
value7	<i>ENET_ACTIVE_THRESHOLD_256BYTES / ENET_ACTIVE_THRESHOLD_512BYTES / ENET_ACTIVE_THRESHOLD_768BYTES / ENET_ACTIVE_THRESHOLD_1024BYTES / ENET_ACTIVE_THRESHOLD_1280BYTES / ENET_ACTIVE_THRESHOLD_1536BYTES / ENET_ACTIVE_THRESHOLD_1792BYTES</i>
value8	<i>ENET_DEACTIVE_THRESHOLD_256BYTES / ENET_DEACTIVE_THRESHOLD_512BYTES / ENET_DEACTIVE_THRESHOLD_768BYTES /</i>

	<i>ENET_DEACTIVE_THRESHOLD_1024BYTES / ENET_DEACTIVE_THRESHOLD_1280BYTES / ENET_DEACTIVE_THRESHOLD_1536BYTES / ENET_DEACTIVE_THRESHOLD_1792BYTES</i>
When value of parameter option is <i>HASHH_OPTION</i>	
value1	0x0~0xFFFF FFFFU
When value of parameter option is <i>HASHL_OPTION</i>	
value1	0x0~0xFFFF FFFFU
When value of parameter option is <i>FILTER_OPTION</i>	
value1	<i>ENET_SRC_FILTER_NORMAL_ENABLE / ENET_SRC_FILTER_INVERSE_ENABLE / ENET_SRC_FILTER_DISABLE</i>
value2	<i>ENET_DEST_FILTER_INVERSE_ENABLE / ENET_DEST_FILTER_INVERSE_DISABLE</i>
value3	<i>ENET_MULTICAST_FILTER_HASH_OR_PERFECT / ENET_MULTICAST_FILTER_HASH / ENET_MULTICAST_FILTER_PERFECT / ENET_MULTICAST_FILTER_NONE</i>
value4	<i>ENET_UNICAST_FILTER_EITHER / ENET_UNICAST_FILTER_HASH / ENET_UNICAST_FILTER_PERFECT</i>
value5	<i>ENET_PCFRM_PREVENT_ALL / ENET_PCFRM_PREVENT_PAUSEFRAME / ENET_PCFRM_FORWARD_ALL / ENET_PCFRM_FORWARD_FILTERED</i>
When value of parameter option is <i>HALFDUPLEX_OPTION</i>	
value1	<i>ENET_CARRIERSENSE_ENABLE / ENET_CARRIERSENSE_DISABLE</i>
value2	<i>ENET_RECEIVEOWN_ENABLE / ENET_RECEIVEOWN_DISABLE</i>
value3	<i>ENET_RETRYTRANSMISSION_ENABLE / ENET_RETRYTRANSMISSION_DISABLE</i>
value4	<i>ENET_BACKOFFLIMIT_10 / ENET_BACKOFFLIMIT_8 / ENET_BACKOFFLIMIT_4 / ENET_BACKOFFLIMIT_1</i>
value5	<i>ENET_DEFERRALCHECK_ENABLE / ENET_DEFERRALCHECK_DISABLE</i>
When value of parameter option is <i>TIMER_OPTION</i>	
value1	<i>ENET_WATCHDOG_ENABLE / ENET_WATCHDOG_DISABLE</i>
value2	<i>ENET_JABBER_ENABLE / ENET_JABBER_DISABLE</i>
When value of parameter option is <i>INTERFRAMEGAP_OPTION</i>	
value1	<i>ENET_INTERFRAMEGAP_96BIT / ENET_INTERFRAMEGAP_88BIT / ENET_INTERFRAMEGAP_80BIT / ENET_INTERFRAMEGAP_72BIT / ENET_INTERFRAMEGAP_64BIT / ENET_INTERFRAMEGAP_56BIT / ENET_INTERFRAMEGAP_48BIT / ENET_INTERFRAMEGAP_40BIT</i>
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure ENET initialization parameters */

enet_initpara_reset();

enet_initpara_config(DMA_OPTION, ENET_FLUSH_RXFRAME_ENABLE | ENET_SECO
NDFRAME_OPT_ENABLE | ENET_NORMAL_DESCRIPTOR);
  
```

enet_init

The description of enet_init is shown as below:

Table 3-176. Function enet_init

Function name	enet_init
Function prototype	ErrStatus enet_init(enet_mediemode_enum mediemode, enetcsumconf_enum checksum, enet_frmrecept_enum recept);
Function descriptions	initialize ENET peripheral with generally concerned parameters and the less cared parameters
Precondition	enet_deinit ()
The called functions	enet_phy_config /enet_phy_write_read
Input parameter{in}	
mediemode	PHY mode and mac loopback configurations, only one parameter can be selected
ENET_AUTO_NEGOTIATION	PHY auto negotiation
ENET_100M_FULLDUPLEX	100Mbit/s, full-duplex
ENET_100M_HALFDUPLEX	100Mbit/s, half-duplex
ENET_10M_FULLDUPLEX	10Mbit/s, full-duplex
ENET_10M_HALFDUPLEX	10Mbit/s, half-duplex
ENET_LOOPBACKMODE	MAC in loopback mode at the MII
Input parameter{in}	
checksum	IP frame checksum offload function, only one parameter can be selected
ENET_NO_AUTOCHECKSUM	disable IP frame checksum function
ENET_AUTOCHECKSUM_DROP_FAILFRAMES	enable IP frame checksum function
ENET_AUTOCHECKSUM_ACCEPT_FAILFR	enable IP frame checksum function, and the received frame with only payload error but no other errors will not be dropped

AMES	
Input parameter{in}	
recept	frame filter function, only one parameter can be selected
ENET_PROMISCUOUS_MODE	promiscuous mode enabled
ENET_RECEIVEALL	all received frame are forwarded to application
ENET_BROADCAST_FRAMES_PASS	the address filters pass all received broadcast frames
ENET_BROADCAST_FRAMES_DROP	the address filters filter all incoming broadcast frames
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```
/* initialize ENET */

ErrStatus enet_init_status;

enet_init_status = enet_init(ENET_AUTO_NEGOTIATION, ENET_AUTOCHECKSUM_DR
OP_FAILFRAMES, ENET_BROADCAST_FRAMES_PASS);
```

enet_software_reset

The description of **enet_software_reset** is shown as below:

Table 3-177. Function enet_software_reset

Function name	enet_software_reset
Function prototype	ErrStatus enet_software_reset(void);
Function descriptions	reset all core internal registers located in CLK_TX and CLK_RX
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```
/* reset ENET registers by software */

ErrStatus reval_state = ERROR;

reval_state = enet_software_reset();
```

enet_rxframe_size_get

The description of enet_rxframe_size_get is shown as below:

Table 3-178. Function enet_rxframe_size_get

Function name	enet_rxframe_size_get
Function prototype	uint32_t enet_rxframe_size_get(void);
Function descriptions	check receive frame valid and return frame size
Precondition	-
The called functions	enet_rxframe_drop()
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint32_t	size of received frame 0x0 - 0x3FFF

Example:

```
/* get received frame size */

uint32_t reval;

reval = enet_rxframe_size_get();
```

enet_descriptors_chain_init

The description of enet_descriptors_chain_init is shown as below:

Table 3-179. Function enet_descriptors_chain_init

Function name	enet_descriptors_chain_init
Function prototype	void enet_descriptors_chain_init(enet_dmadirection_enum direction);
Function descriptions	initialize the DMA Tx/Rx descriptors's parameters in chain mode
Precondition	-
The called functions	-
Input parameter{in}	
direction	the descriptors which users want to init only one parameter can be selected which is shown as below
<i>ENET_DMA_TX</i>	DMA Tx descriptors
<i>ENET_DMA_RX</i>	DMA Rx descriptors
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* initialize descriptors in chain mode */
```

```
enet_descriptors_chain_init(ENET_DMA_TX);
```

enet_descriptors_ring_init

The description of enet_descriptors_ring_init is shown as below:

Table 3-180. Function enet_descriptors_ring_init

Function name	enet_descriptors_ring_init
Function prototype	void enet_descriptors_ring_init(enet_dmadirection_enum direction);
Function descriptions	initialize the DMA Tx/Rx descriptors's parameters in ring mode
Precondition	-
The called functions	-
Input parameter{in}	
direction	the descriptors which users want to init only one parameter can be selected which is shown as below
<i>ENET_DMA_TX</i>	DMA Tx descriptors
<i>ENET_DMA_RX</i>	DMA Rx descriptors
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* initialize descriptors in ring mode */
enet_descriptors_ring_init(ENET_DMA_TX)
```

enet_frame_receive

The description of enet_frame_receive is shown as below:

Table 3-181. Function enet_frame_receive

Function name	enet_frame_receive
Function prototype	ErrStatus enet_frame_receive(uint8_t *buffer, uint32_t bufsize);
Function descriptions	handle current received frame data to application buffer
Precondition	-
The called functions	-
Input parameter{in}	
bufsize	the size of buffer which is the parameter in function, (0 -- 1524)
Output parameter{out}	
buffer	pointer to the received frame data if the input is NULL, user should copy data in application by himself
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```

/* receive frame from descriptor */

uint8_t data_buffer[1500];

uint32_t data_size;

enet_frame_receive(data_buffer, &data_size);

enet_frame_transmit
  
```

The description of enet_frame_transmit is shown as below:

Table 3-182. Function enet_frame_transmit

Function name	enet_frame_transmit
Function prototype	ErrStatus enet_frame_transmit(uint8_t *buffer, uint32_t length);
Function descriptions	handle application buffer data to transmit it
Precondition	-
The called functions	-
Input parameter{in}	
buffer	pointer to the frame data to be transmitted if the input is NULL, user should handle the data in application by himself
Input parameter{in}	
length	the length of frame data to be transmitted, (0 -- 1524)
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```

/* transmit ENET frame */

uint8_t data_buffer[1500];

uint32_t data_size= 800;

enet_frame_transmit (data_buffer, data_size);
  
```

enet_transmit_checksum_config

The description of enet_transmit_checksum_config is shown as below:

Table 3-183. Function enet_transmit_checksum_config

Function name	enet_transmit_checksum_config
Function prototype	void enet_transmit_checksum_config(enet_descriptors_struct *desc, uint32_t checksum);
Function descriptions	configure the transmit IP frame checksum offload calculation and insertion
Precondition	-
The called functions	-

Input parameter{in}	
desc	the descriptor pointer which users want to configure, the structure members can refer to Table 3-172. Structure enet_descriptors struct
Input parameter{in}	
checksum	IP frame checksum configuration only one parameter can be selected which is shown as below
<i>ENET_CHECKSUM_DISABLE</i>	checksum insertion disabled
<i>ENET_CHECKSUM_IP_V4HEADER</i>	only IP header checksum calculation and insertion are enabled
<i>ENET_CHECKSUM_TCUPDPICMP_SEGMENT</i>	TCP/UDP/ICMP checksum insertion calculated but pseudo-header
<i>ENET_CHECKSUM_TCUPDPICMP_FULL</i>	TCP/UDP/ICMP checksum insertion fully calculated
Output parameter{out}	
Return value	

Example:

```
/* configure IP frame checksum offload */

enet_descriptors_struct rx_desc;

enet_transmit_checksum_config(rx_desc, ENET_CHECKSUM_TCUPDPICMP_FULL);
```

enet_enable

The description of enet_enable is shown as below:

Table 3-184. Function enet_enable

Function name	enet_enable
Function prototype	void enet_enable(void);
Function descriptions	ENET Tx and Rx function enable (include MAC and DMA module)
Precondition	-
The called functions	enet_tx_enable() /enet_rx_enable()
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ENET */
```

```
enet_enable();
```

enet_disable

The description of enet_disable is shown as below:

Table 3-185. Function enet_disable

Function name	enet_disable
Function prototype	void enet_disable(void);
Function descriptions	ENET Tx and Rx function disable (include MAC and DMA module)
Precondition	-
The called functions	enet_tx_disable() /enet_rx_disable()
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ENET */
```

```
enet_disable();
```

enet_mac_address_set

The description of enet_mac_address_set is shown as below:

Table 3-186. Function enet_mac_address_set

Function name	enet_mac_address_set
Function prototype	void enet_mac_address_set(enet_macaddress_enum mac_addr, uint8_t paddr[]);
Function descriptions	configure MAC address
Precondition	-
The called functions	-
Input parameter{in}	
mac_addr	select which MAC address will be set only one parameter can be selected which is shown as below
<i>ENET_MAC_ADDRESS_S0</i>	set MAC address 0 filter
<i>ENET_MAC_ADDRESS_S1</i>	set MAC address 1 filter
<i>ENET_MAC_ADDRESS_S2</i>	set MAC address 2 filter

<i>ENET_MAC_ADDRESS</i> S3	set MAC address 3 filter
Input parameter{in}	
paddr	the buffer pointer which stores the MAC address little-ending store, such as MAC address is aa:bb:cc:dd:ee:22, the buffer is {22, ee, dd, cc, bb, aa}
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set ENET MAC address */

netif->hwaddr[0] = 0x02;
netif->hwaddr[1] = 0xaa;
netif->hwaddr[2] = 0xbb;
netif->hwaddr[3] = 0xcc;
netif->hwaddr[4] = 0xdd;
netif->hwaddr[5] = 0xee;

enet_mac_address_set(ENET_MAC_ADDRESS0, netif->hwaddr);
```

enet_mac_address_get

The description of `enet_mac_address_get` is shown as below:

Table 3-187. Function `enet_mac_address_get`

Function name	enet_mac_address_get
Function prototype	void enet_mac_address_get(enet_macaddress_enum mac_addr, uint8_t paddr[]);
Function descriptions	get MAC address
Precondition	-
The called functions	-
Input parameter{in}	
mac_addr	select which MAC address will be set only one parameter can be selected which is shown as below
<i>ENET_MAC_ADDRESS</i> S0	set MAC address 0 filter
<i>ENET_MAC_ADDRESS</i> S1	set MAC address 1 filter
<i>ENET_MAC_ADDRESS</i>	set MAC address 2 filter

S2	
ENET_MAC_ADDRESS S3	set MAC address 3 filter
Output parameter{out}	
paddr	the buffer pointer which stores the MAC address little-ending store, such as MAC address is aa:bb:cc:dd:ee:22, the buffer is {22, ee, dd, cc, bb, aa}
Return value	
-	-

Example:

```
/* get ENET MAC address */
enet_mac_address_get (ENET_MAC_ADDRESS0, netif->hwaddr);
```

enet_flag_get

The description of enet_flag_get is shown as below:

Table 3-188. Function enet_flag_get

Function name	enet_flag_get
Function prototype	FlagStatus enet_flag_get(enet_flag_enum enet_flag);
Function descriptions	get the ENET MAC/MSC/PTP/DMA status flag
Precondition	-
The called functions	-
Input parameter{in}	
enet_flag	ENET status flag, refer to enet_flag_enum only one parameter can be selected which is shown as below
ENET_MAC_FLAG_MP KR	magic packet received flag
ENET_MAC_FLAG_W UFR	wakeup frame received flag
ENET_MAC_FLAG_FL OWCONTROL	flow control status flag
ENET_MAC_FLAG_W UM	WUM status flag
ENET_MAC_FLAG_MS C	MSC status flag
ENET_MAC_FLAG_MS CR	MSC receive status flag
ENET_MAC_FLAG_MS CT	MSC transmit status flag
ENET_MAC_FLAG_TM ST	time stamp trigger status flag

<i>ENET_PTP_FLAG_TS</i> SCO	timestamp second counter overflow flag
<i>ENET_PTP_FLAG_TT</i> M	target time match flag
<i>ENET_MSC_FLAG_RF</i> CE	received frames CRC error flag
<i>ENET_MSC_FLAG_RF</i> AE	received frames alignment error flag
<i>ENET_MSC_FLAG_RG</i> UF	received good unicast frames flag
<i>ENET_MSC_FLAG_TG</i> FSC	transmitted good frames single collision flag
<i>ENET_MSC_FLAG_TG</i> FMSC	transmitted good frames more single collision flag
<i>ENET_MSC_FLAG_TG</i> F	transmitted good frames flag
<i>ENET_DMA_FLAG_TS</i>	transmit status flag
<i>ENET_DMA_FLAG_TP</i> S	transmit process stopped status flag
<i>ENET_DMA_FLAG_TB</i> U	transmit buffer unavailable status flag
<i>ENET_DMA_FLAG_TJ</i> T	transmit jabber timeout status flag
<i>ENET_DMA_FLAG_RO</i>	receive overflow status flag
<i>ENET_DMA_FLAG_TU</i>	transmit underflow status flag
<i>ENET_DMA_FLAG_RS</i>	receive status flag
<i>ENET_DMA_FLAG_RB</i> U	receive buffer unavailable status flag
<i>ENET_DMA_FLAG_RP</i> S	receive process stopped status flag
<i>ENET_DMA_FLAG_RW</i> WT	receive watchdog timeout status flag
<i>ENET_DMA_FLAG_ET</i>	early transmit status flag
<i>ENET_DMA_FLAG_FB</i> E	fatal bus error status flag
<i>ENET_DMA_FLAG_ER</i>	early receive status flag
<i>ENET_DMA_FLAG_AI</i>	abnormal interrupt summary flag
<i>ENET_DMA_FLAG_NI</i>	normal interrupt summary flag
<i>ENET_DMA_FLAG_EB</i> _DMA_ERROR	DMA error flag
<i>ENET_DMA_FLAG_EB</i> _TRANSFER_ERROR	transfer error flag
<i>ENET_DMA_FLAG_EB</i>	access error flag

<i>_ACCESS_ERROR</i>	
<i>ENET_DMA_FLAG_MS_C</i>	MSC status flag
<i>ENET_DMA_FLAG_WUM</i>	WUM status flag
<i>ENET_DMA_FLAG_TS_T</i>	timestamp trigger status flag
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get ENET flag */
enet_flag_get (ENET_DMA_FLAG_RS);
```

enet_flag_clear

The description of **enet_flag_clear** is shown as below:

Table 3-189. Function enet_flag_clear

Function name	enet_flag_clear
Function prototype	void enet_flag_clear(enet_flag_clear_enum enet_flag);
Function descriptions	clear the ENET DMA status flag
Precondition	-
The called functions	-
Input parameter{in}	
enet_flag	ENET DMA flag clear, refer to enet_flag_clear_enum only one parameter can be selected which is shown as below
<i>ENET_DMA_FLAG_TS_CLR</i>	transmit status flag clear
<i>ENET_DMA_FLAG_TP_S_CLR</i>	transmit process stopped status flag clear
<i>ENET_DMA_FLAG_TB_U_CLR</i>	transmit buffer unavailable status flag clear
<i>ENET_DMA_FLAG_TJ_T_CLR</i>	transmit jabber timeout status flag clear
<i>ENET_DMA_FLAG_RO_CLR</i>	receive overflow status flag clear
<i>ENET_DMA_FLAG_TU_CLR</i>	transmit underflow status flag clear
<i>ENET_DMA_FLAG_RS_CLR</i>	receive status flag clear

<i>ENET_DMA_FLAG_RB_U_CLR</i>	receive buffer unavailable status flag clear
<i>ENET_DMA_FLAG_RP_S_CLR</i>	receive process stopped status flag clear
<i>ENET_DMA_FLAG_R_WT_CLR</i>	receive watchdog timeout status flag clear
<i>ENET_DMA_FLAG_ET_CLR</i>	early transmit status flag clear
<i>ENET_DMA_FLAG_FB_E_CLR</i>	fatal bus error status flag clear
<i>ENET_DMA_FLAG_ER_CLR</i>	early receive status flag clear
<i>ENET_DMA_FLAG_AI_CLR</i>	abnormal interrupt summary flag clear
<i>ENET_DMA_FLAG_NI_CLR</i>	normal interrupt summary flag clear
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear ENET flag */
enet_flag_clear(ENET_DMA_FLAG_RS_CLR);
```

enet_interrupt_enable

The description of enet_interrupt_enable is shown as below:

Table 3-190. Function enet_interrupt_enable

Function name	enet_interrupt_enable
Function prototype	void enet_interrupt_enable(enet_int_enum enet_int);
Function descriptions	enable ENET MAC/MSC/DMA interrupt
Precondition	-
The called functions	-
Input parameter{in}	
enet_int	ENET interrupt only one parameter can be selected which is shown as below
<i>ENET_MAC_INT_WUM_IM</i>	WUM interrupt mask
<i>ENET_MAC_INT_TMS_TIM</i>	timestamp trigger interrupt mask
<i>ENET_MSC_INT_RFC</i>	received frame CRC error interrupt mask

<i>EIM</i>	
<i>ENET_MSC_INT_RFA_EIM</i>	received frames alignment error interrupt mask
<i>ENET_MSC_INT_RGU_FIM</i>	received good unicast frames interrupt mask
<i>ENET_MSC_INT_TGF_SCIM</i>	transmitted good frames single collision interrupt mask
<i>ENET_MSC_INT_TGF_MSCIM</i>	transmitted good frames more single collision interrupt mask
<i>ENET_MSC_INT_TGFI_M</i>	transmitted good frames interrupt mask
<i>ENET_DMA_INT_TIE</i>	transmit interrupt enable
<i>ENET_DMA_INT_TPSI_E</i>	transmit process stopped interrupt enable
<i>ENET_DMA_INT_TBUI_E</i>	transmit buffer unavailable interrupt enable
<i>ENET_DMA_INT_TJTI_E</i>	transmit jabber timeout interrupt enable
<i>ENET_DMA_INT_ROIE</i>	receive overflow interrupt enable
<i>ENET_DMA_INT_TUIE</i>	transmit underflow interrupt enable
<i>ENET_DMA_INT_RIE</i>	receive interrupt enable
<i>ENET_DMA_INT_RBUI_E</i>	receive buffer unavailable interrupt enable
<i>ENET_DMA_INT_RPSI_E</i>	receive process stopped interrupt enable
<i>ENET_DMA_INT_RWT_IE</i>	receive watchdog timeout interrupt enable
<i>ENET_DMA_INT_ETIE</i>	early transmit interrupt enable
<i>ENET_DMA_INT_FBEI_E</i>	fatal bus error interrupt enable
<i>ENET_DMA_INT_ERIE</i>	early receive interrupt enable
<i>ENET_DMA_INT_AIE</i>	abnormal interrupt summary enable
<i>ENET_DMA_INT_NIE</i>	normal interrupt summary enable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ENET interrupt */
enet_interrupt_enable(ENET_DMA_INT_NIE);
```

enet_interrupt_disable

The description of enet_interrupt_disable is shown as below:

Table 3-191. Function enet_interrupt_disable

Function name	enet_interrupt_disable
Function prototype	void enet_interrupt_disable(enet_int_enum enet_int);
Function descriptions	disable ENET MAC/MSC/DMA interrupt
Precondition	-
The called functions	-
Input parameter{in}	
enet_int	ENET interrupt only one parameter can be selected which is shown as below
<i>ENET_MAC_INT_WUM IM</i>	WUM interrupt mask
<i>ENET_MAC_INT_TMS TIM</i>	timestamp trigger interrupt mask
<i>ENET_MSC_INT_RFC EIM</i>	received frame CRC error interrupt mask
<i>ENET_MSC_INT_RFA EIM</i>	received frames alignment error interrupt mask
<i>ENET_MSC_INT_RGU FIM</i>	received good unicast frames interrupt mask
<i>ENET_MSC_INT_TGF SCIM</i>	transmitted good frames single collision interrupt mask
<i>ENET_MSC_INT_TGF MSCIM</i>	transmitted good frames more single collision interrupt mask
<i>ENET_MSC_INT_TGFI M</i>	transmitted good frames interrupt mask
<i>ENET_DMA_INT_TIE</i>	transmit interrupt enable
<i>ENET_DMA_INT_TPSI E</i>	transmit process stopped interrupt enable
<i>ENET_DMA_INT_TBUI E</i>	transmit buffer unavailable interrupt enable
<i>ENET_DMA_INT_TJTI E</i>	transmit jabber timeout interrupt enable
<i>ENET_DMA_INT_ROIE</i>	receive overflow interrupt enable
<i>ENET_DMA_INT_TUIE</i>	transmit underflow interrupt enable
<i>ENET_DMA_INT_RIE</i>	receive interrupt enable
<i>ENET_DMA_INT_RBUI E</i>	receive buffer unavailable interrupt enable
<i>ENET_DMA_INT_RPSI E</i>	receive process stopped interrupt enable
<i>ENET_DMA_INT_RWT</i>	receive watchdog timeout interrupt enable

<i>IE</i>	
<i>ENET_DMA_INT_ETIE</i>	early transmit interrupt enable
<i>ENET_DMA_INT_FBEI_E</i>	fatal bus error interrupt enable
<i>ENET_DMA_INT_ERIE</i>	early receive interrupt enable
<i>ENET_DMA_INT_AIE</i>	abnormal interrupt summary enable
<i>ENET_DMA_INT_NIE</i>	normal interrupt summary enable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ENET interrupt */
enet_interrupt_disable(ENET_DMA_INT_NIE);
```

enet_interrupt_flag_get

The description of enet_interrupt_flag_get is shown as below:

Table 3-192. Function enet_interrupt_flag_get

Function name	enet_interrupt_flag_get
Function prototype	FlagStatus enet_interrupt_flag_get(enet_int_flag_enum int_flag);
Function descriptions	get ENET MAC/MSC/DMA interrupt flag
Precondition	-
The called functions	-
Input parameter{in}	
<i>int_flag</i>	ENET interrupt flag only one parameter can be selected which is shown as below
<i>ENET_MAC_INT_FLA_G_WUM</i>	WUM status flag
<i>ENET_MAC_INT_FLA_G_MSC</i>	MSC status flag
<i>ENET_MAC_INT_FLA_G_MSCR</i>	MSC receive status flag
<i>ENET_MAC_INT_FLA_G_MSCT</i>	MSC transmit status flag
<i>ENET_MAC_INT_FLA_G_TMST</i>	time stamp trigger status flag
<i>ENET_MSC_INT_FLA_G_RFCE</i>	received frames CRC error flag
<i>ENET_MSC_INT_FLA_G_RFAE</i>	received frames alignment error flag

<i>ENET_MSC_INT_FLA</i> <i>G_RGUF</i>	received good unicast frames flag
<i>ENET_MSC_INT_FLA</i> <i>G_TGFSC</i>	transmitted good frames single collision flag
<i>ENET_MSC_INT_FLA</i> <i>G_TGFMSC</i>	transmitted good frames more single collision flag
<i>ENET_MSC_INT_FLA</i> <i>G_TGF</i>	transmitted good frames flag
<i>ENET_DMA_INT_FLA</i> <i>G_TS</i>	transmit status flag
<i>ENET_DMA_INT_FLA</i> <i>G_TPS</i>	transmit process stopped status flag
<i>ENET_DMA_INT_FLA</i> <i>G_TBU</i>	transmit buffer unavailable status flag
<i>ENET_DMA_INT_FLA</i> <i>G_TJT</i>	transmit jabber timeout status flag
<i>ENET_DMA_INT_FLA</i> <i>G_RO</i>	receive overflow status flag
<i>ENET_DMA_INT_FLA</i> <i>G_TU</i>	transmit underflow status flag
<i>ENET_DMA_INT_FLA</i> <i>G_RS</i>	receive status flag
<i>ENET_DMA_INT_FLA</i> <i>G_RBU</i>	receive buffer unavailable status flag
<i>ENET_DMA_INT_FLA</i> <i>G_RPS</i>	receive process stopped status flag
<i>ENET_DMA_INT_FLA</i> <i>G_RWT</i>	receive watchdog timeout status flag
<i>ENET_DMA_INT_FLA</i> <i>G_ET</i>	early transmit status flag
<i>ENET_DMA_INT_FLA</i> <i>G_FBE</i>	fatal bus error status flag
<i>ENET_DMA_INT_FLA</i> <i>G_ER</i>	early receive status flag
<i>ENET_DMA_INT_FLA</i> <i>G_AI</i>	abnormal interrupt summary flag
<i>ENET_DMA_INT_FLA</i> <i>G_NI</i>	normal interrupt summary flag
<i>ENET_DMA_INT_FLA</i> <i>G_MSC</i>	MSC status flag
<i>ENET_DMA_INT_FLA</i> <i>G_WUM</i>	WUM status flag
<i>ENET_DMA_INT_FLA</i>	timestamp trigger status flag

<i>G_TST</i>	
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get ENET interrupt flag */
enet_interrupt_flag_get(ENET_DMA_INT_FLAG_RS);
```

enet_interrupt_flag_clear

The description of enet_interrupt_flag_clear is shown as below:

Table 3-193. Function enet_interrupt_flag_clear

Function name	enet_interrupt_flag_clear
Function prototype	void enet_interrupt_flag_clear(enet_int_flag_clear_enum int_flag_clear);
Function descriptions	clear ENET DMA interrupt flag
Precondition	-
The called functions	-
Input parameter{in}	
<i>int_flag_clear</i>	clear ENET interrupt flag only one parameter can be selected which is shown as below
<i>ENET_DMA_INT_FLA_G_TS_CLR</i>	transmit status flag
<i>ENET_DMA_INT_FLA_G_TPS_CLR</i>	transmit process stopped status flag
<i>ENET_DMA_INT_FLA_G_TBU_CLR</i>	transmit buffer unavailable status flag
<i>ENET_DMA_INT_FLA_G_TJT_CLR</i>	transmit jabber timeout status flag
<i>ENET_DMA_INT_FLA_G_RO_CLR</i>	receive overflow status flag
<i>ENET_DMA_INT_FLA_G_TU_CLR</i>	transmit underflow status flag
<i>ENET_DMA_INT_FLA_G_RS_CLR</i>	receive status flag
<i>ENET_DMA_INT_FLA_G_RBU_CLR</i>	receive buffer unavailable status flag
<i>ENET_DMA_INT_FLA_G_RPS_CLR</i>	receive process stopped status flag
<i>ENET_DMA_INT_FLA_G_RWT_CLR</i>	receive watchdog timeout status flag

<i>ENET_DMA_INT_FLAG_G_CLR</i>	early transmit status flag
<i>ENET_DMA_INT_FLAG_G_FBE_CLR</i>	fatal bus error status flag
<i>ENET_DMA_INT_FLAG_G_ER_CLR</i>	early receive status flag
<i>ENET_DMA_INT_FLAG_G_AI_CLR</i>	abnormal interrupt summary flag
<i>ENET_DMA_INT_FLAG_G_NI_CLR</i>	normal interrupt summary flag
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear ENET interrupt flag */
enet_interrupt_flag_clear(ENET_DMA_INT_FLAG_RS);
```

enet_tx_enable

The description of enet_tx_enable is shown as below:

Table 3-194. Function enet_tx_enable

Function name	enet_tx_enable
Function prototype	void enet_tx_enable(void);
Function descriptions	ENET tx function enable (include MAC and DMA module)
Precondition	-
The called functions	enet_txfifo_flush()
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ENET tx function */
enet_tx_enable();
```

enet_tx_disable

The description of enet_tx_disable is shown as below:

Table 3-195. Function enet_tx_disable

Function name	enet_tx_disable
Function prototype	void enet_tx_disable(void);
Function descriptions	ENET Tx function disable (include MAC and DMA module)
Precondition	-
The called functions	enet_txfifo_flush()
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ENET tx function */

enet_tx_disable();
```

enet_rx_enable

The description of enet_rx_enable is shown as below:

Table 3-196. Function enet_rx_enable

Function name	enet_rx_enable
Function prototype	void enet_rx_enable(void);
Function descriptions	ENET Rx function enable (include MAC and DMA module)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ENET rx function */

enet_rx_enable();
```

enet_rx_disable

The description of enet_rx_disable is shown as below:

Table 3-197. Function enet_rx_disable

Function name	enet_rx_disable
----------------------	-----------------

Function prototype	void enet_rx_disable(void);
Function descriptions	ENET Rx function disable (include MAC and DMA module)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ENET rx function */
enet_rx_disable();
```

enet_registers_get

The description of `enet_registers_get` is shown as below:

Table 3-198. Function `enet_registers_get`

Function name	enet_registers_get
Function prototype	void enet_registers_get(enet_registers_type_enum type, uint32_t *preg, uint32_t num);
Function descriptions	put registers value into the application buffer
Precondition	-
The called functions	-
Input parameter{in}	
type	register type which will be get only one parameter can be selected which is show n as below
<i>ALL_MAC_REG</i>	get the registers within the offset scope range ENET_MAC_CFG to ENET_MAC_FCTL
<i>ALL_MSC_REG</i>	get the registers within the offset scope range ENET_MSC_CTL to ENET_MSC_RGUFCTN
<i>ALL_PTP_REG</i>	get the registers within the offset scope range ENET_PTP_TSCTL to ENET_PTP_PPSCTL
<i>ALL_DMA_REG</i>	get the registers within the offset scope range ENET_DMA_BCTL to ENET_DMA_CRBADDR
Input parameter{in}	
num	the number of registers that the user want to get, (0 -- 54)
Output parameter{out}	
preg	the application buffer pointer for storing the register value
Return value	
-	-

Example:

```

/* get ENET registers value */

uint32_t register_buffer[5];

enet_registers_get(ALL_MAC_REG, 5, register_buffer);
  
```

enet_address_filter_enable

The description of enet_address_filter_enable is shown as below:

Table 3-199. Function enet_address_filter_enable

Function name	enet_address_filter_enable
Function prototype	void enet_address_filter_enable(enet_macaddress_enum mac_addr);
Function descriptions	enable the MAC address filter
Precondition	-
The called functions	--
Input parameter{in}	
mac_addr	select which MAC address will be enable only one parameter can be selected which is shown as below
<i>ENET_MAC_ADDRESS1</i>	enable MAC address 1 filter
<i>ENET_MAC_ADDRESS2</i>	enable MAC address 2 filter
<i>ENET_MAC_ADDRESS3</i>	enable MAC address 3 filter
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* enable ENET MAC address filter */

enet_address_filter_enable(ENET_MAC_ADDRESS1);
  
```

enet_address_filter_disable

The description of enet_address_filter_disable is shown as below:

Table 3-200. Function enet_address_filter_disable

Function name	enet_address_filter_disable
Function prototype	void enet_address_filter_disable(enet_macaddress_enum mac_addr);
Function descriptions	disable the MAC address filter
Precondition	-
The called functions	-

Input parameter{in}	
mac_addr	select which MAC address will be enable only one parameter can be selected which is shown as below
<i>ENET_MAC_ADDRESS_S1</i>	enable MAC address 1 filter
<i>ENET_MAC_ADDRESS_S2</i>	enable MAC address 2 filter
<i>ENET_MAC_ADDRESS_S3</i>	enable MAC address 3 filter
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ENET MAC address filter */
enet_address_filter_disable(ENET_MAC_ADDRESS1);
```

enet_address_filter_config

The description of enet_address_filter_config is shown as below:

Table 3-201. Function enet_address_filter_config

Function name	enet_address_filter_config
Function prototype	void enet_address_filter_config(enet_macaddress_enum mac_addr, uint32_t addr_mask, uint32_t filter_type);
Function descriptions	configure the MAC address filter
Precondition	-
The called functions	-
Input parameter{in}	
mac_addr	select which MAC address will be enable only one parameter can be selected which is shown as below
<i>ENET_MAC_ADDRESS_S1</i>	enable MAC address 1 filter
<i>ENET_MAC_ADDRESS_S2</i>	enable MAC address 2 filter
<i>ENET_MAC_ADDRESS_S3</i>	enable MAC address 3 filter
Input parameter{in}	
addr_mask	select which MAC address bytes will be mask one or more parameters can be selected which are shown as below
<i>ENET_ADDRESS_MASK_BYTE0</i>	mask ENET_MAC_ADDR1L[7:0] bits

<i>ENET_ADDRESS_MAC_BYTE1</i>	mask ENET_MAC_ADDR1L[15:8] bits
<i>ENET_ADDRESS_MAC_BYTE2</i>	mask ENET_MAC_ADDR1L[23:16] bits
<i>ENET_ADDRESS_MAC_BYTE3</i>	mask ENET_MAC_ADDR1L [31:24] bits
<i>ENET_ADDRESS_MAC_BYTE4</i>	mask ENET_MAC_ADDR1H [7:0] bits
<i>ENET_ADDRESS_MAC_BYTE5</i>	mask ENET_MAC_ADDR1H [15:8] bits
Input parameter{in}	
filter_type	select which MAC address filter type will be selected only one parameter can be selected which is shown as below
<i>ENET_ADDRESS_FILTER_ER_SA</i>	The MAC address is used to compared with the SA field of the received frame
<i>ENET_ADDRESS_FILTER_ER_DA</i>	The MAC address is used to compared with the DA field of the received frame
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ENET MAC address filter */
enet_address_filter_config(ENET_MAC_ADDRESS1, ENET_ADDRESS_MASK_BYTE0 |
ENET_ADDRESS_MASK_BYTE1 | ENET_ADDRESS_MASK_BYTE2, ENET_ADDRESS_
_FILTER_DA);
```

enet_phy_config

The description of enet_phy_config is shown as below:

Table 3-202. Function enet_phy_config

Function name	enet_phy_config
Function prototype	ErrStatus enet_phy_config(void);
Function descriptions	PHY interface configuration (configure SMI clock and reset PHY chip)
Precondition	-
The called functions	rcu_clock_freq_get()/enet_phy_write_read()
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	

ErrStatus	ERROR or SUCCESS
-----------	------------------

Example:

```
/* initialize PHY */
```

```
enet_phy_config();
```

enet_phy_write_read

The description of enet_phy_write_read is shown as below:

Table 3-203. Function enet_phy_write_read

Function name	enet_phy_write_read
Function prototype	ErrStatus enet_phy_write_read(enet_phydirection_enum direction, uint16_t phy_address, uint16_t phy_reg, uint16_t *pvalue);
Function descriptions	w rite to / read from a PHY register
Precondition	-
The called functions	-
Input parameter{in}	
direction	only one parameter can be selected w hich is show n as below
<i>ENET_PHY_WRITE</i>	w rite data to phy register
<i>ENET_PHY_READ</i>	read data from phy register
Input parameter{in}	
phy_address	0x0 - 0x1F
Input parameter{in}	
phy_reg	0x0 - 0x1F
Input parameter{in}	
pvalue	the value w ill be w ritten to the PHY register in ENET_PHY_WRITE direction
Output parameter{out}	
pvalue	the value w ill be read from the PHY register in ENET_PHY_READ direction
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```
/* read the specified PHY register value */
```

```
uint16_t temp_phy = 0U;
```

```
phy_state = enet_phy_write_read(ENET_PHY_READ, PHY_ADDRESS, PHY_REG_BCR,
&temp_phy);
```

enet_phyloopback_enable

The description of enet_phyloopback_enable is shown as below:

Table 3-204. Function enet_phyloopback_enable

Function name	enet_phyloopback_enable
Function prototype	ErrStatus enet_phyloopback_enable(void);
Function descriptions	enable the loopback function of PHY chip
Precondition	-
The called functions	enet_phy_write_read()
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```
/* enable PHY loopback function */
phy_state = enet_phyloopback_enable();
```

enet_phyloopback_disable

The description of enet_phyloopback_disable is shown as below:

Table 3-205. Function enet_phyloopback_disable

Function name	enet_phyloopback_disable
Function prototype	ErrStatus enet_phyloopback_disable(void);
Function descriptions	disable the loopback function of PHY chip
Precondition	-
The called functions	enet_phy_write_read
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```
/* disable PHY loopback function */
phy_state = enet_phyloopback_disable();
```

enet_forward_feature_enable

The description of enet_forward_feature_enable is shown as below:

Table 3-206. Function enet_forward_feature_enable

Function name	enet_forward_feature_enable
----------------------	-----------------------------

Function prototype	void enet_forward_feature_enable(uint32_t feature);
Function descriptions	enable ENET forward feature
Precondition	-
The called functions	-
Input parameter{in}	
feature	the feature of ENET forward mode one or more parameters can be selected which are shown as below
<i>ENET_AUTO_PADCRC_DROP</i>	the function of the MAC strips the Pad/FCS field on received frames
<i>ENET_FORWARD_ER_RFRAMES</i>	the function that all frame received with error except runt error are forwarded to memory
<i>ENET_FORWARD_UNDERSZ_GOODFRAME_S</i>	the function that forwarding undersized good frames
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ENET forward feature */

enet_forward_feature_enable(ENET_AUTO_PADCRC_DROP);
```

enet_forward_feature_disable

The description of `enet_forward_feature_disable` is shown as below:

Table 3-207. Function `enet_forward_feature_disable`

Function name	enet_forward_feature_disable
Function prototype	void enet_forward_feature_disable(uint32_t feature);
Function descriptions	disable ENET forward feature
Precondition	-
The called functions	-
Input parameter{in}	
feature	the feature of ENET forward mode one or more parameters can be selected which are shown as below
<i>ENET_AUTO_PADCRC_DROP</i>	the function of the MAC strips the Pad/FCS field on received frames
<i>ENET_FORWARD_ER_RFRAMES</i>	the function that all frame received with error except runt error are forwarded to memory
<i>ENET_FORWARD_UNDERSZ_GOODFRAME_S</i>	the function that forwarding undersized good frames

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ENET forward feature */
enet_forward_feature_disable(ENET_AUTO_PADCRC_DROP);
```

enet_filter_feature_enable

The description of enet_filter_feature_enable is shown as below:

Table 3-208. Function enet_filter_feature_enable

Input parameter{in}	
feature	the feature of ENET filter mode one or more parameters can be selected which are shown as below
<i>ENET_SRC_FILTER</i>	filter source address function
<i>ENET_SRC_FILTER_INVERSE</i>	inverse source address filtering result function
<i>ENET_DEST_FILTER_INVERSE</i>	inverse DA filtering result function
<i>ENET_MULTICAST_FILTER_PASS</i>	pass all multicast frames function
<i>ENET_MULTICAST_FILTER_HASH_MODE</i>	HASH multicast filter function
<i>ENET_UNICAST_FILTER_HASH_MODE</i>	HASH unicast filter function
<i>ENET_FILTER_MODE_EITHER</i>	HASH or perfect filter function
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ENET filter feature */
enet_filter_feature_enable(ENET_SRC_FILTER);
```

enet_filter_feature_disable

The description of enet_filter_feature_disable is shown as below:

Table 3-209. Function enet_filter_feature_disable

Function name	enet_filter_feature_disable
Function prototype	void enet_filter_feature_disable(uint32_t feature);
Function descriptions	disable ENET filter feature
Precondition	-
The called functions	-
Input parameter{in}	
feature	the feature of ENET filter mode one or more parameters can be selected which are shown as below
<i>ENET_SRC_FILTER</i>	filter source address function
<i>ENET_SRC_FILTER_INVERSE</i>	inverse source address filtering result function
<i>ENET_DEST_FILTER_INVERSE</i>	inverse DA filtering result function
<i>ENET_MULTICAST_FILTER_PASS</i>	pass all multicast frames function
<i>ENET_MULTICAST_FILTER_HASH_MODE</i>	HASH multicast filter function
<i>ENET_UNICAST_FILTER_HASH_MODE</i>	HASH unicast filter function
<i>ENET_FILTER_MODE_EITHER</i>	HASH or perfect filter function
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ENET filter feature */
enet_filter_feature_disable(ENET_SRC_FILTER_INVERSE);
```

enet_pauseframe_generate

The description of enet_pauseframe_generate is shown as below:

Table 3-210. Function enet_pauseframe_generate

Function name	enet_pauseframe_generate
Function prototype	ErrStatus enet_pauseframe_generate(void);
Function descriptions	generate the pause frame, ENET will send pause frame after enable transmit flow control this function only use in full-duplex mode

Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```
/* generate ENET pause frame */
```

```
ErrStatus rval;
```

```
rval = enet_pauseframe_generate();
```

enet_pauseframe_detect_config

The description of enet_pauseframe_detect_config is shown as below:

Table 3-211. Function enet_pauseframe_detect_config

Function name	enet_pauseframe_detect_config
Function prototype	void enet_pauseframe_detect_config(uint32_t detect);
Function descriptions	configure the pause frame detect type
Precondition	-
The called functions	-
Input parameter{in}	
detect	pause frame detect type only one parameter can be selected which is shown as below
<i>ENET_MAC0_AND_UNIQUE_ADDRESS_PAUSEDTECT</i>	besides the unique multicast address, MAC can also use the MAC0 address to detecting pause frame
<i>ENET_UNIQUE_PAUSEDTECT</i>	only the unique multicast address for pause frame which is specified in IEEE802.3 can be detected
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ENET pause frame detect type */
```

```
enet_pauseframe_detect_config(ENET_UNIQUE_PAUSEDTECT);
```

enet_pauseframe_config

The description of enet_pauseframe_config is shown as below:

Table 3-212. Function enet_pauseframe_config

Function name	enet_pauseframe_config
Function prototype	void enet_pauseframe_config(uint32_t pausetime, uint32_t pause_threshold);
Function descriptions	configure the pause frame parameters
Precondition	-
The called functions	-
Input parameter{in}	
pausetime	pause time in transmit pause control frame, (0 – 0xFFFF)
Input parameter{in}	
pause_threshold	the threshold of the pause timer for retransmitting frames automatically, this value must make sure to be less than configured pause time, only one parameter can be selected which is shown as below
<i>ENET_PAUSETIME_MINUS4</i>	pause time minus 4 slot times
<i>ENET_PAUSETIME_MINUS28</i>	pause time minus 28 slot times
<i>ENET_PAUSETIME_MINUS144</i>	pause time minus 144 slot times
<i>ENET_PAUSETIME_MINUS256</i>	pause time minus 256 slot times
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ENET pause frame */
enet_pauseframe_config(30, ENET_PAUSETIME_MINUS4);
```

enet_flowcontrol_threshold_config

The description of enet_flowcontrol_threshold_config is shown as below:

Table 3-213. Function enet_flowcontrol_threshold_config

Function name	enet_flowcontrol_threshold_config
Function prototype	void enet_flowcontrol_threshold_config(uint32_t deactive, uint32_t active);
Function descriptions	configure the threshold of the flow control(deactive and active threshold)
Precondition	-
The called functions	-

Input parameter{in}	
deactive	the threshold of the deactive flow control, this value should always be less than active flow control value, only one parameter can be selected which is shown as below
<i>ENET_DEACTIVE_TH RESHOLD_256BYTES</i>	threshold level is 256 bytes
<i>ENET_DEACTIVE_TH RESHOLD_512BYTES</i>	threshold level is 512 bytes
<i>ENET_DEACTIVE_TH RESHOLD_768BYTES</i>	threshold level is 768 bytes
<i>ENET_DEACTIVE_TH RESHOLD_1024BYTE S</i>	threshold level is 1024 bytes
<i>ENET_DEACTIVE_TH RESHOLD_1280BYTE S</i>	threshold level is 1280 bytes
<i>ENET_DEACTIVE_TH RESHOLD_1536BYTE S</i>	threshold level is 1536 bytes
<i>ENET_DEACTIVE_TH RESHOLD_1792BYTE S</i>	threshold level is 1792 bytes
Input parameter{in}	
active	the threshold of the active flow control, only one parameter can be selected which is shown as below
<i>ENET_ACTIVE_THRE SHOLD_256BYTES</i>	threshold level is 256 bytes
<i>ENET_ACTIVE_THRE SHOLD_512BYTES</i>	threshold level is 512 bytes
<i>ENET_ACTIVE_THRE SHOLD_768BYTES</i>	threshold level is 768 bytes
<i>ENET_ACTIVE_THRE SHOLD_1024BYTES</i>	threshold level is 1024 bytes
<i>ENET_ACTIVE_THRE SHOLD_1280BYTES</i>	threshold level is 1280 bytes
<i>ENET_ACTIVE_THRE SHOLD_1536BYTES</i>	threshold level is 1536 bytes
<i>ENET_ACTIVE_THRE SHOLD_1792BYTES</i>	threshold level is 1792 bytes
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure ENET flowcontrol threshold value */

enet_flowcontrol_threshold_config(ENET_DEACTIVE_THRESHOLD_256BYTES, ENET_ACTIVE_THRESHOLD_256BYTES);
```

enet_flowcontrol_feature_enable

The description of enet_flowcontrol_feature_enable is shown as below:

Table 3-214. Function enet_flowcontrol_feature_enable

Function name	enet_flow control_feature_enable
Function prototype	void enet_flow control_feature_enable(uint32_t feature);
Function descriptions	enable ENET flow control feature
Precondition	-
The called functions	-
Input parameter{in}	
feature	the feature of ENET flow control mode one or more parameters can be selected which are shown as below
<i>ENET_ZERO_QUANT_A_PAUSE</i>	the automatic zero-quanta generation function
<i>ENET_TX_FLOWCONTROL</i>	the flow control operation in the MAC
<i>ENET_RX_FLOWCONTROL</i>	decoding function for the received pause frame and process it
<i>ENET_BACK_PRESSURE</i>	back pressure operation in the MAC(only use in half-duplex mode)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable ENET flowcontrol feature */

enet_flowcontrol_feature_enable(ENET_ZERO_QUANTA_PAUSE);
```

enet_flowcontrol_feature_disable

The description of enet_flowcontrol_feature_disable is shown as below:

Table 3-215. Function enet_flowcontrol_feature_disable

Function name	enet_flow control_feature_disable
Function prototype	void enet_flow control_feature_disable(uint32_t feature);
Function descriptions	disable ENET flow control feature

Precondition	-
The called functions	-
Input parameter{in}	
feature	the feature of ENET flow control mode one or more parameters can be selected which are shown as below
<i>ENET_ZERO_QUANT_A_PAUSE</i>	the automatic zero-quanta generation function
<i>ENET_TX_FLOWCONTROL</i>	the flow control operation in the MAC
<i>ENET_RX_FLOWCONTROL</i>	decoding function for the received pause frame and process it
<i>ENET_BACK_PRESSURE</i>	back pressure operation in the MAC(only use in half-duplex mode)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable ENET flowcontrol feature */
enet_flowcontrol_feature_disable(ENET_ZERO_QUANTA_PAUSE);

enet_dmaprocess_state_get
```

The description of `enet_dmaprocess_state_get` is shown as below:

Table 3-216. Function `enet_dmaprocess_state_get`

Function name	enet_dmaprocess_state_get
Function prototype	uint32_t enet_dmaprocess_state_get(enet_dmadirection_enum direction);
Function descriptions	get the dma transmit/receive process state
Precondition	-
The called functions	-
Input parameter{in}	
direction	choose the direction of DMA process which users want to resume only one parameter can be selected which is shown as below
<i>ENET_DMA_TX</i>	DMA transmit process
<i>ENET_DMA_RX</i>	DMA receive process
Output parameter{out}	
-	-
Return value	
uint32_t	state of dma process, the value range shows below: <i>ENET_RX_STATE_STOPPED</i> / <i>ENET_RX_STATE_FETCHING</i> / <i>ENET_RX_STATE_WAITING</i> / <i>ENET_RX_STATE_SUSPENDED</i> /

	ENET_RX_STATE_CLOSING / ENET_RX_STATE_QUEUEING / ENET_TX_STATE_STOPPED / ENET_TX_STATE_FETCHING / ENET_TX_STATE_WAITING / ENET_TX_STATE_READING / ENET_TX_STATE_SUSPENDED / ENET_TX_STATE_CLOSING
--	--

Example:

```

/* get ENET dma receive process state */

uint32_t eval;

eval = enet_dmaprocess_state_get(ENET_DMA_RX);

if(ENET_RX_STATE_SUSPENDED == eval){

  do...

}

```

enet_dmaprocess_resume

The description of enet_dmaprocess_resume is shown as below:

Table 3-217. Function enet_dmaprocess_resume

Function name	enet_dmaprocess_resume
Function prototype	void enet_dmaprocess_resume(enet_dmadirection_enum direction);
Function descriptions	poll the DMA transmission/reception enable by writing any value to the ENET_DMA_TPEN/ENET_DMA_RPEN register, this will make the DMA to resume transmission/reception
Precondition	-
The called functions	-
Input parameter{in}	
direction	choose the direction of DMA process which users want to resume only one parameter can be selected which is shown as below
<i>ENET_DMA_TX</i>	DMA transmit process
<i>ENET_DMA_RX</i>	DMA receive process
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* resume ENET dma receive process */

enet_dmaprocess_resume(ENET_DMA_RX);

```

enet_rxprocess_check_recovery

The description of enet_rxprocess_check_recovery is shown as below:

Table 3-218. Function enet_rxprocess_check_recovery

Function name	enet_rxprocess_check_recovery
Function prototype	void enet_rxprocess_check_recovery(void);
Function descriptions	check and recover the Rx process
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* check and recovery ENET dma receive process */
enet_rxprocess_check_recovery();
```

enet_txfifo_flush

The description of enet_txfifo_flush is shown as below:

Table 3-219. Function enet_txfifo_flush

Function name	enet_txfifo_flush
Function prototype	ErrStatus enet_txfifo_flush(void);
Function descriptions	flush the ENET transmit FIFO, and wait until the flush operation completes
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```
/* flush ENET dma transmission FIFO */
ErrStatus eval;
eval = enet_txfifo_flush();
```

enet_current_desc_address_get

The description of enet_current_desc_address_get is shown as below:

Table 3-220. Function enet_current_desc_address_get

Function name	enet_current_desc_address_get
Function prototype	uint32_t enet_current_desc_address_get(enet_desc_reg_enum addr_get);
Function descriptions	get the transmit/receive address of current descriptor, or current buffer, or descriptor table
Precondition	-
The called functions	-
Input parameter{in}	
addr_get	choose the address which users want to get only one parameter can be selected which is shown as below
<i>ENET_RX_DESC_TAB LE</i>	the start address of the receive descriptor table
<i>ENET_RX_CURRENT_ DESC</i>	the start descriptor address of the current receive descriptor read by the RxDMA controller
<i>ENET_RX_CURRENT_ BUFFER</i>	the current receive buffer address being read by the RxDMA controller
<i>ENET_TX_DESC_TAB LE</i>	the start address of the transmit descriptor table
<i>ENET_TX_CURRENT_ DESC</i>	the start descriptor address of the current transmit descriptor read by the TxDMA controller
<i>ENET_TX_CURRENT_ BUFFER</i>	the current transmit buffer address being read by the TxDMA controller
Output parameter{out}	
-	-
Return value	
uint32_t	0- 0xFFFFFFFF

Example:

```
/* get current receive descriptor address */
uint32_t raval;
raval = enet_current_desc_address_get(ENET_RX_CURRENT_DESC);
```

enet_desc_information_get

The description of enet_desc_information_get is shown as below:

Table 3-221. Function enet_desc_information_get

Function name	enet_desc_information_get
Function prototype	uint32_t enet_desc_information_get(enet_descriptors_struct *desc, enetcstate_enum info_get);
Function descriptions	get the Tx or Rx descriptor information
Precondition	-
The called functions	-

Input parameter{in}	
desc	the descriptor pointer which users want to get information, the structure members can refer to Table 3-172. Structure enet_descriptors struct
Input parameter{in}	
info_get	the descriptor information type which is selected only one parameter can be selected which is shown as below
<i>RXDESC_BUFFER_1_SIZE</i>	receive buffer 1 size
<i>RXDESC_BUFFER_2_SIZE</i>	receive buffer 2 size
<i>RXDESC_FRAME_LENGTH</i>	the byte length of the received frame that was transferred to the buffer
<i>TXDESC_COLLISION_COUNT</i>	the number of collisions occurred before the frame was transmitted
<i>RXDESC_BUFFER_1_ADDR</i>	the buffer1 address of the Rx frame
<i>TXDESC_BUFFER_1_ADDR</i>	the buffer1 address of the Tx frame
Output parameter{out}	
-	-
Return value	
uint32_t	descriptor information if value is 0xFFFFFFFFU, means the false input parameter

Example:

```
/* get the information of specific receive descriptor */
uint32_t raval;
raval = enet_desc_information_get(rx_desc, RXDESC_FRAME_LENGTH);
```

enet_missed_frame_counter_get

The description of `enet_missed_frame_counter_get` is shown as below:

Table 3-222. Function enet_missed_frame_counter_get

Function name	enet_missed_frame_counter_get
Function prototype	void enet_missed_frame_counter_get(uint32_t *rxfifo_drop, uint32_t *rxdma_drop);
Function descriptions	get the number of missed frames during receiving
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	

rxfifo_drop	pointer to the number of frames dropped by RxFIFO
Output parameter{out}	
rxdma_drop	pointer to the number of frames missed by the RxDMA controller
Return value	
-	-

Example:

```
/* get the number of missed frames during receiving */
```

```
uint32_t fifo_cnt, dma_cnt;
```

```
enet_missed_frame_counter_get(&fifo_cnt, &dma_cnt);
```

enet_desc_flag_get

The description of enet_desc_flag_get is shown as below:

Table 3-223. Function enet_desc_flag_get

Function name	enet_desc_flag_get
Function prototype	FlagStatus enet_desc_flag_get(enet_descriptors_struct *desc, uint32_t desc_flag);
Function descriptions	get the bit flag of ENET DMA descriptor
Precondition	-
The called functions	-
Input parameter{in}	
desc	the descriptor pointer which users want to get flag, the structure members can refer to Table 3-172. Structure enet_descriptors_struct
Input parameter{in}	
desc_flag (the value according to the parameter desc)	the bit flag of ENET DMA descriptor only one parameter can be selected which is shown as below
When type of parameter desc is TX	
<i>ENET_TDES0_DB</i>	deferred
<i>ENET_TDES0_UFE</i>	underflow error
<i>ENET_TDES0_EXD</i>	excessive deferral
<i>ENET_TDES0_VFRM</i>	VLAN frame
<i>ENET_TDES0_ECO</i>	excessive collision
<i>ENET_TDES0_LCO</i>	late collision
<i>ENET_TDES0_NCA</i>	no carrier
<i>ENET_TDES0_LCA</i>	loss of carrier
<i>ENET_TDES0_IPPE</i>	IP payload error
<i>ENET_TDES0_FRMF</i>	frame flushed
<i>ENET_TDES0_JT</i>	jabber timeout
<i>ENET_TDES0_ES</i>	error summary
<i>ENET_TDES0_IPHE</i>	IP header error

<i>ENET_TDES0_TTMSS</i>	transmit timestamp status
<i>ENET_TDES0_TCHM</i>	the second address chained mode
<i>ENET_TDES0_TERM</i>	transmit end of ring mode
<i>ENET_TDES0_TTSEN</i>	transmit timestamp function enable
<i>ENET_TDES0_DPAD</i>	disable adding pad
<i>ENET_TDES0_DCRC</i>	disable CRC
<i>ENET_TDES0_FSG</i>	first segment
<i>ENET_TDES0_LSG</i>	last segment
<i>ENET_TDES0_INTC</i>	interrupt on completion
<i>ENET_TDES0_DAV</i>	DAV bit
When type of parameter desc is RX	
<i>ENET_RDES0_PCERR</i>	payload checksum error
<i>ENET_RDES0_CERR</i>	CRC error
<i>ENET_RDES0_DBERR</i>	dribble bit error
<i>ENET_RDES0_RERR</i>	receive error
<i>ENET_RDES0_RWDT</i>	receive watchdog timeout
<i>ENET_RDES0_FRMT</i>	frame type
<i>ENET_RDES0_LCO</i>	late collision
<i>ENET_RDES0_IPHER</i> <i>R</i>	IP frame header error
<i>ENET_RDES0_LDES</i>	last descriptor
<i>ENET_RDES0_FDES</i>	first descriptor
<i>ENET_RDES0_VTAG</i>	VLAN tag
<i>ENET_RDES0_OERR</i>	overflow error
<i>ENET_RDES0_LERR</i>	length error
<i>ENET_RDES0_SAFF</i>	SA filter fail
<i>ENET_RDES0_DERR</i>	descriptor error
<i>ENET_RDES0_ERRS</i>	error summary
<i>ENET_RDES0_DAFF</i>	destination address filter fail
<i>ENET_RDES0_DAV</i>	descriptor available
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get the bit flag of ENET DMA transmission descriptor */
FlagStatus eval;

eval = enet_desc_flag_get(p_txdesc, ENET_TDES0_TCHM);
```

enet_desc_flag_set

The description of enet_desc_flag_set is shown as below:

Table 3-224. Function enet_desc_flag_set

Function name	enet_desc_flag_set
Function prototype	void enet_desc_flag_set(enet_descriptors_struct *desc, uint32_t desc_flag);
Function descriptions	set the bit flag of ENET DMA descriptor
Precondition	-
The called functions	-
Input parameter{in}	
desc	the descriptor pointer which users want to set flag, the structure members can refer to Table 3-172. Structure enet_descriptors_struct
Input parameter{in}	
desc_flag (the value according to the parameter desc)	the bit flag of ENET DMA descriptor only one parameter can be selected which is shown as below
When type of parameter desc is TX	
<i>ENET_TDES0_VFRM</i>	VLAN frame
<i>ENET_TDES0_FRMF</i>	frame flushed
<i>ENET_TDES0_TCHM</i>	the second address chained mode
<i>ENET_TDES0_TERM</i>	transmit end of ring mode
<i>ENET_TDES0_TTSEN</i>	transmit timestamp function enable
<i>ENET_TDES0_DPAD</i>	disable adding pad
<i>ENET_TDES0_DCRC</i>	disable CRC
<i>ENET_TDES0_FSG</i>	first segment
<i>ENET_TDES0_LSG</i>	last segment
<i>ENET_TDES0_INTC</i>	interrupt on completion
<i>ENET_TDES0_DAV</i>	DAV bit
When type of parameter desc is RX	
<i>ENET_RDES0_DAV</i>	descriptor available
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set the bit flag of ENET DMA transmission descriptor */
enet_desc_flag_set(p_txdesc, ENET_TDES0_TCHM);
```

enet_desc_flag_clear

The description of enet_desc_flag_clear is shown as below:

Table 3-225. Function enet_desc_flag_clear

Function name	enet_desc_flag_clear
Function prototype	void enet_desc_flag_clear(enet_descriptors_struct *desc, uint32_t desc_flag);
Function descriptions	clear the bit flag of ENET DMA descriptor
Precondition	-
The called functions	-
Input parameter{in}	
desc	the descriptor pointer which users want to set flag, the structure members can refer to Table 3-172. Structure enet descriptors struct
Input parameter{in}	
desc_flag (the value according to the parameter desc)	the bit flag of ENET DMA descriptor only one parameter can be selected which is shown as below
When type of parameter desc is TX	
<i>ENET_TDES0_VFRM</i>	VLAN frame
<i>ENET_TDES0_FRMF</i>	frame flushed
<i>ENET_TDES0_TCHM</i>	the second address chained mode
<i>ENET_TDES0_TERM</i>	transmit end of ring mode
<i>ENET_TDES0_TTSEN</i>	transmit timestamp function enable
<i>ENET_TDES0_DPAD</i>	disable adding pad
<i>ENET_TDES0_DCRC</i>	disable CRC
<i>ENET_TDES0_FSG</i>	first segment
<i>ENET_TDES0_LSG</i>	last segment
<i>ENET_TDES0_INTC</i>	interrupt on completion
<i>ENET_TDES0_DAV</i>	DAV bit
When type of parameter desc is RX	
<i>ENET_RDES0_DAV</i>	descriptor available
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear the bit flag of ENET DMA transmission descriptor */
enet_desc_flag_clear(p_txdesc, ENET_TDES0_TCHM);
```

enet_desc_receive_complete_bit_enable

The description of enet_desc_receive_complete_bit_enable is shown as below:

Table 3-226. Function enet_desc_receive_complete_bit_enable

Function name	enet_desc_receive_complete_bit_enable
----------------------	---------------------------------------

Function prototype	void enet_desc_receive_complete_bit_enable(enet_descriptors_struct *desc);
Function descriptions	when receiving the completed, RS bit in ENET_DMA_STAT register will set
Precondition	-
The called functions	-
Input parameter{in}	
desc	the descriptor pointer which users want to get flag, the structure members can refer to Table 3-172. Structure enet_descriptors_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* when receiving the completed, RS bit in ENET_DMA_STAT register will set */
enet_desc_receive_complete_bit_enable(p_rxdesc);
```

enet_desc_receive_complete_bit_disable

The description of `enet_desc_receive_complete_bit_disable` is shown as below:

Table 3-227. Function `enet_desc_receive_complete_bit_disable`

Function name	enet_desc_receive_complete_bit_disable
Function prototype	void enet_desc_receive_complete_bit_disable(enet_descriptors_struct *desc);
Function descriptions	when receiving the completed, RS bit in ENET_DMA_STAT register will not set
Precondition	-
The called functions	-
Input parameter{in}	
desc	the descriptor pointer which users want to get flag, the structure members can refer to Table 3-172. Structure enet_descriptors_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* when receiving the completed, RS bit in ENET_DMA_STAT register will not set */
enet_desc_receive_complete_bit_disable(p_rxdesc);
```

enet_rxframe_drop

The description of enet_rxframe_drop is shown as below:

Table 3-228. Function enet_rxframe_drop

Function name	enet_rxframe_drop
Function prototype	void enet_rxframe_drop(void);
Function descriptions	drop current receive frame
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* drop current receive frame */
enet_rxframe_drop();
```

enet_dma_feature_enable

The description of enet_dma_feature_enable is shown as below:

Table 3-229. Function enet_dma_feature_enable

Function name	enet_dma_feature_enable
Function prototype	void enet_dma_feature_enable(uint32_t feature);
Function descriptions	enable DMA feature
Precondition	-
The called functions	-
Input parameter{in}	
feature	the feature of DMA mode one or more parameters can be selected which are shown as below
<i>ENET_NO_FLUSH_RX FRAME</i>	RxDMA does not flushes frames function
<i>ENET_SECONDFRAM E_OPT</i>	TxDMA controller operate on second frame function
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* enable ENET dma feature */

enet_dma_feature_enable(ENET_NO_FLUSH_RXFRAME);

```

enet_dma_feature_disable

The description of enet_dma_feature_disable is shown as below:

Table 3-230. Function enet_dma_feature_disable

Function name	enet_dma_feature_disable
Function prototype	void enet_dma_feature_disable(uint32_t feature);
Function descriptions	disable DMA feature
Precondition	-
The called functions	-
Input parameter{in}	
feature	the feature of DMA mode one or more parameters can be selected which are shown as below
<i>ENET_NO_FLUSH_RXFRAME</i>	RxDMA does not flushes frames function
<i>ENET_SECONDFRAME_OPT</i>	TxDMA controller operate on second frame function
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* disable ENET dma feature */

enet_dma_feature_disable(ENET_NO_FLUSH_RXFRAME);

```

enet_ptp_normal_descriptors_chain_init

The description of enet_ptp_normal_descriptors_chain_init is shown as below:

Table 3-231. Function enet_ptp_normal_descriptors_chain_init

Function name	enet_ptp_normal_descriptors_chain_init
Function prototype	void enet_ptp_normal_descriptors_chain_init(enet_dmadirection_enum direction, enet_descriptors_struct *desc_ptptab);
Function descriptions	initialize the DMA Tx/Rx descriptors's parameters in normal chain mode with PTP function
Precondition	-
The called functions	-
Input parameter{in}	
direction	the descriptors which users want to init only one parameter can be selected which is shown as below

<i>ENET_DMA_TX</i>	DMA Tx descriptors
<i>ENET_DMA_RX</i>	DMA Rx descriptors
Input parameter{in}	
desc_ptptab	pointer to the first descriptor address of PTP Rx descriptor table, the structure members can refer to Table 3-172. Structure enet_descriptors_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* initialize received descriptors in chain mode with PTP function */

enet_descriptors_struct ptp_rxdesc_tab[ENET_RXBUF_NUM];
enet_ptp_normal_descriptors_chain_init(ENET_DMA_RX, ptp_rxdesc_tab);
```

enet_ptp_normal_descriptors_ring_init

The description of `enet_ptp_normal_descriptors_ring_init` is shown as below:

Table 3-232. Function `enet_ptp_normal_descriptors_ring_init`

Function name	<code>enet_ptp_normal_descriptors_ring_init</code>
Function prototype	<code>void enet_ptp_normal_descriptors_ring_init(enet_dmadirection_enum direction, enet_descriptors_struct *desc_ptptab);</code>
Function descriptions	initialize the DMA Tx/Rx descriptors's parameters in normal ring mode with PTP function
Precondition	-
The called functions	-
Input parameter{in}	
direction	the descriptors which users want to init only one parameter can be selected which is show n as below
<i>ENET_DMA_TX</i>	DMA Tx descriptors
<i>ENET_DMA_RX</i>	DMA Rx descriptors
Input parameter{in}	
desc_ptptab	pointer to the first descriptor address of PTP Rx descriptor table, the structure members can refer to Table 3-172. Structure enet_descriptors_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* initialize received descriptors in ring mode with PTP function */

enet_descriptors_struct ptp_rxdesc_tab[ENET_RXBUF_NUM];

enet_ptp_normal_descriptors_ring_init(ENET_DMA_RX, ptp_rxdesc_tab);
  
```

enet_ptpframe_receive_normal_mode

The description of enet_ptpframe_receive_normal_mode is shown as below:

Table 3-233. Function enet_ptpframe_receive_normal_mode

Function name	enet_ptpframe_receive_normal_mode
Function prototype	ErrStatus enet_ptpframe_receive_normal_mode(uint8_t *buffer, uint32_t bufsize, uint32_t timestamp[]);
Function descriptions	receive a packet data with timestamp values to application buffer, when the DMA is in normal mode
Precondition	-
The called functions	-
Input parameter{in}	
bufsize	the size of buffer which is the parameter in function
Output parameter{out}	
timestamp	pointer to the table which stores the timestamp high and low
Output parameter{out}	
buffer	pointer to the application buffer if the input is NULL, user should copy data in application by himself
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```

/* receive frame with timestamp from descriptor */

uint32_t rx_buffer[500];

uint32_t time_stamp[2];

ErrStatus status;

status = enet_ptpframe_receive_normal_mode(rx_buffer, 500, time_stamp);
  
```

enet_ptpframe_transmit_normal_mode

The description of enet_ptpframe_transmit_normal_mode is shown as below:

Table 3-234. Function enet_ptpframe_transmit_normal_mode

Function name	enet_ptpframe_transmit_normal_mode
Function prototype	ErrStatus enet_ptpframe_transmit_normal_mode(uint8_t *buffer, uint32_t length, uint32_t timestamp[]);
Function descriptions	send data with timestamp values in application buffer as a transmit packet,

	when the DMA is in normal mode
Precondition	-
The called functions	--
Input parameter{in}	
buffer	pointer on the application buffer if the input is NULL, user should copy data in application by himself
Input parameter{in}	
length	the length of frame data to be transmitted
Output parameter{out}	
timestamp	pointer to the table which stores the timestamp high and low if the input is NULL, timestamp is ignored
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```
/* transmit frame with timestamp */

uint32_t tx_buffer[500];

uint32_t time_stamp[2];

ErrStatus status;

status = enet_ptpframe_transmit_normal_mode(tx_buffer, 500, time_stamp);
```

enet_wum_filter_register_pointer_reset

The description of enet_wum_filter_register_pointer_reset is shown as below:

Table 3-235. Function enet_wum_filter_register_pointer_reset

Function name	enet_wum_filter_register_pointer_reset
Function prototype	void enet_wum_filter_register_pointer_reset(void);
Function descriptions	wakeup frame filter register pointer reset
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset wakeup frame filter register pointer */

enet_wum_filter_register_pointer_reset();
```

enet_wum_filter_config

The description of enet_wum_filter_config is shown as below:

Table 3-236. Function enet_wum_filter_config

Function name	enet_wum_filter_config
Function prototype	void enet_wum_filter_config(uint32_t pdata[]);
Function descriptions	set the remote wakeup frame registers
Precondition	-
The called functions	-
Input parameter{in}	
pdata	pointer to buffer data which is written to remote wakeup frame registers (8 words total)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the remote wakeup frame registers */

uint32_t wum_data[8];

enet_wum_filter_config (wum_data);
```

enet_wum_feature_enable

The description of enet_wum_feature_enable is shown as below:

Table 3-237. Function enet_wum_feature_enable

Function name	enet_wum_feature_enable
Function prototype	void enet_wum_feature_enable(uint32_t feature);
Function descriptions	enable wakeup management features
Precondition	-
The called functions	-
Input parameter{in}	
feature	one or more parameters can be selected which are shown as below
<i>ENET_WUM_POWER_DOWN</i>	power down mode
<i>ENET_WUM_MAGIC_PACKET_FRAME</i>	enable a wakeup event due to magic packet reception
<i>ENET_WUM_WAKE_UP_FRAME</i>	enable a wakeup event due to wakeup frame reception
<i>ENET_WUM_GLOBAL_UNICAST</i>	any received unicast frame passed filter is considered to be a wakeup frame

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable wakeup management features */
enet_wum_feature_enable(ENET_WUM_POWER_DOWN);
```

enet_wum_feature_disable

The description of enet_wum_feature_disable is shown as below:

Table 3-238. Function enet_wum_feature_disable

Function name	enet_wum_feature_disable
Function prototype	void enet_wum_feature_disable(uint32_t feature)
Function descriptions	disable wakeup management features
Precondition	-
The called functions	-
Input parameter{in}	
feature	one or more parameters can be selected which are shown as below
<i>ENET_WUM_MAGIC_PACKET_FRAME</i>	enable a wakeup event due to magic packet reception
<i>ENET_WUM_WAKE_UP_FRAME</i>	enable a wakeup event due to wakeup frame reception
<i>ENET_WUM_GLOBAL_UNICAST</i>	any received unicast frame passed filter is considered to be a wakeup frame
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable wakeup management features */
enet_wum_feature_disable(ENET_WUM_POWER_DOWN);
```

enet_msc_counters_reset

The description of enet_msc_counters_reset is shown as below:

Table 3-239. Function enet_msc_counters_reset

Function name	enet_msc_counters_reset
Function prototype	void enet_msc_counters_reset(void);
Function descriptions	reset the MAC statistics counters

Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset the MAC statistics counters */
enet_msc_counters_reset();
```

enet_msc_feature_enable

The description of enet_msc_feature_enable is shown as below:

Table 3-240. Function enet_msc_feature_enable

Function name	enet_msc_feature_enable
Function prototype	void enet_msc_feature_enable(uint32_t feature);
Function descriptions	enable the MAC statistics counter features
Precondition	-
The called functions	-
Input parameter{in}	
feature	one or more parameters can be selected which are shown as below
<i>ENET_MSC_COUNTE R_STOP_ROLLOVER</i>	counter stop rollover
<i>ENET_MSC_RESET_O N_READ</i>	reset on read
<i>ENET_MSC_COUNTE RS_FREEZE</i>	MSC counter freeze
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the MAC statistics counter features */
enet_msc_feature_enable(ENET_MSC_COUNTER_STOP_ROLLOVER);
```

enet_msc_feature_disable

The description of enet_msc_feature_disable is shown as below:

Table 3-241. Function enet_msc_feature_disable

Function name	enet_msc_feature_disable
Function prototype	void enet_msc_feature_disable(uint32_t feature);
Function descriptions	disable the MAC statistics counter features
Precondition	-
The called functions	-
Input parameter{in}	
feature	one or more parameters can be selected which are shown as below
<i>ENET_MSC_COUNTER_STOP_ROLLOVER</i>	counter stop rollover
<i>ENET_MSC_RESET_ON_READ</i>	reset on read
<i>ENET_MSC_COUNTER_FREEZE</i>	MSC counter freeze
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the MAC statistics counter features */
enet_msc_feature_disable(ENET_MSC_COUNTER_STOP_ROLLOVER);
```

enet_msc_counters_get

The description of enet_msc_counters_get is shown as below:

Table 3-242. Function enet_msc_counters_get

Function name	enet_msc_counters_get
Function prototype	uint32_t enet_msc_counters_get(enet_msc_counter_enum counter);
Function descriptions	get MAC statistics counter
Precondition	-
The called functions	-
Input parameter{in}	
counter	MSC counters which is selected only one parameter can be selected which is shown as below
<i>ENET_MSC_TX_SCCNT</i>	MSC transmitted good frames after a single collision counter
<i>ENET_MSC_TX_MSC_CNT</i>	MSC transmitted good frames after more than a single collision counter
<i>ENET_MSC_TX_TGFCNT</i>	MSC transmitted good frames counter
<i>ENET_MSC_RX_RFCE</i>	MSC received frames with CRC error counter

CNT	
ENET_MSC_RX_RFAE CNT	MSC received frames with alignment error counter
ENET_MSC_RX_RGU FCNT	MSC received good unicast frames counter
Output parameter{out}	
-	-
Return value	
uint32_t	the MSC counter value

Example:

```
/* get MAC statistics counter */

uin32_t reval;

reval = enet_msc_counters_get(ENET_MSC_TX_SCCNT);
```

enet_ptp_subsecond_2_nanosecond

The description of enet_ptp_subsecond_2_nanosecond is shown as below:

Table 3-243. Function enet_ptp_subsecond_2_nanosecond

Function name	enet_ptp_subsecond_2_nanosecond
Function prototype	uint32_t enet_ptp_subsecond_2_nanosecond(uint32_t subsecond);
Function descriptions	change subsecond to nanosecond
Precondition	-
The called functions	-
Input parameter{in}	
subsecond	subsecond value (0 – 0x7FFF FFFF)
Output parameter{out}	
-	-
Return value	
uint32_t	the nanosecond value (0 -- 499999999)

Example:

```
/* change subsecond to nanosecond */

uin32_t reval;

reval = enet_ptp_subsecond_2_nanosecond(50);
```

enet_ptp_nanosecond_2_subsecond

The description of enet_ptp_nanosecond_2_subsecond is shown as below:

Table 3-244. Function enet_ptp_nanosecond_2_subsecond

Function name	enet_ptp_nanosecond_2_subsecond
----------------------	---------------------------------

Function prototype	uint32_t enet_ptp_nanosecond_2_subsecond(uint32_t nanosecond);
Function descriptions	change nanosecond to subsecond
Precondition	-
The called functions	-
Input parameter{in}	
nanosecond	nanosecond value (0 -- 499999999)
Output parameter{out}	
-	-
Return value	
uint32_t	the subsecond value (0 – 0x7FFF FFFF)

Example:

```
/* change nanosecond to subsecond */

uint32_t reval;

reval = enet_ptp_nanosecond_2_subsecond(50);

enet_ptp_feature_enable
```

The description of enet_ptp_feature_enable is shown as below:

Table 3-245. Function enet_ptp_feature_enable

Function name	enet_ptp_feature_enable
Function prototype	void enet_ptp_feature_enable(uint32_t feature);
Function descriptions	enable the PTP features
Precondition	-
The called functions	-
Input parameter{in}	
feature	the feature of ENET PTP mode one or more parameters can be selected which are shown as below
ENET_RXTX_TIMESTAMP AMP	timestamp function for transmit and receive frames
ENET_PTP_TIMESTAMP MP_INT	timestamp interrupt trigger
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the PTP features */

enet_ptp_feature_enable(ENET_RXTX_TIMESTAMP);
```

enet_ptp_feature_disable

The description of enet_ptp_feature_disable is shown as below:

Table 3-246. Function enet_ptp_feature_disable

Function name	enet_ptp_feature_disable
Function prototype	void enet_ptp_feature_disable(uint32_t feature);
Function descriptions	disable the PTP features
Precondition	-
The called functions	-
Input parameter{in}	
feature	the feature of ENET PTP mode one or more parameters can be selected which are shown as below
<i>ENET_RXTX_TIMESTAMP</i>	timestamp function for transmit and receive frames
<i>AMP</i>	
<i>ENET_PTP_TIMESTAMP_MP_INT</i>	timestamp interrupt trigger
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the PTP features */
enet_ptp_feature_disable(ENET_RXTX_TIMESTAMP);
```

enet_ptp_timestamp_function_config

The description of enet_ptp_timestamp_function_config is shown as below:

Table 3-247. Function enet_ptp_timestamp_function_config

Function name	enet_ptp_timestamp_function_config
Function prototype	ErrStatus enet_ptp_timestamp_function_config(enet_ptp_function_enum func);
Function descriptions	configure the PTP timestamp function
Precondition	-
The called functions	-
Input parameter{in}	
func	only one parameter can be selected which is shown as below
<i>ENET_PTP_ADDEND_UPDATE</i>	addend register update
<i>ENET_PTP_SYSTIME_UPDATE</i>	timestamp update
<i>ENET_PTP_SYSTIME_</i>	timestamp initialize

<i>INIT</i>	
<i>ENET_PTP_FINEMOD_E</i>	the system timestamp uses the fine method for updating
<i>ENET_PTP_COARSE_MODE</i>	the system timestamp uses the coarse method for updating
Output parameter{out}	
-	-
Return value	
ErrStatus	SUCCESS or ERROR

Example:

```
/* configure the PTP timestamp function */

ErrStatus eval;

eval = enet_ptp_timestamp_function_config(ENET_PTP_ADDEND_UPDATE);
```

enet_ptp_subsecond_increment_config

The description of `enet_ptp_subsecond_increment_config` is shown as below:

Table 3-248. Function `enet_ptp_subsecond_increment_config`

Function name	enet_ptp_subsecond_increment_config
Function prototype	void enet_ptp_subsecond_increment_config(uint32_t subsecond);
Function descriptions	configure system time subsecond increment value
Precondition	-
The called functions	-
Input parameter{in}	
subsecond	the value will be added to the subsecond value of system time, this value must be between 0 and 0xFF
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure system time subsecond increment value */

enet_ptp_subsecond_increment_config(0x1F);
```

enet_ptp_timestamp_addend_config

The description of `enet_ptp_timestamp_addend_config` is shown as below:

Table 3-249. Function `enet_ptp_timestamp_addend_config`

Function name	enet_ptp_timestamp_addend_config
----------------------	----------------------------------

Function prototype	void enet_ptp_timestamp_addend_config(uint32_t add);
Function descriptions	adjusting the clock frequency only in fine update mode
Precondition	-
The called functions	-
Input parameter{in}	
add	the value will be added to the accumulator register to achieve time synchronization (0 – 0xFFFF FFFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* adjusting the clock frequency only in fine update mode */
enet_ptp_timestamp_addend_config(0x1FF);
```

enet_ptp_timestamp_update_config

The description of enet_ptp_timestamp_update_config is shown as below:

Table 3-250. Function enet_ptp_timestamp_update_config

Function name	enet_ptp_timestamp_update_config
Function prototype	void enet_ptp_timestamp_update_config(uint32_t sign, uint32_t second, uint32_t subsecond);
Function descriptions	initialize or add/subtract to second of the system time
Precondition	-
The called functions	-
Input parameter{in}	
sign	timestamp update positive or negative sign, only one parameter can be selected which is shown as below
<i>ENET_PTP_ADD_TO_TIME</i>	update value is added to system time
<i>ENET_PTP_SUBSTRACT_FROM_TIME</i>	timestamp update value is subtracted from system time
Input parameter{in}	
second	initializing or adding/subtracting to second of the system time (0 – 0xFFFF FFFF)
Input parameter{in}	
subsecond	the current subsecond of the system time with 0.46 ns accuracy (0 – 0x7FFF FFFF)
Output parameter{out}	
-	-
Return value	

Example:

```
/* update new value to system time */
enet_ptp_timestamp_update_config(ENET_PTP_ADD_TO_TIME, 0x10, 0);
```

enet_ptp_expected_time_config

The description of enet_ptp_expected_time_config is shown as below:

Table 3-251. Function enet_ptp_expected_time_config

Function name	enet_ptp_expected_time_config
Function prototype	void enet_ptp_expected_time_config(uint32_t second, uint32_t nanosecond);
Function descriptions	configure the expected target time
Precondition	-
The called functions	-
Input parameter{in}	
second	the expected target second time (0 – 0xFFFF FFFF)
Input parameter{in}	
nanosecond	the expected target nanosecond time (signed) (0 – 0xFFFF FFFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the expected target time */
enet_ptp_expected_time_config(2000, 0);
```

enet_ptp_system_time_get

The description of enet_ptp_system_time_get is shown as below:

Table 3-252. Function enet_ptp_system_time_get

Function name	enet_ptp_system_time_get
Function prototype	void enet_ptp_system_time_get(enet_ptp_systime_struct *systime_struct);
Function descriptions	get the current system time
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
systime_struct	pointer to a enet_ptp_systime_struct structure which contains parameters of

	PTP system time, the structure members can refer to Table 3-173. <i>Structure enet_ptp_systime_struct</i>
Return value	
-	-

Example:

```
/* get the current system time */

enet_ptp_systime_struct systime;

enet_ptp_system_time_get(&systime);
```

enet_ptp_start

The description of enet_ptp_start is shown as below:

Table 3-253. Function enet_ptp_start

Function name	enet_ptp_start
Function prototype	void enet_ptp_start(int32_t updatemethod, uint32_t init_sec, uint32_t init_subsec, uint32_t carry_cfg, uint32_t accuracy_cfg);
Function descriptions	configure and start PTP timestamp counter
Precondition	-
The called functions	enet_interrupt_disable/ enet_ptp_feature_enable/ enet_ptp_subsecond_increment_config/ enet_ptp_timestamp_addend_config/ enet_ptp_timestamp_function_config/ enet_ptp_flag_get/ enet_ptp_timestamp_update_config
Input parameter{in}	
updatemethod	method for updating
<i>ENET_PTP_FINEMOD E</i>	fine correction method
<i>ENET_PTP_COARSE MODE</i>	coarse correction method
Input parameter{in}	
init_sec	second value for initializing system time (0 – 0xFFFF FFFF)
Input parameter{in}	
init_subsec	subsecond value for initializing system time (0 – 0x7FFF FFFF)
Input parameter{in}	
carry_cfg	the value to be added to the accumulator register (in fine method is used) (0 – 0xFFFF FFFF)
Input parameter{in}	
accuracy_cfg	the value to be added to the subsecond value of system time (0 – 0xFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* start PTP function */
enet_ptp_start(ENET_PTP_FINEMODE, 0, 0, 50, 0);
```

enet_ptp_finecorrection_adjfreq

The description of enet_ptp_finecorrection_adjfreq is shown as below:

Table 3-254. Function enet_ptp_finecorrection_adjfreq

Function name	enet_ptp_finecorrection_adjfreq
Function prototype	void enet_ptp_finecorrection_adjfreq(int32_t carry_cfg);
Function descriptions	adjust frequency in fine method by configure addend register
Precondition	-
The called functions	enet_ptp_timestamp_addend_config/ enet_ptp_timestamp_function_config
Input parameter{in}	
carry_cfg	the value to be added to the accumulator register (0 – 0xFFFF FFFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* adjust frequency in fine method by configure addend register */
enet_ptp_finecorrection_adjfreq(50);
```

enet_ptp_coarsecorrection_systime_update

The description of enet_ptp_coarsecorrection_systime_update is shown as below:

Table 3-255. Function enet_ptp_coarsecorrection_systime_update

Function name	enet_ptp_coarsecorrection_systime_update
Function prototype	void enet_ptp_coarsecorrection_systime_update(enet_ptp_systime_struct *systime_struct);
Function descriptions	update system time in coarse method
Precondition	-
The called functions	enet_ptp_nanosecond_2_subsecond/ enet_ptp_timestamp_update_config/ enet_ptp_timestamp_function_config/ enet_ptp_flag_get/ enet_ptp_timestamp_addend_config
Input parameter{in}	
systime_struct	pointer to a enet_ptp_systime_struct structure which contains parameters of PTP system time, the structure members can refer to Table 3-173. Structure enet_ptp_systime_struct
Output parameter{out}	

-	-	-
Return value		
-	-	-

Example:

```
/* update system time in coarse method */

enet_ptp_systime_struct systime_struct;
systime_struct.second = 0x0000FFFF;
systime_struct.nanosecond = 0;
systime_struct.sign = ENET_PTP_TIME_POSITIVE;
enet_ptp_coarsecorrection_systime_update (&systime_struct);
```

enet_ptp_finecorrection_settime

The description of enet_ptp_finecorrection_settime is shown as below:

Table 3-256. Function enet_ptp_finecorrection_settime

Function name	enet_ptp_finecorrection_settime
Function prototype	void enet_ptp_finecorrection_settime(enet_ptp_systime_struct * systime_struct);
Function descriptions	set system time in fine method
Precondition	-
The called functions	enet_ptp_nanosecond_2_subsecond/ enet_ptp_timestamp_update_config/ enet_ptp_timestamp_function_config/ enet_ptp_flag_get
Input parameter{in}	
systime_struct	pointer to a enet_ptp_systime_struct structure which contains parameters of PTP system time, the structure members can refer to Table 3-173. <u>Structure enet_ptp_systime_struct</u>
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set system time in fine method */

enet_ptp_systime_struct systime_struct;
systime_struct.second = 0x0000FFFF;
systime_struct.nanosecond = 0;
systime_struct.sign = ENET_PTP_TIME_POSITIVE;
```

```
enet_ptp_finecorrection_settime(&systime_struct);
```

enet_ptp_flag_get

The description of enet_ptp_flag_get is shown as below:

Table 3-257. Function enet_ptp_flag_get

Function name	enet_ptp_flag_get
Function prototype	FlagStatus enet_ptp_flag_get(uint32_t flag);
Function descriptions	get the ptp flag status
Precondition	-
The called functions	-
Input parameter{in}	
flag	ptp flag status to be checked
<i>ENET_PTP_ADDEND_UPDATE</i>	addend register update
<i>ENET_PTP_SYSTIME_UPDATE</i>	timestamp update
<i>ENET_PTP_SYSTIME_INIT</i>	timestamp initialize
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get the ptp flag status */

FlagStatus eval;

eval = enet_ptp_flag_get(ENET_PTP_ADDEND_UPDATE);
```

enet_initpara_reset

The description of enet_initpara_reset is shown as below:

Table 3-258. Function enet_initpara_reset

Function name	enet_initpara_reset
Function prototype	void enet_initpara_reset(void);
Function descriptions	reset the ENET initpara struct, call it before using enet_initpara_config()
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* reset the ENET initpara struct */
enet_initpara_reset();
```

3.10. EXMC

The external memory controller EXMC, is used as a translator for MCU to access a variety of external memory. The EXMC registers are listed in chapter [3.10.1](#), the EXMC firmware functions are introduced in chapter [3.10.2](#).

3.10.1. Descriptions of Peripheral registers

EXMC registers are listed in the table shown as below:

Table 3-259. EXMC Registers

Registers	Descriptions
EXMC_SNCTL _x (x=0, 1, 2, 3)	SRAM/NOR Flash control registers
EXMC_SNTCFG _x (x=0, 1, 2, 3)	SRAM/NOR Flash timing configuration registers
EXMC_SNWTCFG _x (x=0, 1, 2, 3)	SRAM/NOR Flash write timing configuration registers
EXMC_NPCTL _x (x=1, 2, 3)	NAND Flash/PC Card control registers
EXMC_NPINTEN _x (x=1, 2, 3)	NAND Flash/PC Card interrupt enable registers
EXMC_NPCTCFG _x (x=1, 2, 3)	NAND Flash/PC Card common space timing configuration registers
EXMC_NPATCFG _x (x=1, 2, 3)	NAND Flash/PC Card attribute space timing configuration registers
EXMC_PIOTCFG3	PC Card I/O space timing configuration register
EXMC_NECC _x (x=1, 2)	NAND Flash ECC registers

3.10.2. Descriptions of Peripheral functions

EXMC firmware functions are listed in the table shown as below:

Table 3-260. EXMC firmware function

Function name	Function description
exmc_norsram_deinit	deinitialize EXMC NOR/SRAM region
exmc_norsram_struct_para_init	initialize the struct exmc_norsram_parameter_struct
exmc_norsram_init	initialize EXMC NOR/SRAM region
exmc_norsram_enable	enable EXMC NOR/PSRAM bank region
exmc_norsram_disable	disable EXMC NOR/PSRAM bank region
exmc_nand_deinit	deinitialize EXMC NAND bank
exmc_nand_init	initialize EXMC NAND bank
exmc_nand_struct_para_init	initialize the struct exmc_nand_parameter_struct
exmc_nand_enable	enable NAND bank
exmc_nand_disable	disable NAND bank
exmc_nand_ecc_config	enable or disable the EXMC NAND ECC function
exmc_ecc_get	get the EXMC ECC value
exmc_pccard_deinit	deinitialize EXMC PC card bank
exmc_pccard_init	initialize EXMC PC card bank
exmc_pccard_struct_para_init	initialize the struct exmc_pccard_parameter_struct
exmc_pccard_enable	enable PC Card bank
exmc_pccard_disable	disable PC Card bank
exmc_interrupt_enable	enable EXMC interrupt
exmc_interrupt_disable	disable EXMC interrupt
exmc_interrupt_flag_get	check EXMC interrupt flag is set or not
exmc_interrupt_flag_clear	clear EXMC interrupt flag
exmc_flag_get	check EXMC flag is set or not
exmc_flag_clear	clear EXMC flag

Structure exmc_norsram_timing_parameter_struct

Table 3-261. Structure exmc_norsram_timing_parameter_struct

Member name	Function description
asyn_access_mode	asynchronous access mode
syn_data_latency	configure the data latency
syn_clk_division	configure the clock divide ratio
bus_latency	configure the bus latency
asyn_data_setuptime	configure the data setup time, asynchronous access mode valid
asyn_address_holdtime	configure the address hold time, asynchronous access mode valid
asyn_address_setuptime	configure the data setup time, asynchronous access mode valid

Structure exmc_norsram_parameter_struct

Table 3-262. Structure exmc_norsram_parameter_struct

Member name	Function description
norsram_region	select the region of EXMC NOR/SRAM bank
w rite_mode	the write mode, synchronous mode or asynchronous mode
extended_mode	enable or disable the extended mode
asyn_w ait	enable or disable the asynchronous wait function
nwait_signal	enable or disable the NWAIT signal while in synchronous burst mode
memory_w rite	enable or disable the write operation
nwait_config	NWAIT signal configuration
w rap_burst_mode	enable or disable the wrap burst mode
nwait_polarity	specifies the polarity of NWAIT signal from memory
burst_mode	enable or disable the burst mode
databus_w idth	specifies the databus width of external memory
memory_type	specifies the type of external memory
address_data_mux	specifies whether the data bus and address bus are multiplexed
read_w rite_timing	timing parameters for read and write if the extended mode is not used or the timing parameters for read if the extended mode is used
w rite_timing	timing parameters for write when the extended mode is used

Structure exmc_nand_pccard_timing_parameter_struct

Table 3-263. Structure exmc_nand_pccard_timing_parameter_struct

Member name	Function description
databus_hiztime	configure the databus HiZ time for write operation
holdtime	configure the address hold time(or the data hold time for write operation)
w aittime	configure the minimum wait time
setuptime	configure the address setup time

Structure exmc_nand_parameter_struct

Table 3-264. Structure exmc_nand_parameter_struct

Member name	Function description
nand_bank	select the bank of NAND
ecc_size	the page size for the ECC calculation
atr_latency	configure the latency of ALE low to RB low
ctr_latency	configure the latency of CLE low to RB low
ecc_logic	enable or disable the ECC calculation logic
databus_w idth	the NAND flash databus width
w ait_feature	enables or disables the wait feature
common_space_timing	the timing parameters for common space
attribute_space_timing	the timing parameters for attribute space

ng	
----	--

Structure exmc_pccard_parameter_struct

Table 3-265. Structure exmc_pccard_parameter_struct

Member name	Function description
atr_latency	configure the latency of ALE low to RB low
ctr_latency	configure the latency of CLE low to RB low
wait_feature	enables or disables the Wait feature
common_space_timing	the timing parameters for common space
attribute_space_timing	the timing parameters for attribute space
io_space_timing	the timing parameters for IO space

exmc_norsram_deinit

The description of exmc_norsram_deinit is shown as below:

Table 3-266. Function exmc_norsram_deinit

Function name	exmc_norsram_deinit
Function prototype	void exmc_norsram_deinit(uint32_t norsram_region);
Function descriptions	deinitialize EXMC NOR/SRAM region
Precondition	-
The called functions	-
Input parameter{in}	
norsram_region	select the region of bank0
<i>EXMC_BANK0_NORSRAM_REGIONx(x=0..3)</i>	region x of bank0
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* deinitialize EXMC NOR/SRAM region 0 */
exmc_norsram_deinit(EXMC_BANK0_NORSRAM_REGION0);
```

exmc_norsram_struct_para_init

The description of exmc_norsram_struct_para_init is shown as below:

Table 3-267. Function exmc_norsram_struct_para_init

Function name	exmc_norsram_struct_para_init
Function prototype	void exmc_norsram_struct_para_init(exmc_norsram_parameter_struct*

	exmc_norsram_init_struct);
Function descriptions	initialize the struct exmc_norsram_parameter_struct
Precondition	-
The called functions	-
Input parameter{in}	
exmc_norsram_init_st ruct	Structure for initialization, the structure members can refer to Table 3-262. Structure exmc_norsram_parameter_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* Initialize the struct nor_init_struct */

exmc_norsram_parameter_struct nor_init_struct;

exmc_norsram_struct_para_init(&nor_init_struct);

```

exmc_norsram_init

The description of exmc_norsram_init is shown as below:

Table 3-268. Function exmc_norsram_init

Function name	exmc_norsram_init
Function prototype	void exmc_norsram_init(exmc_norsram_parameter_struct* exmc_norsram_init_struct);
Function descriptions	initialize EXMC NOR/SRAM region
Precondition	-
The called functions	-
Input parameter{in}	
exmc_norsram_init_st ruct	Structure for initialization, the structure members can refer to Table 3-262. Structure exmc_norsram_parameter_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* initialize EXMC NOR/SRAM region */

exmc_norsram_parameter_struct nor_init_struct;

exmc_norsram_timing_parameter_struct nor_timing_init_struct;

exmc_norsram_struct_para_init(&nor_init_struct);

```

```

/* configure timing parameter */

nor_timing_init_struct.asyn_access_mode = EXMC_ACCESS_MODE_A;
nor_timing_init_struct.syn_data_latency = EXMC_DATALAT_2_CLK;
nor_timing_init_struct.syn_clk_division = EXMC_SYN_CLOCK_RATIO_DISABLE;
nor_timing_init_struct.bus_latency = 1;
nor_timing_init_struct.asyn_data_setuptime = 7;
nor_timing_init_struct.asyn_address_holdtime = 2;
nor_timing_init_struct.asyn_address_setuptime = 5;

/* configure EXMC bus parameters */

nor_init_struct.norsram_region = EXMC_BANK0_NORSRAM_REGION0;
nor_init_struct.write_mode = EXMC_ASYN_WRITE;
nor_init_struct.extended_mode = DISABLE;
nor_init_struct.asyn_wait = DISABLE;
nor_init_struct.nwait_signal = DISABLE;
nor_init_struct.memory_write = ENABLE;
nor_init_struct.nwait_config = EXMC_NWAIT_CONFIG_BEFORE;
nor_init_struct.wrap_burst_mode = DISABLE;
nor_init_struct.nwait_polarity = EXMC_NWAIT_POLARITY_LOW;
nor_init_struct.burst_mode = DISABLE;
nor_init_struct.databus_width = EXMC_NOR_DATABUS_WIDTH_16B;
nor_init_struct.memory_type = EXMC_MEMORY_TYPE_NOR;
nor_init_struct.address_data_mux = ENABLE;
nor_init_struct.read_write_timing = &nor_timing_init_struct;
nor_init_struct.write_timing = &nor_timing_init_struct;
exmc_norsram_init(&nor_init_struct);

```

exmc_norsram_enable

The description of exmc_norsram_enable is shown as below:

Table 3-269. Function exmc_norsram_enable

Function name	exmc_norsram_enable
---------------	---------------------

Function prototype	void exmc_norsram_enable(uint32_t norsram_region);
Function descriptions	enable EXMC NOR/PSRAM bank region
Precondition	-
The called functions	-
Input parameter{in}	
norsram_region	specify the region of NOR/PSRAM bank
<i>EXMC_BANK0_NORS RAM_REGIONx(x=0..3)</i>	region x of bank0
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable region 0 of bank0 */
exmc_norsram_enable(EXMC_BANK0_NORSRAM_REGION0);
```

exmc_norsram_disable

The description of exmc_norsram_disable is shown as below:

Table 3-270. Function exmc_norsram_disable

Function name	exmc_norsram_disable
Function prototype	void exmc_norsram_disable(uint32_t norsram_region);
Function descriptions	disable EXMC NOR/PSRAM bank region
Precondition	-
The called functions	-
Input parameter{in}	
norsram_region	specify the region of NOR/PSRAM bank
<i>EXMC_BANK0_NORS RAM_REGIONx(x=0..3)</i>	region x of bank0
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable region 0 of bank0 */
exmc_norsram_disable(EXMC_BANK0_NORSRAM_REGION0);
```

exmc_nand_deinit

The description of exmc_nand_deinit is shown as below:

Table 3-271. Function exmc_nand_deinit

Function name	exmc_nand_deinit
Function prototype	void exmc_nand_deinit(uint32_t nand_bank);
Function descriptions	deinitialize EXMC NAND bank
Precondition	-
The called functions	-
Input parameter{in}	
nand_bank	select the bank of NAND
EXMC_BANKx_NAND(x=1,2)	bank of NAND
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* deinitialize bank1 */
exmc_nand_deinit(EXMC_BANK1_NAND);
```

exmc_nand_init

The description of exmc_nand_init is shown as below:

Table 3-272. Function exmc_nand_init

Function name	exmc_nand_init
Function prototype	void exmc_nand_init(exmc_nand_parameter_struct* exmc_nand_init_struct);
Function descriptions	initialize EXMC NAND bank
Precondition	-
The called functions	-
Input parameter{in}	
exmc_nand_init_struct t	Structure for initialization, the structure members can refer to Table 3-264. Structure exmc_nand_parameter_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* initialize EXMC NAND bank */
exmc_nand_parameter_struct nand_init_struct;
exmc_nand_pccard_timing_parameter_struct nand_timing_init_struct;
```

```

exmc_nand_struct_para_init(nand_init_struct);

nand_timing_init_struct.setuptime = 1;

nand_timing_init_struct.waittime = 3;

nand_timing_init_struct.holdtime = 2;

nand_timing_init_struct.databus_hiztime = 2;

nand_init_struct.nand_bank = EXMC_BANK1_NAND;

nand_init_struct.ecc_size = EXMC_ECC_SIZE_2048BYTES;

nand_init_struct.atr_latency = EXMC_ALE_RE_DELAY_1_HCLK;

nand_init_struct.ctr_latency = EXMC_CLE_RE_DELAY_1_HCLK;

nand_init_struct.ecc_logic = ENABLE;

nand_init_struct.databus_width = EXMC_NAND_DATABUS_WIDTH_8B;

nand_init_struct.wait_feature = ENABLE;

nand_init_struct.common_space_timing = &nand_timing_init_struct;

nand_init_struct.attribute_space_timing = &nand_timing_init_struct;

exmc_nand_init(&nand_init_struct);
  
```

exmc_nand_struct_para_init

The description of exmc_nand_struct_para_init is shown as below:

Table 3-273. Function exmc_nand_struct_para_init

Function name	exmc_nand_struct_para_init
Function prototype	void exmc_nand_struct_para_init(exmc_nand_parameter_struct* exmc_nand_init_struct);
Function descriptions	initialize the struct exmc_nand_parameter_struct
Precondition	-
The called functions	-
Input parameter{in}	
exmc_nand_init_struct	Structure for initialization, the structure members can refer to Table 3-264. Structure exmc_nand_parameter_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* initialize the struct nand_init_struct */
```

```

exmc_nand_parameter_struct nand_init_struct;
exmc_norsram_struct para_init(&nor_init_struct);

```

exmc_nand_enable

The description of exmc_nand_enable is shown as below:

Table 3-274. Function exmc_nand_enable

Function name	exmc_nand_enable
Function prototype	void exmc_nand_enable(uint32_t nand_bank);
Function descriptions	enable NAND bank
Precondition	-
The called functions	-
Input parameter{in}	
nand_bank	specify the NAND bank
EXMC_BANKx_NAND(x=1,2)	bank of NAND
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* enable NAND bank */

exmc_nand_enable(EXMC_BANK1_NAND);

```

exmc_nand_disable

The description of exmc_nand_disable is shown as below:

Table 3-275. Function exmc_nand_disable

Function name	exmc_nand_disable
Function prototype	void exmc_nand_disable(uint32_t nand_bank);
Function descriptions	disable NAND bank
Precondition	-
The called functions	-
Input parameter{in}	
nand_bank	specifie the NAND bank
EXMC_BANKx_NAND(x=1,2)	bank of NAND
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable NAND bank */
exmc_nand_disable(EXMC_BANK1_NAND);
```

exmc_nand_ecc_config

The description of exmc_nand_ecc_config is shown as below:

Table 3-276. Function exmc_nand_ecc_config

Function name	exmc_nand_ecc_config
Function prototype	void exmc_nand_ecc_config(uint32_t nand_bank, ControlStatus new value);
Function descriptions	enable or disable the EXMC NAND ECC function
Precondition	-
The called functions	-
Input parameter{in}	
nand_bank	specify the NAND bank
<i>EXMC_BANKx_NAND(</i> <i>x=1,2)</i>	bank of NAND
Input parameter{in}	
new value	enable or disable
<i>ENABLE</i>	enable
<i>DISABLE</i>	disable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the EXMC NAND ECC function */
exmc_nand_ecc_config(EXMC_BANK1_NAND, ENABLE);
```

exmc_ecc_get

The description of exmc_ecc_get is shown as below:

Table 3-277. Function exmc_ecc_get

Function name	exmc_ecc_get
Function prototype	uint32_t exmc_ecc_get(uint32_t nand_bank);
Function descriptions	get the EXMC ECC value
Precondition	-
The called functions	-
Input parameter{in}	
nand_bank	specifie the NAND bank

<code>EXMC_BANKx_NAND(x=1,2)</code>	bank of NAND
Output parameter{out}	
-	-
Return value	
<code>uint32_t</code>	0-0xFFFFFFFF

Example:

```
/* get the EXMC ECC value */
uint32_t value;
value = exmc_ecc_get(EXMC_BANK1_NAND);
```

exmc_pccard_deinit

The description of `exmc_pccard_deinit` is shown as below:

Table 3-278. Function `exmc_pccard_deinit`

Function name	<code>exmc_pccard_deinit</code>
Function prototype	<code>void exmc_pccard_deinit(void);</code>
Function descriptions	deinitialize EXMC PC card bank
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* deinitialize EXMC PC card bank */
exmc_pccard_deinit();
```

exmc_pccard_init

The description of `exmc_pccard_init` is shown as below:

Table 3-279. Function `exmc_pccard_init`

Function name	<code>exmc_pccard_init</code>
Function prototype	<code>void exmc_pccard_init(exmc_pccard_parameter_struct* exmc_pccard_init_struct);</code>
Function descriptions	initialize EXMC PC card bank
Precondition	-

The called functions	-
Input parameter{in}	
exmc_pccard_init_struct	Structure for initialization, the structure members can refer to Table 3-265. Structure exmc_pccard_parameter_struct
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* initialize EXMC PC card bank */

exmc_pccard_parameter_struct pccard_init_struct;
exmc_nand_pccard_timing_parameter_struct pccard_timing_init_struct;
exmc_pccard_struct_para_init(pccard_init_struct);
pccard_timing_init_struct.databus_hiztime = 2;
pccard_timing_init_struct.holdtime = 2;
pccard_timing_init_struct.waittime = 3;
pccard_timing_init_struct.setuptime = 1;
pccard_init_struct.atr_latency = EXMC_ALE_RE_DELAY_1_HCLK;
pccard_init_struct.ctr_latency = EXMC_CLE_RE_DELAY_1_HCLK;
pccard_init_struct.wait_feature = DISABLE;
pccard_init_struct.common_space_timing = &pccard_timing_init_struct;
pccard_init_struct.attribute_space_timing = &pccard_timing_init_struct;
pccard_init_struct.io_space_timing = &pccard_timing_init_struct;
exmc_pccard_init(&pccard_init_struct);

```

exmc_pccard_struct_para_init

The description of exmc_pccard_struct_para_init is shown as below:

Table 3-280. Function exmc_pccard_struct_para_init

Function name	exmc_pccard_struct_para_init
Function prototype	void exmc_pccard_struct_para_init(exmc_pccard_parameter_struct* exmc_pccard_init_struct);
Function descriptions	initialize the struct exmc_pccard_parameter_struct
Precondition	-
The called functions	-

Input parameter{in}	
Output parameter{out}	
exmc_pccard_init_str uct	Structure for initialization, the structure members can refer to Table 3-265. <u>Structure exmc_pccard_parameter_struct</u>
Return value	
-	-

Example:

```
/* initialize the struct exmc_pccard_parameter_struct */

exmc_pccard_parameter_struct pccard_init_struct;

exmc_pccard_struct_para_init(&pccard_init_struct);
```

exmc_pccard_enable

The description of exmc_pccard_enable is shown as below:

Table 3-281. Function exmc_pccard_enable

Function name	exmc_pccard_enable
Function prototype	void exmc_pccard_enable(void);
Function descriptions	enable PC Card bank
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable PC Card bank */

exmc_pccard_enable();
```

exmc_pccard_disable

The description of exmc_pccard_disable is shown as below:

Table 3-282. Function exmc_pccard_disable

Function name	exmc_pccard_disable
Function prototype	void exmc_pccard_disable(void);
Function descriptions	disable PC Card bank
Precondition	-

The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable PC Card bank */

exmc_pccard_disable();
```

exmc_flag_get

The description of exmc_flag_get is shown as below:

Table 3-283. Function exmc_flag_get

Function name	exmc_flag_get
Function prototype	FlagStatus exmc_flag_get(uint32_t bank, uint32_t flag);
Function descriptions	check EXMC flag is set or not
Precondition	-
The called functions	-
Input parameter{in}	
bank	specifies the NAND bank , PC card bank
<i>EXMC_BANK1_NAND</i>	the NAND bank1
<i>EXMC_BANK2_NAND</i>	the NAND bank2
<i>EXMC_BANK3_PCCA RD</i>	the PC Card bank
Input parameter{in}	
flag	flag
<i>EXMC_NAND_PCCAR D_FLAG_RISE</i>	interrupt rising edge status
<i>EXMC_NAND_PCCAR D_FLAG_LEVEL</i>	interrupt high-level status
<i>EXMC_NAND_PCCAR D_FLAG_FALL</i>	interrupt falling edge status
<i>EXMC_NAND_PCCAR D_FLAG_FIFOE</i>	FIFO empty flag
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```

/* check EXMC flag is set or not */

FlagStatus status;

status = exmc_flag_get(EXMC_BANK1_NAND, EXMC_NAND_PCCARD_FLAG_RISE);
  
```

exmc_flag_clear

The description of exmc_flag_clear is shown as below:

Table 3-284. Function exmc_flag_clear

Function name	exmc_flag_clear
Function prototype	void exmc_flag_clear(uint32_t bank, uint32_t flag);
Function descriptions	clear EXMC flag
Precondition	-
The called functions	-
Input parameter{in}	
bank	specifies the NAND bank , PC card bank
<i>EXMC_BANK1_NAND</i>	the NAND bank1
<i>EXMC_BANK2_NAND</i>	the NAND bank2
<i>EXMC_BANK3_PCCA RD</i>	the PC Card bank
Input parameter{in}	
flag	flag
<i>EXMC_NAND_PCCAR D_FLAG_RISE</i>	interrupt rising edge status
<i>EXMC_NAND_PCCAR D_FLAG_LEVEL</i>	interrupt high-level status
<i>EXMC_NAND_PCCAR D_FLAG_FALL</i>	interrupt falling edge status
<i>EXMC_NAND_PCCAR D_FLAG_FIFOE</i>	FIFO empty flag
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* clear EXMC flag */

exmc_flag_clear(EXMC_BANK1_NAND, EXMC_NAND_PCCARD_FLAG_RISE);
  
```

exmc_interrupt_enable

The description of exmc_interrupt_enable is shown as below:

Table 3-285. Function exmc_interrupt_enable

Function name	exmc_interrupt_enable
Function prototype	void exmc_interrupt_enable(uint32_t bank, uint32_t interrupt);
Function descriptions	enable EXMC interrupt
Precondition	-
The called functions	-
Input parameter{in}	
bank	specifies the NAND bank,PC card bank
<i>EXMC_BANK1_NAND</i>	the NAND bank1
<i>EXMC_BANK2_NAND</i>	the NAND bank2
<i>EXMC_BANK3_PCCA RD</i>	the PC card bank
Input parameter{in}	
interrupt	specify get which interrupt flag
<i>EXMC_NAND_PCCAR D_INT_RISE</i>	interrupt source of rising edge
<i>EXMC_NAND_PCCAR D_INT_LEVEL</i>	interrupt source of high-level
<i>EXMC_NAND_PCCAR D_INT_FALL</i>	interrupt source of falling edge
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable EXMC interrupt */

exmc_interrupt_enable(EXMC_BANK1_NAND, EXMC_NAND_PCCARD_INT_RISE);
```

exmc_interrupt_disable

The description of exmc_interrupt_disable is shown as below:

Table 3-286. Function exmc_interrupt_disable

Function name	exmc_interrupt_disable
Function prototype	void exmc_interrupt_disable(uint32_t bank, uint32_t interrupt);
Function descriptions	disable EXMC interrupt
Precondition	-
The called functions	-
Input parameter{in}	
bank	specifies the NAND bank,PC card bank
<i>EXMC_BANK1_NAND</i>	the NAND bank1
<i>EXMC_BANK2_NAND</i>	the NAND bank2

<i>EXMC_BANK3_PCCA</i>	the PC card bank
Input parameter{in}	
<i>interrupt</i>	specify get which interrupt flag
<i>EXMC_NAND_PCCAR</i>	interrupt source of rising edge
<i>D_INT_RISE</i>	
<i>EXMC_NAND_PCCAR</i>	interrupt source of high-level
<i>D_INT_LEVEL</i>	
<i>EXMC_NAND_PCCAR</i>	interrupt source of falling edge
<i>D_INT_FALL</i>	
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable EXMC interrupt */
exmc_interrupt_disable(EXMC_BANK1_NAND, EXMC_NAND_PCCARD_INT_RISE);

exmc_interrupt_flag_get
```

The description of `exmc_interrupt_flag_get` is shown as below:

Table 3-287. Function `exmc_interrupt_flag_get`

Function name	<code>exmc_interrupt_flag_get</code>
Function prototype	<code>FlagStatus exmc_interrupt_flag_get(uint32_t bank, uint32_t int_flag);</code>
Function descriptions	check EXMC interrupt flag is set or not
Precondition	-
The called functions	-
Input parameter{in}	
bank	specifies the NAND bank , PC card bank
<i>EXMC_BANK1_NAND</i>	the NAND bank1
<i>EXMC_BANK2_NAND</i>	the NAND bank2
<i>EXMC_BANK3_PCCA</i>	the PC Card bank
<i>RD</i>	
Input parameter{in}	
int_flag	Interrupt flag
<i>EXMC_NAND_PCCAR</i>	interrupt source of rising edge
<i>D_INT_RISE</i>	
<i>EXMC_NAND_PCCAR</i>	interrupt source of high-level
<i>D_INT_LEVEL</i>	
<i>EXMC_NAND_PCCAR</i>	interrupt source of falling edge
<i>D_INT_FALL</i>	

Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* check EXMC interrupt flag is set or not */
```

```
FlagStatus status;
```

```
status = exmc_interrupt_flag_get(EXMC_BANK1_NAND,  
EXMC_NAND_PCCARD_INT_RISE);
```

exmc_interrupt_flag_clear

The description of exmc_interrupt_flag_clear is shown as below:

Table 3-288. Function exmc_interrupt_flag_clear

Function name	exmc_interrupt_flag_clear
Function prototype	void exmc_interrupt_flag_clear(uint32_t bank, uint32_t int_flag);
Function descriptions	clear EXMC interrupt flag
Precondition	-
The called functions	-
Input parameter{in}	
bank	specifies the NAND bank , PC card bank
<i>EXMC_BANK1_NAND</i>	the NAND bank1
<i>EXMC_BANK2_NAND</i>	the NAND bank2
<i>EXMC_BANK3_PCCA RD</i>	the PC Card bank
Input parameter{in}	
int_flag	Interrupt flag
<i>EXMC_NAND_PCCAR D_INT_RISE</i>	interrupt source of rising edge
<i>EXMC_NAND_PCCAR D_INT_LEVEL</i>	interrupt source of high-level
<i>EXMC_NAND_PCCAR D_INT_FALL</i>	interrupt source of falling edge
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear EXMC interrupt flag */
```

```
exmc_interrupt_flag_clear(EXMC_BANK1_NAND, EXMC_NAND_PCCARD_INT_RISE);
```

3.11. EXTI

EXTI is the interrupt/event controller in the MCU. It contains up to 20 independent edge detectors and generates interrupt requests or events to the processor. The EXTI registers are listed in chapter [3.11.1](#), the EXTI firmware functions are introduced in chapter [3.11.2](#).

3.11.1. Descriptions of Peripheral registers

EXTI registers are listed in the table shown as below:

Table 3-289. EXTI Registers

Registers	Descriptions
EXTI_INTEN	interrupt enable register
EXTI_EV_EN	event enable register
EXTI_RTEN	rising edge trigger enable register
EXTI_FTEN	falling edge trigger enable register
EXTI_SWIEV	software interrupt event register
EXTI_PD	pending register

3.11.2. Descriptions of Peripheral functions

EXTI firmware functions are listed in the table shown as below:

Table 3-290. EXTI firmware function

Function name	Function description
exti_deinit	deinitialize the EXTI
exti_init	initialize the EXTI line x
exti_interrupt_enable	enable the interrupts from EXTI line x
exti_interrupt_disable	disable the interrupts from EXTI line x
exti_event_enable	enable the events from EXTI line x
exti_event_disable	disable the events from EXTI line x
exti_software_interrupt_enable	enable the software interrupt event from EXTI line x
exti_software_interrupt_disable	disable the software interrupt event from EXTI line x
exti_flag_get	get EXTI line x interrupt pending flag
exti_flag_clear	clear EXTI line x interrupt pending flag
exti_interrupt_flag_get	get EXTI line x interrupt pending flag
exti_interrupt_flag_clear	clear EXTI line x interrupt pending flag

Enum exti_line_enum
Table 3-291. Enum exti_line_enum

Member name	Function description
EXTI_0	EXTI line 0
EXTI_1	EXTI line 1
EXTI_2	EXTI line 2
EXTI_3	EXTI line 3
EXTI_4	EXTI line 4
EXTI_5	EXTI line 5
EXTI_6	EXTI line 6
EXTI_7	EXTI line 7
EXTI_8	EXTI line 8
EXTI_9	EXTI line 9
EXTI_10	EXTI line 10
EXTI_11	EXTI line 11
EXTI_12	EXTI line 12
EXTI_13	EXTI line 13
EXTI_14	EXTI line 14
EXTI_15	EXTI line 15
EXTI_16	EXTI line 16
EXTI_17	EXTI line 17
EXTI_18	EXTI line 18
EXTI_19	EXTI line 19

Enum exti_mode_enum
Table 3-292. Enum exti_mode_enum

Member name	Function description
EXTI_INTERRUPT	EXTI interrupt mode
EXTI_EVENT	EXTI event mode

Enum exti_trig_type_enum
Table 3-293. Enum exti_trig_type_enum

Member name	Function description
EXTI_TRIG_RISING	EXTI rising edge trigger
EXTI_TRIG_FALLING	EXTI falling edge trigger
EXTI_TRIG_BOTH	EXTI rising and falling edge trigger
EXTI_TRIG_NONE	EXTI without rising or falling edge trigger

exti_deinit

The description of exti_deinit is shown as below:

Table 3-294. Function exti_deinit

Function name	exti_deinit
Function prototype	void exti_deinit(void);
Function descriptions	deinitialize the EXTI
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* deinitialize the EXTI */
exti_deinit();
```

exti_init

The description of exti_init is shown as below:

Table 3-295. Function exti_init

Function name	exti_init
Function prototype	void exti_init(exti_line_enum linex, exti_mode_enum mode, exti_trig_type_enum trig_type);
Function descriptions	initialize EXTI line x
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Input parameter{in}	
mode	EXTI mode, refer to Table 3-292. Enum exti_mode_enum
Input parameter{in}	
trig_type	trigger type, refer to Table 3-293. Enum exti_trig_type_enum
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure EXTI_0 */
exti_init(EXTI_0, EXTI_INTERRUPT, EXTI_TRIG_BOTH);
```

exti_interrupt_enable

The description of exti_interrupt_enable is shown as below:

Table 3-296. Function exti_interrupt_enable

Function name	exti_interrupt_enable
Function prototype	void exti_interrupt_enable(exti_line_enum linex);
Function descriptions	enable the interrupts from EXTI line x
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the interrupts from EXTI line 0 */
exti_interrupt_enable(EXTI_0);
```

exti_interrupt_disable

The description of exti_interrupt_disable is shown as below:

Table 3-297. Function exti_interrupt_disable

Function name	exti_interrupt_disable
Function prototype	void exti_interrupt_disable(exti_line_enum linex);
Function descriptions	disable the interrupts from EXTI line x
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the interrupts from EXTI line 0 */
exti_interrupt_disable(EXTI_0);
```

exti_event_enable

The description of exti_event_enable is shown as below:

Table 3-298. Function exti_event_enable

Function name	exti_event_enable
Function prototype	void exti_event_enable(exti_line_enum linex);
Function descriptions	enable the events from EXTI line x
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the events from EXTI line 0 */
exti_event_enable(EXTI_0);
```

exti_event_disable

The description of exti_event_disable is shown as below:

Table 3-299. Function exti_event_disable

Function name	exti_event_disable
Function prototype	void exti_event_disable(exti_line_enum linex);
Function descriptions	disable the events from EXTI line x
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the events from EXTI line 0 */
exti_event_disable(EXTI_0);
```

exti_software_interrupt_enable

The description of exti_software_interrupt_enable is shown as below:

Table 3-300. Function exti_software_interrupt_enable

Function name	exti_software_interrupt_enable
Function prototype	void exti_software_interrupt_enable(exti_line_enum linex);
Function descriptions	enable the software interrupt event from EXTI line x
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable EXTI line 0 software interrupt */
exti_software_interrupt_enable(EXTI_0);
```

exti_software_interrupt_disable

The description of exti_software_interrupt_disable is shown as below:

Table 3-301. Function exti_software_interrupt_disable

Function name	exti_software_interrupt_disable
Function prototype	void exti_software_interrupt_disable(exti_line_enum linex);
Function descriptions	disable the software interrupt event from EXTI line x
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable EXTI line 0 software interrupt */
exti_software_interrupt_disable(EXTI_0);
```

exti_flag_get

The description of exti_flag_get is shown as below:

Table 3-302. Function exti_flag_get

Function name	exti_flag_get
Function prototype	FlagStatus exti_flag_get(exti_line_enum linex);
Function descriptions	get EXTI line x interrupt pending flag
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get EXTI line 0 flag status */
FlagStatus state = exti_flag_get(EXTI_0);
```

exti_flag_clear

The description of exti_flag_clear is shown as below:

Table 3-303. Function exti_flag_clear

Function name	exti_flag_clear
Function prototype	void exti_flag_clear(exti_line_enum linex);
Function descriptions	clear EXTI line x interrupt pending flag
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear EXTI line 0 flag status */
exti_flag_clear(EXTI_0);
```

exti_interrupt_flag_get

The description of exti_interrupt_flag_get is shown as below:

Table 3-304. Function exti_interrupt_flag_get

Function name	exti_interrupt_flag_get
Function prototype	FlagStatus exti_interrupt_flag_get(exti_line_enum linex);
Function descriptions	get EXTI line x interrupt pending flag
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get EXTI line 0 interrupt flag status */
FlagStatus state = exti_interrupt_flag_get(EXTI_0);
```

exti_interrupt_flag_clear

The description of exti_interrupt_flag_clear is shown as below:

Table 3-305. Function exti_interrupt_flag_clear

Function name	exti_interrupt_flag_clear
Function prototype	void exti_interrupt_flag_clear(exti_line_enum linex);
Function descriptions	clear EXTI line x interrupt pending flag
Precondition	-
The called functions	-
Input parameter{in}	
linex	EXTI line x, refer to Table 3-291. Enum exti_line_enum
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear EXTI line 0 interrupt flag status */
exti_interrupt_flag_clear(EXTI_0);
```

3.12. FMC

There is flash controller and option byte for GD32F10x series. The FMC registers are listed in chapter [3.12.1](#) the FMC firmware functions are introduced in chapter [3.12.2](#).

3.12.1. Descriptions of Peripheral registers

FMC registers are listed in the table shown as below:

Table 3-306. FMC Registers

Registers	Descriptions
FMC_WS	Wait state register
FMC_KEY0	Unlock key register 0
FMC_OBKEY	Option byte unlock key register
FMC_STAT0	Status register 0
FMC_CTL0	Control register 0
FMC_ADDR0	Address register 0
FMC_OBSTAT	Option byte status register
FMC_WP	Erase/Program Protection register
FMC_KEY1	Unlock key register 1
FMC_STAT1	Status register 1
FMC_CTL1	Control register 1
FMC_ADDR1	Address register 1
FMC_WSEN	Wait state enable register
FMC_PID	Product ID register

3.12.2. Descriptions of Peripheral functions

FMC firmware functions are listed in the table shown as below:

Table 3-307. FMC firmware function

Function name	Function description
fmc_wscnt_set	set the FMC wait state counter
fmc_unlock	unlock the main FMC operation
fmc_bank0_unlock	unlock the FMC bank0 operation
fmc_bank1_unlock	unlock the FMC bank1 operation
fmc_lock	lock the main FMC operation
fmc_bank0_lock	lock the bank0 FMC operation
fmc_bank1_lock	lock the bank1 FMC operation
fmc_page_erase	FMC erase page
fmc_mass_erase	FMC erase whole chip
fmc_bank0_erase	FMC erase whole bank0
fmc_bank1_erase	FMC erase whole bank1

Function name	Function description
fmc_word_program	FMC program a word at the corresponding address
fmc_halfword_program	FMC program a half word at the corresponding address
ob_unlock	unlock the option byte operation
ob_lock	lock the option byte operation
ob_erase	erase the option byte
ob_write_protection_enable	enable write protection
ob_security_protection_config	configure the option byte security protection
ob_user_write	write the FMC user option byte
ob_data_program	program option bytes data
ob_user_get	get the FMC user option byte
ob_data_get	get OB_DATA in register FMC_OBSTAT
ob_write_protection_get	get the FMC option byte write protection
ob_spc_get	get option byte security protection code value
fmc_interrupt_enable	enable FMC interrupt
fmc_interrupt_disable	disable FMC interrupt
fmc_flag_get	check flag is set or not
fmc_flag_clear	clear the FMC flag
fmc_interrupt_flag_get	get FMC interrupt flag state
fmc_interrupt_flag_clear	clear FMC interrupt flag state
fmc_bank0_state_get	return the FMC bank0 state
fmc_bank1_state_get	return the FMC bank1 state
fmc_bank0_ready_wait	check FMC bank0 ready or not
fmc_bank1_ready_wait	check FMC bank1 ready or not

fmc_state_enum

Table 3-308. fmc_state_enum

enum name	enum description
FMC_READY	the operation has been completed
FMC_BUSY	the operation is in progress
FMC_PGERR	program error
FMC_WPERR	erase/program protection error
FMC_TOERR	timeout error

fmc_int_enum

Table 3-309. fmc_int_enum

enum name	enum description
FMC_INT_BANK0_END	enable FMC bank0 end of program interrupt
FMC_INT_BANK0_ERR	enable FMC bank0 error interrupt

enum name	enum description
FMC_INT_BANK1_END	enable FMC bank1 end of program interrupt
FMC_INT_BANK1_ERR	enable FMC bank1 error interrupt

fmc_flag_enum

Table 3-310. fmc_flag_enum

enum name	enum description
FMC_FLAG_BANK0_BUSY	FMC bank0 busy flag
FMC_FLAG_BANK0_PGERR	FMC bank0 operation error flag
FMC_FLAG_BANK0_WPERR	FMC bank0 erase/program protection error flag
FMC_FLAG_BANK0_END	FMC bank0 end of operation flag
FMC_FLAG_OBER_R	FMC option bytes read error flag
FMC_FLAG_BANK1_BUSY	FMC bank1 busy flag
FMC_FLAG_BANK1_PGERR	FMC bank1 operation error flag
FMC_FLAG_BANK1_WPERR	FMC bank1 erase/program protection error flag
FMC_FLAG_BANK1_END	FMC bank1 end of operation flag

fmc_interrupt_flag_enum

Table 3-311. fmc_interrupt_flag_enum

enum name	enum description
FMC_INT_FLAG_BANK0_PGERR	FMC bank0 operation error interrupt flag
FMC_INT_FLAG_BANK0_WPERR	FMC bank0 erase/program protection error interrupt flag
FMC_INT_FLAG_BANK0_END	FMC bank0 end of operation interrupt flag
FMC_INT_FLAG_BANK1_PGERR	FMC bank1 operation error interrupt flag
FMC_INT_FLAG_BANK1_WPERR	FMC bank1 erase/program protection error interrupt flag
FMC_INT_FLAG_BANK1_END	FMC bank1 end of operation interrupt flag

enum name	enum description
ANK1_END	

fmc_wscnt_set

The description of fmc_wscnt_set is shown as below:

Table 3-312. Function fmc_wscnt_set

Function name	fmc_wscnt_set
Function prototype	void fmc_wscnt_set(uint32_t wscnt);
Function descriptions	set the wait state counter value
Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
wscnt	wait state counter value
WS_WSCNT_0	FMC 0 wait
WS_WSCNT_1	FMC 1 wait
WS_WSCNT_2	FMC 2 wait
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set the wait state counter value */
fmc_wscnt_set (WS_WSCNT_1);
```

fmc_unlock

The description of fmc_unlock is shown as below:

Table 3-313. Function fmc_unlock

Function name	fmc_unlock
Function prototype	void fmc_unlock(void);
Function descriptions	unlock the main FMC operation
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* unlock the main FMC operation */
```

```
fmc_unlock( );
```

fmc_bank0_unlock

The description of fmc_bank0_unlock is shown as below:

Table 3-314. Function fmc_bank0_unlock

Function name	fmc_bank0_unlock
Function prototype	void fmc_bank0_unlock(void);
Function descriptions	unlock the main FMC bank0 operation
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* unlock the main FMC bank0 operation */
```

```
fmc_bank0_unlock( );
```

fmc_bank1_unlock

The description of fmc_bank1_unlock is shown as below:

Table 3-315. Function fmc_bank1_unlock

Function name	fmc_bank1_unlock
Function prototype	void fmc_bank1_unlock(void);
Function descriptions	unlock the main FMC bank1 operation
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* unlock the main FMC bank1 operation */
```

```
fmc_bank1_unlock( );
```

fmc_lock

The description of fmc_lock is shown as below:

Table 3-316. Function fmc_lock

Function name	fmc_lock
Function prototype	void fmc_lock(void);
Function descriptions	lock the main FMC operation
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* lock the main FMC operation */
fmc_lock();
```

fmc_bank0_lock

The description of fmc_bank0_lock is shown as below:

Table 3-317. Function fmc_bank0_lock

Function name	fmc_bank0_lock
Function prototype	void fmc_bank0_lock(void);
Function descriptions	lock the main FMC bank0 operation
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* lock the main FMC bank0 operation */
fmc_bank0_lock();
```

fmc_bank1_lock

The description of fmc_bank1_lock is shown as below:

Table 3-318. Function fmc_bank1_lock

Function name	fmc_bank1_lock
Function prototype	void fmc_bank1_lock(void);
Function descriptions	lock the main FMC bank1 operation
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* lock the main FMC bank1 operation */
fmc_bank1_lock();
```

fmc_page_erase

The description of fmc_page_erase is shown as below:

Table 3-319. Function fmc_page_erase

Function name	fmc_page_erase
Function prototype	fmc_state_enum fmc_page_erase(uint32_t page_address);
Function descriptions	erase page
Precondition	fmc_unlock
The called functions	fmc_bank0_ready_wait / fmc_bank1_ready_wait
Input parameter{in}	
page_address	the page address to be erased
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* erase page */
fmc_state_enum state = fmc_page_erase(0x08004000);
```

fmc_mass_erase

The description of fmc_mass_erase is shown as below:

Table 3-320. Function fmc_mass_erase

Function name	fmc_mass_erase
Function prototype	fmc_state_enum fmc_mass_erase(void);
Function descriptions	erase w hole chip
Precondition	fmc_unlock
The called functions	fmc_bank0_ready_wait/ fmc_bank1_ready_wait
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* erase whole chip */
fmc_state_enum state = fmc_mass_erase( );
```

fmc_bank0_erase

The description of fmc_bank0_erase is shown as below:

Table 3-321. Function fmc_bank0_erase

Function name	fmc_bank0_erase
Function prototype	fmc_state_enum fmc_bank0_erase(void);
Function descriptions	erase bank0 w hole chip
Precondition	fmc_unlock
The called functions	fmc_bank0_ready_wait
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* erase bank0 whole chip */
fmc_state_enum state = fmc_bank0_erase( );
```

fmc_bank1_erase

The description of fmc_bank1_erase is shown as below:

Table 3-322. Function fmc_bank1_erase

Function name	fmc_bank1_erase
Function prototype	fmc_state_enum fmc_bank1_erase();
Function descriptions	erase bank1 w hole chip
Precondition	fmc_unlock
The called functions	fmc_bank1_ready_wait
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* erase bank1 whole chip */
fmc_state_enum state = fmc_bank1_erase();
```

fmc_word_program

The description of fmc_word_program is shown as below:

Table 3-323. Function fmc_word_program

Function name	fmc_word_program
Function prototype	fmc_state_enum fmc_word_program(uint32_t address, uint32_t data);
Function descriptions	program a word at the corresponding address
Precondition	fmc_unlock
The called functions	fmc_bank0_ready_wait / fmc_bank1_ready_wait
Input parameter{in}	
address	the address to program
data	the data to program
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* program a word at the corresponding address */
fmc_state_enum state = fmc_word_program( 0x08004000,0xaabbccdd);
```

fmc_halfword_program

The description of fmc_halfword_program is shown as below:

Table 3-324. Function fmc_halfword_program

Function name	fmc_halfword_program
Function prototype	fmc_state_enum fmc_halfword_program(uint32_t address, uint16_t data);
Function descriptions	program a halfword at the corresponding address
Precondition	fmc_unlock
The called functions	fmc_bank0_ready_wait/ fmc_bank1_ready_wait
Input parameter{in}	
address	the address to program
data	the data to program
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* program a half word at the corresponding address */
fmc_state_enum state = fmc_halfword_program( 0x08004000,0xaabb);
```

ob_unlock

The description of ob_unlock is shown as below:

Table 3-325. Function ob_unlock

Function name	ob_unlock
Function prototype	void ob_unlock(void);
Function descriptions	unlock the option byte operation
Precondition	fmc_unlock
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* unlock the option byte operation */
ob_unlock( );
```

ob_lock

The description of ob_lock is shown as below:

Table 3-326. Function ob_lock

Function name	ob_lock
Function prototype	void ob_lock(void);
Function descriptions	lock the option byte operation
Precondition	fmc_lock
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* lock the option byte operation */

ob_lock();
```

ob_erase

The description of ob_erase is shown as below:

Table 3-327. Function ob_erase

Function name	ob_erase
Function prototype	void ob_erase(void);
Function descriptions	erase the FMC option byte
Precondition	ob_unlock
The called functions	fmc_bank0_ready_wait
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* erase the FMC option byte */

ob_erase();
```

ob_write_protection_enable

The description of ob_write_protection_enable is shown as below:

Table 3-328. Function ob_write_protection_enable

Function name	ob_write_protection_enable
Function prototype	fmc_state_enum ob_write_protection_enable(uint32_t ob_wp);
Function descriptions	enable write protection
Precondition	ob_unlock
The called functions	fmc_bank0_ready_wait
Input parameter{in}	
ob_wp	enable write protection
OB_WPx	write protect specify sector x(x=0..31)
OB_WP_ALL	write protect all sector
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* enable write protection */
fmc_state_enum state = ob_write_protection_enable(OB_WP7);
```

ob_security_protection_config

The description of ob_security_protection_config is shown as below:

Table 3-329. Function ob_security_protection_config

Function name	ob_security_protection_config
Function prototype	fmc_state_enum ob_security_protection_config (uint8_t ob_spc);
Function descriptions	configure security protection
Precondition	ob_unlock
The called functions	fmc_bank0_ready_wait
Input parameter{in}	
ob_spc	specify security protection
FMC_NSPC	no security protection
FMC_USPC	under security protection
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* enable security protection */
```

```
fmc_state_enum state = ob_security_protection_config(FMC_USPC);
```

ob_user_write

The description of ob_user_write is shown as below:

Table 3-330. Function ob_user_write

Function name	ob_user_write
Function prototype	fmc_state_enum ob_user_write(uint8_t ob_fwdgt, uint8_t ob_deepsleep, uint8_t ob_stby, uint8_t ob_boot);
Function descriptions	program the FMC user option byte
Precondition	ob_unlock
The called functions	fmc_bank0_ready_wait
Input parameter{in}	
ob_fwdgt	option byte watchdog value
OB_FWDGT_SW	software free watchdog
OB_FWDGT_HW	hardware free watchdog
Input parameter{in}	
ob_deepsleep	option byte deepsleep reset value
OB_DEEPSLEEP_NRS_T	no reset when entering deepsleep mode
OB_DEEPSLEEP_RST	generate a reset instead of entering deepsleep mode
Input parameter{in}	
ob_stby	option byte standby reset value
OB_STDBY_NRST	no reset when entering standby mode
OB_STDBY_RST	generate a reset instead of entering standby mode
Input parameter{in}	
ob_boot	specifies the option byte boot bank value
OB_BOOT_B0	boot from bank0
OB_BOOT_B1	boot from bank1 or bank0 if bank1 is void
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* configure user option byte */
```

```
fmc_state_enum state = ob_user_write(OB_FWDGT_HW, OB_DEEPSLEEP_RST,
OB_STDBY_RST, OB_BOOT_B1 );
```

ob_data_program

The description of ob_data_program is shown as below:

Table 3-331. Function ob_data_program

Function name	ob_data_program
Function prototype	fmc_state_enum ob_data_program(uint32_t address, uint8_t data);
Function descriptions	program option bytes data
Precondition	ob_unlock
The called functions	fmc_bank0_ready_wait
Input parameter{in}	
address	0x1ffff804 / 0x1ffff806
data	the byte to be programmed
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* program option bytes data */

fmc_state_enum state = ob_data_program(0x1ffff804, 0x56);
```

ob_user_get

The description of ob_user_get is shown as below:

Table 3-332. Function ob_user_get

Function name	ob_user_get
Function prototype	uint8_t ob_user_get(void);
Function descriptions	get the FMC user option byte
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint8_t	the FMC user option byte values(0xF0 – 0xFF)

Example:

```
/* get the FMC user option byte */

uint8_t user = ob_user_get();
```

ob_data_get

The description of ob_data_get is shown as below:

Table 3-333. Function ob_data_get

Function name	ob_data_get
Function prototype	uint8_t ob_data_get(void);
Function descriptions	get the FMC data option byte
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint8_t	the FMC data option byte values(0x0 – 0xFF)

Example:

```
/* get the FMC data option byte */
uint8_t data = ob_data_get();
```

ob_write_protection_get

The description of ob_write_protection_get is shown as below:

Table 3-334. Function ob_write_protection_get

Function name	ob_write_protection_get
Function prototype	uint32_t ob_write_protection_get(void);
Function descriptions	get the FMC option byte write protection
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint32_t	the FMC write protection option byte value(0x0 – 0xFFFFFFFF)

Example:

```
/* get the FMC option byte write protection */
uint32_t wp = ob_write_protection_get();
```

ob_spc_get

The description of ob_spc_get is shown as below:

Table 3-335. Function ob_spc_get

Function name	ob_spc_get
----------------------	------------

Function prototype	FlagStatus ob_spc_get(void);
Function descriptions	get the FMC option byte security protection
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get the FMC option byte security protection */

FlagStatus spc = ob_spc_get( );
```

fmc_interrupt_enable

The description of fmc_interrupt_enable is shown as below:

Table 3-336. Function fmc_interrupt_enable

Function name	fmc_interrupt_enable
Function prototype	void fmc_interrupt_enable(uint32_t interrupt);
Function descriptions	enable FMC interrupt
Precondition	-
The called functions	-
Input parameter{in}	
interrupt	the FMC interrupt source
<i>FMC_INT_BANK0_EN</i> <i>D</i>	FMC bank0 end of program interrupt
<i>FMC_INT_BANK0_ER</i> <i>R</i>	FMC bank0 error interrupt
<i>FMC_INT_BANK1_EN</i> <i>D</i>	FMC bank1 end of program interrupt
<i>FMC_INT_BANK1_ER</i> <i>R</i>	FMC bank1 error interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable FMC interrupt */

fmc_interrupt_enable(FMC_INT_BANK0_END);
```

fmc_interrupt_disable

The description of fmc_interrupt_disable is shown as below:

Table 3-337. Function fmc_interrupt_disable

Function name	fmc_interrupt_disable
Function prototype	void fmc_interrupt_disable(uint32_t interrupt);
Function descriptions	disable FMC interrupt
Precondition	-
The called functions	-
Input parameter{in}	
interrupt	the FMC interrupt source
<i>FMC_INT_BANK0_EN</i> <i>D</i>	FMC bank0 end of program interrupt
<i>FMC_INT_BANK0_ER</i> <i>R</i>	FMC bank0 error interrupt
<i>FMC_INT_BANK1_EN</i> <i>D</i>	FMC bank1 end of program interrupt
<i>FMC_INT_BANK1_ER</i> <i>R</i>	FMC bank1 error interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable FMC interrupt */
fmc_interrupt_disable(FMC_INT_BANK0_END);
```

fmc_flag_get

The description of fmc_flag_get is shown as below:

Table 3-338. Function fmc_flag_get

Function name	fmc_flag_get
Function prototype	FlagStatus fmc_flag_get(uint32_t flag);
Function descriptions	check flag is set or not
Precondition	-
The called functions	-
Input parameter{in}	
flag	check FMC flag
<i>FMC_FLAG_BANK0_B</i> <i>USY</i>	FMC bank0 busy flag bit
<i>FMC_FLAG_BANK0_P</i>	FMC bank0 operation error flag bit

<i>GERR</i>	
<i>FMC_FLAG_BANK0_W</i> <i>PERR</i>	FMC bank0 erase/program protection error flag bit
<i>FMC_FLAG_BANK0_E</i> <i>ND</i>	FMC bank0 end of operation flag bit
<i>FMC_FLAG_BANK1_B</i> <i>USY</i>	FMC bank1 busy flag bit
<i>FMC_FLAG_BANK1_P</i> <i>GERR</i>	FMC bank1 operation error flag bit
<i>FMC_FLAG_BANK1_W</i> <i>PERR</i>	FMC bank1 erase/program protection error flag bit
<i>FMC_FLAG_BANK1_E</i> <i>ND</i>	FMC bank1 end of operation flag bit
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get FMC flag */
FlagStatus flag = fmc_flag_get(FMC_FLAG_BANK0_END);
```

fmc_flag_clear

The description of fmc_flag_clear is shown as below:

Table 3-339. Function fmc_flag_clear

Function name	fmc_flag_clear
Function prototype	void fmc_flag_clear(uint32_t flag);
Function descriptions	clear the FMC flag
Precondition	-
The called functions	-
Input parameter{in}	
flag	clear FMC flag
<i>FMC_FLAG_BANK0_P</i> <i>GERR</i>	FMC bank0 operation error flag bit
<i>FMC_FLAG_BANK0_W</i> <i>PERR</i>	FMC bank0 erase/program protection error flag bit
<i>FMC_FLAG_BANK0_E</i> <i>ND</i>	FMC bank0 end of operation flag bit
<i>FMC_FLAG_BANK1_P</i> <i>GERR</i>	FMC bank1 operation error flag bit
<i>FMC_FLAG_BANK1_W</i>	FMC bank1 erase/program protection error flag bit

<i>PERR</i>	
<i>FMC_FLAG_BANK1_E</i> <i>ND</i>	FMC bank1 end of operation flag bit
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* get FMC flag */

fmc_flag_clear(FMC_FLAG_BANK0_END);
```

fmc_interrupt_flag_get

The description of fmc_interrupt_flag_get is shown as below:

Table 3-340. Function fmc_interrupt_flag_get

Function name	fmc_interrupt_flag_get
Function prototype	FlagStatus fmc_interrupt_flag_get(fmc_interrupt_flag_enum flag);
Function descriptions	get FMC interrupt flag state
Precondition	-
The called functions	-
Input parameter{in}	
<i>flag</i>	FMC flag
<i>FMC_INT_FLAG_BAN</i> <i>K0_PGERR</i>	FMC bank0 operation error flag bit
<i>FMC_</i> <i>INT_FLAG_BANK0_W</i> <i>PERR</i>	FMC bank0 erase/program protection error flag bit
<i>FMC_</i> <i>INT_FLAG_BANK0_END</i>	FMC bank0 end of operation flag bit
<i>FMC_</i> <i>INT_FLAG_BANK1_PG</i> <i>ERR</i>	FMC bank1 operation error flag bit
<i>FMC_</i> <i>INT_FLAG_BANK1_W</i> <i>PERR</i>	FMC bank1 erase/program protection error flag bit
<i>FMC_</i> <i>INT_FLAG_BANK1_EN</i> <i>D</i>	FMC bank1 end of operation flag bit
Output parameter{out}	
-	-
Return value	

FlagStatus	SET or RESET
------------	--------------

Example:

```
/* get FMC flag */
```

```
FlagStatus flag = fmc_interrupt_flag_get(FMC_INT_FLAG_BANK0_PGERR);
```

fmc_interrupt_flag_clear

The description of fmc_interrupt_flag_get is shown as below:

Table 3-341. Function fmc_interrupt_flag_clear

Function name	fmc_interrupt_flag_clear
Function prototype	FlagStatus fmc_interrupt_flag_clear (fmc_interrupt_flag_enum flag);
Function descriptions	clear FMC interrupt flag state
Precondition	-
The called functions	-
Input parameter{in}	
flag	clear FMC flag
<i>FMC_INT_FLAG_BAN K0_PGERR</i>	FMC bank0 operation error flag bit
<i>FMC_ INT_FLAG_BANK0_W PERR</i>	FMC bank0 erase/program protection error flag bit
<i>FMC_INT_FLAG_BAN K0_END</i>	FMC bank0 end of operation flag bit
<i>FMC_ INT_FLAG_BANK1_PG ERR</i>	FMC bank1 operation error flag bit
<i>FMC_ INT_FLAG_BANK1_W PERR</i>	FMC bank1 erase/program protection error flag bit
<i>FMC_ INT_FLAG_BANK1_EN D</i>	FMC bank1 end of operation flag bit
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear FMC flag */
```

```
fmc_interrupt_flag_get(FMC_INT_FLAG_BANK0_PGERR);
```

fmc_bank0_state_get

The description offmc_bank0_state_get is shown as below:

Table 3-342. Function fmc_bank0_state_get

Function name	fmc_bank0_state_get
Function prototype	fmc_state_enum fmc_bank0_state_get(void);
Function descriptions	get the FMC bank0 state
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* get the FMC bank0 state */

fmc_state_enum state = fmc_bank0_state_get();
```

fmc_bank1_state_get

The description offmc_bank1_state_get is shown as below:

Table 3-343. Function fmc_bank1_state_get

Function name	fmc_bank1_state_get
Function prototype	fmc_state_enum fmc_bank1_state_get(void);
Function descriptions	get the FMC bank1 state
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* get the FMC bank1 state */

fmc_state_enum state = fmc_bank1_state_get();
```

fmc_bank0_ready_wait

The description offmc_bank0_ready_waitis shown as below:

Table 3-344. Function fmc_bank0_ready_wait

Function name	fmc_bank0_ready_wait
Function prototype	fmc_state_enum fmc_bank0_ready_wait(uint32_t timeout);
Function descriptions	check whether FMC bank0 is ready or not
Precondition	-
The called functions	fmc_bank0_state_get()
Input parameter{in}	
timeout	count of loop
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* check whether FMC bank0 is ready or not */
fmc_state_enum state = fmc_bank0_ready_wait(0x00001000 );
```

fmc_bank1_ready_wait

The description offmc_bank1_ready_waitis shown as below:

Table 3-345. Function fmc_bank1_ready_wait

Function name	fmc_bank1_ready_wait
Function prototype	fmc_state_enum fmc_bank1_ready_wait(uint32_t timeout);
Function descriptions	check whether FMC bank1 is ready or not
Precondition	-
The called functions	fmc_bank1_state_get
Input parameter{in}	
timeout	count of loop
Output parameter{out}	
-	-
Return value	
fmc_state_enum	state of FMC, refer to Table 3-308. fmc_state_enum

Example:

```
/* check whether FMC bank1 is ready or not */
fmc_state_enum state = fmc_bank1_ready_wait(0x00001000 );
```

3.13. FWDGT

The free watchdog timer (FWDGT) is a hardware timing circuitry that can be used to detect system failures due to software malfunctions. It's suitable for the situation that requires an independent environment and lower timing accuracy. The FWDGT registers are listed in chapter [3.11.1](#), the FWDGT firmware functions are introduced in chapter [9](#).

3.13.1. Descriptions of Peripheral registers

FWDGT registers are listed in the table shown as below:

Table 3-346. FWDGT Registers

Registers	Descriptions
FWDGT_CTL	Control register
FWDGT_PSC	Prescaler register
FWDGT_RLD	Reload register
FWDGT_STAT	Status register

3.13.2. Descriptions of Peripheral functions

FWDGT firmware functions are listed in the table shown as below:

Table 3-347. FWDGT firmware function

Function name	Function description
fw_dgt_write_enable	enable write access to FWDGT_PSC and FWDGT_RLD
fw_dgt_write_disable	disable write access to FWDGT_PSC and FWDGT_RLD
fw_dgt_enable	start the FWDGT counter
fw_dgt_prescaler_value_config	configure the free watchdog timer counter prescaler value
fw_dgt_reload_value_config	configure the free watchdog timer counter reload value
fw_dgt_counter_reload	reload the counter of FWDGT
fw_dgt_config	configure counter reload value, and prescaler divider value
fw_dgt_flag_get	get flag state of FWDGT

fwdgt_write_enable

The description of fwdgt_write_enable is shown as below:

Table 3-348. Function fwdgt_write_enable

Function name	fw_dgt_write_enable
Function prototype	void fw_dgt_write_enable(void);
Function descriptions	enable write access to FWDGT_PSC and FWDGT_RLD
Precondition	-
The called functions	-
Input parameter{in}	

-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable write access to FWDGT_PSC and FWDGT_RLD */
fwdgt_write_enable();
```

fwdgt_write_disable

The description of fwdgt_write_disable is shown as below:

Table 3-349. Function fwdgt_write_disable

Function name	fw dgt_write_disable
Function prototype	void fw dgt_write_disable(void);
Function descriptions	disable write access to FWDGT_PSC and FWDGT_RLD
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable write access to FWDGT_PSC and FWDGT_RLD */
fwdgt_write_disable();
```

fwdgt_enable

The description of fwdgt_enable is shown as below:

Table 3-350. Function fwdgt_enable

Function name	fw dgt_enable
Function prototype	void fw dgt_enable(void);
Function descriptions	start the free watchdog timer counter
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	

-	-
Return value	
-	-

Example:

```
/* start the free watchdog timer counter */

fwdgt_enable( );
```

wdgt_prescaler_value_config

The description of fwdgt_prescaler_value_config is shown as below:

Table 3-351. Function fwdgt_prescaler_value_config

Function name	fw dgt_prescaler_value_config
Function prototype	ErrStatus fw dgt_prescaler_value_config(uint16_t prescaler_value);
Function descriptions	configure the free watchdog timer counter prescaler value
Precondition	-
Input parameter{in}	
prescaler_value	specify prescaler value
<i>FWDGT_PSC_DIV4</i>	FWDGT prescaler set to 4
<i>FWDGT_PSC_DIV8</i>	FWDGT prescaler set to 8
<i>FWDGT_PSC_DIV16</i>	FWDGT prescaler set to 16
<i>FWDGT_PSC_DIV32</i>	FWDGT prescaler set to 32
<i>FWDGT_PSC_DIV64</i>	FWDGT prescaler set to 64
<i>FWDGT_PSC_DIV128</i>	FWDGT prescaler set to 128
<i>FWDGT_PSC_DIV256</i>	FWDGT prescaler set to 256
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR / SUCCESS

Example:

```
/* set FWDGT prescaler to 256 */

ErrStatus flag;

flag = fwdgt_prescaler_value_config (FWDGT_PSC_DIV256);
```

fwdgt_reload_value_config

The description of fwdgt_reload_value_config is shown as below:

Table 3-352. Function fwdgt_reload_value_config

Function name	fw dgt_reload_value_config
Function prototype	ErrStatus fw dgt_reload_value_config(uint16_t reload_value);

Function descriptions	configure the free watchdog timer counter reload value
Precondition	-
Input parameter{in}	
reload_value	reload_value: specify window value(0x0000 - 0xFFFF)
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR / SUCCESS

Example:

```
/* set FWDGT reload value to 0xFFFF */

ErrStatus flag;

flag = fwdgt_reload_value_config (0xFFFF);
```

fwdgt_counter_reload

The description of fwdgt_counter_reload is shown as below:

Table 3-353. Function fwdgt_counter_reload

Function name	fwdgt_counter_reload
Function prototype	void fwdgt_counter_reload(void);
Function descriptions	reload the counter of FWDGT
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reload FWDGT counter */

fwdgt_counter_reload();
```

fwdgt_config

The description of fwdgt_config is shown as below:

Table 3-354. Function fwdgt_config

Function name	fwdgt_config
Function prototype	ErrStatus fwdgt_config(uint16_t reload_value, uint8_t prescaler_div);
Function descriptions	configure counter reload value, and prescaler divider value

Precondition	-
The called functions	-
Input parameter{in}	
reload_value	specify reload value(0x0000 - 0xFFFF)
Input parameter{in}	
prescaler_div	FWDGT prescaler value
<i>FWDGT_PSC_DIV4</i>	FWDGT prescaler set to 4
<i>FWDGT_PSC_DIV8</i>	FWDGT prescaler set to 8
<i>FWDGT_PSC_DIV16</i>	FWDGT prescaler set to 16
<i>FWDGT_PSC_DIV32</i>	FWDGT prescaler set to 32
<i>FWDGT_PSC_DIV64</i>	FWDGT prescaler set to 64
<i>FWDGT_PSC_DIV128</i>	FWDGT prescaler set to 128
<i>FWDGT_PSC_DIV256</i>	FWDGT prescaler set to 256
Output parameter{out}	
-	-
Return value	
ErrStatus	ERROR or SUCCESS

Example:

```
/* config FWDGT counter clock: 40KHz(IRC40K) / 64 = 0.625 KHz */

ErrStatus status;

status = fwdgt_config(2*500, FWDGT_PSC_DIV64);
```

fwdgt_flag_get

The description of fwdgt_flag_get is shown as below:

Table 3-355. Function fwdgt_flag_get

Function name	fwdgt_flag_get
Function prototype	FlagStatus fwdgt_flag_get(uint16_t flag);
Function descriptions	get flag state of FWDGT
Precondition	-
The called functions	-
Input parameter{in}	
flag	flag to get
<i>FWDGT_FLAG_PUD</i>	a write operation to FWDGT_PSC register is on going
<i>FWDGT_FLAG_RUD</i>	a write operation to FWDGT_RLD register is on going
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* test if a prescaler value update is on going */
```

```
FlagStatus status;
status = fwdgt_flag_get(FWDGT_FLAG_PUD);
```

3.14. GPIO

GPIO is used to implement logic input/output functions for the devices. The ADC registers are listed in chapter [3.14.1](#), the ADC firmware functions are introduced in chapter [3.14.2](#).

3.14.1. Descriptions of Peripheral registers

GPIO registers are listed in the table shown as below:

Table 3-356. GPIO Registers

Registers	Descriptions
GPIOx_CTL0	GPIO port control register 0
GPIOx_CTL1	GPIO port control register 1
GPIOx_ISTAT	GPIO port input status register
GPIOx_OCTL	GPIO port output control register
GPIOx_BOP	GPIO port bit operate register
GPIOx_BC	GPIO port bit clear register
GPIOx_LOCK	GPIO port configuration lock register
AFIO_EC	AFIO eventevent control register
AFIO_PCF0	AFIO port configuration register 0
AFIO_EXTISSL0	AFIO port EXTI sources selection register 0
AFIO_EXTISSL1	AFIO port EXTI sources selection register 1
AFIO_EXTISSL2	AFIO port EXTI sources selection register 2
AFIO_EXTISSL3	AFIO port EXTI sources selection register 3
AFIO_PCF1	AFIO port configuration register 1

3.14.2. Descriptions of Peripheral functions

GPIO firmware functions are listed in the table shown as below:

Table 3-357. GPIO firmware function

Function name	Function description
gpio_deinit	reset GPIO port
gpio_afio_deinit	reset alternate function I/O(AFIO)
gpio_init	GPIO parameter initialization
gpio_bit_set	set GPIO pin bit
gpio_bit_reset	reset GPIO pin bit
gpio_bit_write	w rite data to the specified GPIO pin

Function name	Function description
gpio_port_write	write data to the specified GPIO port
gpio_input_bit_get	get GPIO pin input status
gpio_input_port_get	get GPIO port input status
gpio_output_bit_get	get GPIO pin output status
gpio_output_port_get	get GPIO port output status
gpio_pin_remap_config	configure GPIO pin remap
gpio_exti_source_select	select GPIO pin exti sources
gpio_event_output_config	configure GPIO pin event output
gpio_event_output_enable	enable GPIO pin event output
gpio_event_output_disable	disable GPIO pin event output
gpio_pin_lock	lock GPIO pin bit
gpio_ethernet_phy_select	select ethernet MII or RMII PHY

gpio_deinit

The description of gpio_deinit is shown as below:

Table 3-358. Function gpio_deinit

Function name	gpio_deinit
Function prototype	void gpio_deinit(uint32_t gpio_periph);
Function descriptions	reset GPIO port
Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset GPIOA */
gpio_deinit(GPIOA);
```

gpio_afio_deinit

The description of gpio_afio_deinit is shown as below:

Table 3-359. Function gpio_afio_deinit

Function name	gpio_afio_deinit
Function prototype	void gpio_afio_deinit(void);
Function descriptions	reset alternate function I/O(AFIO)

Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset alternate function */
gpio_afio_deinit();
```

gpio_init

The description of gpio_init is shown as below:

Table 3-360. Function gpio_init

Function name	gpio_init
Function prototype	void gpio_init(uint32_t gpio_periph, uint32_t mode, uint32_t speed, uint32_t pin);
Function descriptions	GPIO parameter initialization
Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Input parameter{in}	
mode	gpio pin mode
GPIO_MODE_AIN	analog input mode
GPIO_MODE_IN_FLOATING	floating input mode
GPIO_MODE_IPD	pull-down input mode
GPIO_MODE_IPU	pull-up input mode
GPIO_MODE_OUT_OD	GPIO output with open-drain
GPIO_MODE_OUT_PP	GPIO output with push-pull
GPIO_MODE_AF_OD	AFIO output with open-drain
GPIO_MODE_AF_PP	AFIO output with push-pull
Input parameter{in}	
speed	gpio output max speed value
GPIO_OSPEED_10MHZ	output max speed 10MHz

<i>GPIO_OSPEED_2MHZ</i>	output max speed 2MHz
<i>GPIO_OSPEED_50MHZ</i>	output max speed 50MHz
Input parameter{in}	
pin	GPIO pin
<i>GPIO_PIN_x</i>	<i>GPIO_PIN_x</i> (x=0..15)
<i>GPIO_PIN_ALL</i>	All pins
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* config PA0 as analog input mode*/
gpio_init(GPIOA, GPIO_MODEAIN, GPIO_OSPEED_50MHZ, GPIO_PIN_0);
```

gpio_bit_set

The description of gpio_bit_set is shown as below:

Table 3-361. Function gpio_bit_set

Function name	gpio_bit_set
Function prototype	void gpio_bit_set(uint32_t gpio_periph, uint32_t pin);
Function descriptions	set GPIO pin
Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
<i>GPIOx</i>	<i>GPIOx</i> (x = A,B,C,D,E,F,G)
Input parameter{in}	
pin	GPIO pin
<i>GPIO_PIN_x</i>	<i>GPIO_PIN_x</i> (x=0..15)
<i>GPIO_PIN_ALL</i>	All pins
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set PA0*/
gpio_bit_set(GPIOA, GPIO_PIN_0);
```

gpio_bit_reset

The description of gpio_bit_reset is shown as below:

Table 3-362. Function gpio_bit_reset

Function name	gpio_bit_reset
Function prototype	void gpio_bit_reset(uint32_t gpio_periph, uint32_t pin);
Function descriptions	reset GPIO pin bit
Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Input parameter{in}	
pin	GPIO pin
GPIO_PIN_x	GPIO_PIN_x(x=0..15)
GPIO_PIN_ALL	All pins
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset PA0*/
gpio_bit_set(GPIOA, GPIO_PIN_0);
```

gpio_bit_write

The description of gpio_bit_write is shown as below:

Table 3-363. Function gpio_bit_write

Function name	gpio_bit_write
Function prototype	void gpio_bit_write(uint32_t gpio_periph, uint32_t pin, bit_status bit_value);
Function descriptions	write data to the specified GPIO pin
Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Input parameter{in}	
pin	GPIO pin
GPIO_PIN_x	GPIO_PIN_x(x=0..15)
GPIO_PIN_ALL	All pins
Input parameter{in}	

bit_value	SET or RESET
<i>RESET</i>	clear the port pin
<i>SET</i>	set the port pin
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* write 1 to PA0 */
gpio_bit_write(GPIOA, GPIO_PIN_0, SET);
```

gpio_port_write

The description of gpio_port_write is shown as below:

Table 3-364. Function gpio_port_write

Function name	gpio_port_w rite
Function prototype	void gpio_port_w rite(uint32_t gpio_periph, uint16_t data);
Function descriptions	w rite data to the specified GPIO port
Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Input parameter{in}	
data	specify the value to be w ritten to the port output data register
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/*write 1010 0101 to Port A */
gpio_port_write(GPIOA, 0xA5);
```

gpio_input_bit_get

The description of gpio_input_bit_get is shown as below:

Table 3-365. Function gpio_input_bit_get

Function name	gpio_input_bit_get
Function prototype	FlagStatus gpio_input_bit_get(uint32_t gpio_periph, uint32_t pin);
Function descriptions	get GPIO pin input status

Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Input parameter{in}	
pin	GPIO pin
GPIO_PIN_x	GPIO_PIN_x(x=0..15)
GPIO_PIN_ALL	All pins
Output parameter{out}	
-	-
Return value	
FlagStatus	SET / RESET

Example:

```
/* get status of PA0 */
FlagStatus bit_state;
bit_state = gpio_input_bit_get(GPIOA, GPIO_PIN_0);

gpio_input_port_get
```

The description of `gpio_input_port_get` is shown as below:

Table 3-366. Function `gpio_input_port_get`

Function name	gpio_input_port_get
Function prototype	uint16_t gpio_input_port_get(uint32_t gpio_periph);
Function descriptions	get GPIO port input status
Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Output parameter{out}	
-	-
Return value	
uint16_t	0x00-0xFF

Example:

```
/* get input value of Port A */
uint16_t port_state;
port_state = gpio_input_bit_get(GPIOA);
```

gpio_output_bit_get

The description of gpio_output_bit_get is shown as below:

Table 3-367. Function gpio_output_bit_get

Function name	gpio_output_bit_get
Function prototype	FlagStatus gpio_output_bit_get(uint32_t gpio_periph, uint32_t pin);
Function descriptions	get GPIO pin output status
Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Input parameter{in}	
pin	GPIO pin
GPIO_PIN_x	GPIO_PIN_x(x=0..15)
GPIO_PIN_ALL	All pins
Output parameter{out}	
-	-
Return value	
FlagStatus	SET / RESET

Example:

```
/* get output status of PA0 */
FlagStatus bit_state;
bit_state = gpio_output_bit_get(GPIOA, GPIO_PIN_0);
```

gpio_output_port_get

The description of gpio_output_port_get is shown as below:

Table 3-368. Function gpio_output_port_get

Function name	gpio_output_port_get
Function prototype	uint16_t gpio_output_port_get(uint32_t gpio_periph);
Function descriptions	get GPIO port output status
Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Output parameter{out}	
-	-
Return value	

uint16_t	0x00-0xFF
----------	-----------

Example:

```
/* get output value of Port A */
uint16_t port_state;
port_state = gpio_output_port_get(GPIOA);
```

gpio_pin_remap_config

The description of gpio_pin_remap_config is shown as below:

Table 3-369. Function gpio_pin_remap_config

Function name	gpio_pin_remap_config
Function prototype	void gpio_pin_remap_config(uint32_t gpio_remap, ControlStatus new value);
Function descriptions	configure GPIO pin remap
Precondition	-
The called functions	-
Input parameter{in}	
gpio_remap	select the pin to remap
GPIO_SPI0_REMAP	SPI0 remapping
GPIO_I2C0_REMAP	I2C0 remapping
GPIO_USART0_REMAP	USART0 remapping
GPIO_USART1_REMAP	USART1 remapping
GPIO_USART2_PARTI_AL_REMAP	USART2 partial remapping
GPIO_USART2_FULL_REMAP	USART2 full remapping
GPIO_TIMER0_PARTI_AL_REMAP	TIMER0 partial remapping
GPIO_TIMER0_FULL_REMAP	TIMER0 full remapping
GPIO_TIMER1_PARTI_AL_REMAP1	TIMER1 partial remapping
GPIO_TIMER1_PARTI_AL_REMAP2	TIMER1 partial remapping
GPIO_TIMER1_FULL_REMAP	TIMER1 full remapping
GPIO_TIMER2_PARTI_AL_REMAP	TIMER2 partial remapping
GPIO_TIMER2_FULL_REMAP	TIMER2 full remapping

<code>GPIO_TIMER3_REMAP_P</code>	TIMER3 remapping
<code>GPIO_CAN_PARTIAL_REMAP</code>	CAN partial remapping(only for GD32F10X_MD, GD32F10X_HD devices and GD32F10X_XD devices)
<code>GPIO_CAN_FULL_REMAP</code>	CAN full remapping(only for GD32F10X_MD, GD32F10X_HD devices and GD32F10X_XD devices)
<code>GPIO_CAN0_PARTIAL_REMAP</code>	CAN0 partial remapping(only for GD32F10X_CL devices)
<code>GPIO_CAN0_FULL_REMAP</code>	CAN0 full remapping(only for GD32F10X_CL devices)
<code>GPIO_PD01_REMAP</code>	PD01 remapping
<code>GPIO_TIMER4CH3_IR_EMAP</code>	TIMER4 channel3 internal remapping(only for GD32F10X_CL devices and GD32F10X_HD devices)
<code>GPIO_ADC0_ETRGRT_REMAP</code>	ADC0 external trigger routine conversion remapping(only for GD32F10X_MD, GD32F10X_HD devices and GD32F10X_XD devices)
<code>GPIO_ADC1_ETRGRT_REMAP</code>	ADC1 external trigger routine conversion remapping(only for GD32F10X_MD, GD32F10X_HD devices and GD32F10X_XD devices)
<code>GPIO_ENET_REMAP</code>	ENET remapping(only for GD32F10X_CL devices)
<code>GPIO_CAN1_REMAP</code>	CAN1 remapping(only for GD32F10X_CL devices)
<code>GPIO_SWJ_NONJTRS_T_REMAP</code>	full SWJ(JTAG-DP + SW-DP),but without NJTRST
<code>GPIO_SWJ_SWDPENABLE_REMAP</code>	JTAG-DP disabled and SW-DP enabled
<code>GPIO_SWJ_DISABLE_REMAP</code>	JTAG-DP disabled and SW-DP disabled
<code>GPIO_SPI2_REMAP</code>	SPI2 remapping(only for GD32F10X_CL devices)
<code>GPIO_TIMER1IT1_REMAP</code>	TIMER1 internal trigger 1 remapping(only for GD32F10X_CL devices)
<code>GPIO_PTP_PPS_REMAP_AP</code>	ethernet PTP PPS remapping(only for GD32F10X_CL devices)
<code>GPIO_TIMER8_REMAP_P</code>	TIMER8 remapping
<code>GPIO_TIMER9_REMAP_P</code>	TIMER9 remapping
<code>GPIO_TIMER10_REMAP_AP</code>	TIMER10 remapping
<code>GPIO_TIMER12_REMAP_AP</code>	TIMER12 remapping
<code>GPIO_TIMER13_REMAP_AP</code>	TIMER13 remapping
<code>GPIO_EXMC_NADV_R_EMAP</code>	EXMC_NA DV connect/disconnect
Input parameter{in}	

new value	ENABLE or DISABLE
<i>ENABLE</i>	<i>enable</i>
<i>DISABLE</i>	<i>disable</i>
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/*enable SPI0 remapping*/
gpio_pin_remap_config (GPIO_SPI0_REMAP, ENABLE);
```

gpio_exti_source_select

The description of gpio_exti_source_select is shown as below:

Table 3-370. Function gpio_exti_source_select

Function name	gpio_exti_source_select
Function prototype	void gpio_exti_source_select(uint8_t gpio_outputport, uint8_t gpio_outputpin);
Function descriptions	select GPIO pin exti sources
Precondition	-
The called functions	-
Input parameter{in}	
gpio_outputport	gpio event output port
GPIO_PORT_SOURCE_GPIOn	output port source (x=A..G)
Input parameter{in}	
gpio_outputpin	gpio event output pin
GPIO_PIN_SOURCE_x	Pin number(x=0..15)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* config PA0 as EXTI source*/
gpio_exti_source_select(GPIO_PORT_SOURCE_GPIOA, GPIO_PIN_SOURCE_0);
```

gpio_event_output_config

The description of gpio_event_output_config is shown as below:

Table 3-371. Function gpio_event_output_config

Function name	gpio_event_output_config
Function prototype	void gpio_event_output_config(uint8_t gpio_outputport, uint8_t gpio_outputpin);
Function descriptions	configure GPIO pin event output
Precondition	-
The called functions	-
Input parameter{in}	
gpio_outputport	gpio event output port
GPIO_EVENT_PORT_GPIOx	event output port x (x=A..G)
Input parameter{in}	
gpio_outputpin	gpio event output pin
GPIO_EVENT_PIN_x	Pin number (x=0..15)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* Config PA0 as the output of event */
gpio_event_output_config(GPIO_EVENT_PORT_GPIOA, GPIO_EVENT_PIN_0);
```

gpio_event_output_enable

The description of gpio_event_output_enable is shown as below:

Table 3-372. Function gpio_event_output_enable

Function name	gpio_event_output_enable
Function prototype	void gpio_event_output_enable(void);
Function descriptions	enable GPIO pin event output
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable GPIO pin event output */
gpio_event_output_enable();
```

gpio_event_output_disable

The description of gpio_event_output_disable is shown as below:

Table 3-373. Function gpio_event_output_disable

Function name	gpio_event_output_disable
Function prototype	void gpio_event_output_disable(void);
Function descriptions	disable GPIO pin event output
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable GPIO pin event output */

gpio_event_output_disable();
```

gpio_pin_lock

The description of gpio_pin_lock is shown as below:

Table 3-374. Function gpio_pin_lock

Function name	gpio_pin_lock
Function prototype	void gpio_pin_lock(uint32_t gpio_periph, uint32_t pin);
Function descriptions	lock GPIO pin
Precondition	-
The called functions	-
Input parameter{in}	
gpio_periph	GPIO port
GPIOx	GPIOx(x = A,B,C,D,E,F,G)
Input parameter{in}	
pin	GPIO pin
GPIO_PIN_x	GPIO_PIN_x(x=0..15)
GPIO_PIN_ALL	All pins
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* lock PA0 */

gpio_pin_lock(GPIOA, GPIO_PIN_0);

```

gpio_ethernet_phy_select

The description of gpio_ethernet_phy_select is shown as below:

Table 3-375. Function gpio_ethernet_phy_select

Function name	gpio_ethernet_phy_select
Function prototype	void gpio_ethernet_phy_select(uint32_t gpio_enetsel);
Function descriptions	select ethernet MII or RMII PHY
Precondition	-
The called functions	-
Input parameter{in}	
gpio_enetsel	ethernet MII or RMII PHY selection
GPIO_ENET_PHY_MII	configure ethernet MAC for connection with an MII PHY
GPIO_ENET_PHY_RM II	configure ethernet MAC for connection with an RMII PHY
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure ethernet MAC for connection with an RMII PHY */

gpio_ethernet_phy_select(GPIO_ENET_PHY_RMII);

```

3.15. I2C

The I2C (inter-integrated circuit) module provides an I2C interface which is an industry standard two-line serial interface for MCU to communicate with external I2C interface. The I2C registers are listed in chapter [3.15.1](#), the I2C firmware functions are introduced in chapter [3.15.2](#).

3.15.1. Descriptions of Peripheral registers

I2C registers are listed in the table shown as below:

Table 3-376. I2C Registers

Registers	Descriptions
I2C_CTL0	Control register 0
I2C_CTL1	Control register 1
I2C_SADDR0	Slave address register 0

Registers	Descriptions
I2C_SADDR1	Slave address register 1
I2C_DATA	Transfer buffer register
I2C_STAT0	Transfer status register 0
I2C_STAT1	Transfer status register 1
I2C_CKCFG	Clock configure register
I2C_RT	Rise time register

3.15.2. Descriptions of Peripheral functions

I2C firmware functions are listed in the table shown as below:

Table 3-377. I2C firmware function

Function name	Function description
i2c_deinit	reset I2C
i2c_clock_config	configure I2C clock
i2c_mode_addr_config	configure I2C address
i2c_smbus_type_config	select SMBus type
i2c_ack_config	w hether or not to send an ACK
i2c_ackpos_config	configure I2C POAP position
i2c_master_addressing	master send slave address
i2c_dualaddr_enable	enable dual-address mode
i2c_dualaddr_disable	disable dual-address mode
i2c_enable	enable I2C
i2c_disable	disable I2C
i2c_start_on_bus	generate a START condition on I2C bus
i2c_stop_on_bus	generate a STOP condition on I2C bus
i2c_data_transmit	I2C transmit data function
i2c_data_receive	I2C receive data function
i2c_dma_config	configure I2C DMA mode
i2c_dma_last_transfer_config	configure w hether next DMA EOT is DMA last transfer or not
i2c_stretch_scl_low_config	w hether to stretch SCL low w hen data is not ready in slave mode
i2c_slave_response_to_gcall_config	w hether or not to response to a general call
i2c_softw are_reset_config	configure softw are reset of I2C
i2c_pec_config	configure I2C PEC calculation
i2c_pec_transfer_config	configure w hether to transfer PEC value
i2c_pec_value_get	packet error checking value
i2c_smbus_alert_config	configure I2C alert through SMBA pin
i2c_smbus_arp_config	configure I2C ARP protocol in SMBus
i2c_flag_get	get I2C flag status
i2c_flag_clear	clear I2C flag status
i2c_interrupt_enable	enable I2C interrupt

Function name	Function description
i2c_interrupt_disable	disable I2C interrupt
i2c_interrupt_flag_get	get I2C interrupt flag status
i2c_interrupt_flag_clear	clear I2C interrupt flag status

Enum i2c_flag_enum

Table 3-378. Enum i2c_flag_enum

Member name	Function description
I2C_FLAG_SBSEND	start condition sent out in master mode
I2C_FLAG_ADDSEND	address is sent in master mode or received and matches in slave mode
I2C_FLAG_BTC	byte transmission finishes
I2C_FLAG_ADD10SEND	header of 10-bit address is sent in master mode
I2C_FLAG_STPDET	stop condition detected in slave mode
I2C_FLAG_RBNE	I2C_DATA is not Empty during receiving
I2C_FLAG_TBE	I2C_DATA is empty during transmitting
I2C_FLAG_BERR	a bus error occurs indication a unexpected start or stop condition on I2C bus
I2C_FLAG_LOSTARB	arbitration lost in master mode
I2C_FLAG_AERR	acknowledge error
I2C_FLAG_OUERR	over-run or under-run situation occurs in slave mode
I2C_FLAG_PECERR	PEC error when receiving data
I2C_FLAG_SMBTO	timeout signal in SMBus mode
I2C_FLAG_SMBALT	SMBus alert status
I2C_FLAG_MASTER	a flag indicating whether I2C block is in master or slave mode
I2C_FLAG_I2CBSY	I2C busy flag
I2C_FLAG_TRS	whether the I2C is a transmitter or a receiver
I2C_FLAG_RXGC	general call address (00h) received
I2C_FLAG_DEFSMB	default address of SMBus device
I2C_FLAG_HSTSMB	SMBus host header detected in slave mode
I2C_FLAG_DUMOD	dual flag in slave mode indicating which address is matched in dual-address mode

Enum i2c_interrupt_enum

Table 3-379. Enum i2c_interrupt_enum

Member name	Function description
I2C_INT_ERR	error interrupt
I2C_INT_EV	event interrupt
I2C_INT_BUF	buffer interrupt

Enum i2c_interrupt_flag_enum
Table 3-380. Enum i2c_interrupt_flag_enum

Member name	Function description
I2C_INT_FLAG_SBSEND	start condition sent out in master mode interrupt flag
I2C_INT_FLAG_ADDSEND	address is sent in master mode or received and matches in slave mode interrupt flag
I2C_INT_FLAG_BTC	byte transmission finishes interrupt flag
I2C_INT_FLAG_ADD10SEND	header of 10-bit address is sent in master mode interrupt flag
I2C_INT_FLAG_STPDET	stop condition detected in slave mode interrupt flag
I2C_INT_FLAG_RBNE	I2C_DATA is not Empty during receiving interrupt flag
I2C_INT_FLAG_TBE	I2C_DATA is empty during transmitting interrupt flag
I2C_INT_FLAG_BERR	a bus error occurs indication a unexpected start or stop condition on I2C bus interrupt flag
I2C_INT_FLAG_LOSTARB	arbitration lost in master mode interrupt flag
I2C_INT_FLAG_AERR	acknowledge error interrupt flag
I2C_INT_FLAG_OVERR	over-run or under-run situation occurs in slave mode interrupt flag
I2C_INT_FLAG_PECERR	PEC error when receiving data interrupt flag
I2C_INT_FLAG_SMBTO	timeout signal in SMBus mode interrupt flag
I2C_INT_FLAG_SMBALT	SMBus Alert status interrupt flag

i2c_deinit

The description of i2c_deinit is shown as below:

Table 3-381. Function i2c_deinit

Function name	i2c_deinit
Function prototype	void i2c_deinit(uint32_t i2c_periph);
Function descriptions	reset I2C
Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset I2C0 */
```

```
i2c_deinit(I2C0);
```

i2c_clock_config

The description of i2c_clock_config is shown as below:

Table 3-382. Function i2c_clock_config

Function name	i2c_clock_config
Function prototype	void i2c_clock_config(uint32_t i2c_periph, uint32_t clkspeed, uint32_t dutycyc);
Function descriptions	I2C clock configure
Precondition	-
The called functions	rcu_clock_freq_get
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
clkspeed	i2c clock speed
Input parameter{in}	
dutycyc	duty cycle in fast mode
I2C_DTCY_2	T_low / T_high=2
I2C_DTCY_16_9	T_low / T_high=16/9
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure I2C0 clock speed as 100KHz*/
i2c_clock_config(I2C0, 100000, I2C_DTCY_2);
```

i2c_mode_addr_config

The description of i2c_mode_addr_config is shown as below:

Table 3-383. Function i2c_mode_addr_config

Function name	i2c_mode_addr_config
Function prototype	void i2c_mode_addr_config(uint32_t i2c_periph, uint32_t mode, uint32_t addformat, uint32_t addr);
Function descriptions	configure I2C address
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	

mode	I2C mode select
<i>I2C_I2CMODE_ENABLE</i>	I2C mode
<i>I2C_SMBUSMODE_ENABLE</i>	SMBus mode
Input parameter{in}	
addformat	7bits or 10bits
<i>I2C_ADDFORMAT_7BITS</i>	7bits
<i>I2C_ADDFORMAT_10BITS</i>	10bits
Input parameter{in}	
addr	I2C address
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure I2C0 address as 0x82, using 7 bits */
i2c_mode_addr_config(I2C0, I2C_I2CMODE_ENABLE, I2C_ADDFORMAT_7BITS, 0x82);
```

i2c_smbus_type_config

The description of i2c_smbus_type_config is shown as below:

Table 3-384. Function i2c_smbus_type_config

Function name	i2c_smbus_type_config
Function prototype	void i2c_smbus_type_config(uint32_t i2c_periph, uint32_t type);
Function descriptions	select SMBus type
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
<i>I2Cx</i>	(x=0,1)
Input parameter{in}	
type	Device or host
<i>I2C_SMBUS_DEVICE</i>	device
<i>I2C_SMBUS_HOST</i>	host
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* config I2C0 as SMBUS host type*/
i2c_smbus_type_config(I2C0, I2C_SMBUS_HOST);
```

i2c_ack_config

The description of i2c_ack_config is shown as below:

Table 3-385. Function i2c_ack_config

Function name	i2c_ack_config
Function prototype	void i2c_ack_config(uint32_t i2c_periph, uint32_t ack);
Function descriptions	w hether or not to send an ACK
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
ack	I2C peripheral
I2C_ACK_ENABLE	ACK w ill be sent
I2C_ACK_DISABLE	ACK w ill not be sent
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* I2C0 will send ACK */
i2c_ack_config(I2C0, I2C_ACK_ENABLE);
```

i2c_ackpos_config

The description of i2c_ackpos_config is shown as below:

Table 3-386. Function i2c_ackpos_config

Function name	i2c_ackpos_config
Function prototype	void i2c_ackpos_config(uint32_t i2c_periph, uint32_t pos);
Function descriptions	configure I2C POAP position
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)

Input parameter{in}	
pos	ACK position
<i>I2C_ACKPOS_CURRENT</i>	w hether to send ACK or not for the current
<i>I2C_ACKPOS_NEXT</i>	w hether to send ACK or not for the next byte
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* The ACK of I2C0 is send for the current frame*/
```

```
i2c_ackpos_config(I2C0, I2C_ACKPOS_CURRENT);
```

i2c_master_addressing

The description of i2c_master_addressing is shown as below:

Table 3-387. Function i2c_master_addressing

Function name	i2c_master_addressing
Function prototype	void i2c_master_addressing(uint32_t i2c_periph, uint32_t addr, uint32_t trandirection);
Function descriptions	master sends slave address
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
<i>I2Cx</i>	(x=0,1)
Input parameter{in}	
addr	slave address
Input parameter{in}	
trandirection	transmitter or receiver
<i>I2C_TRANSMITTER</i>	transmitter
<i>I2C_RECEIVER</i>	receiver
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* send slave address to I2C bus and I2C0 act as receiver */
```

```
i2c_master_addressing(I2C0, 0x82, I2C_RECEIVER);
```

i2c_dualaddr_enable

The description of i2c_dualaddr_enable is shown as below:

Table 3-388. Function i2c_dualaddr_enable

Function name	i2c_dualaddr_enable
Function prototype	void i2c_dualaddr_enable(uint32_t i2c_periph, uint32_t addr);
Function descriptions	enable dual-address mode
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
addr	the second address in dual-address mode
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable I2C0 dual-address */
i2c_dualaddr_enable(I2C0, 0xA0);
```

i2c_dualaddr_disable

The description of i2c_dualaddr_disable is shown as below:

Table 3-389. Function i2c_dualaddr_disable

Function name	i2c_dualaddr_disable
Function prototype	void i2c_dualaddr_disable (uint32_t i2c_periph);
Function descriptions	disable dual-address mode
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable I2C0 dual-address */
```

```
i2c_dualaddr_enable(I2C0);
```

i2c_enable

The description of i2c_enable is shown as below:

Table 3-390. Function i2c_enable

Function name	i2c_enable
Function prototype	void i2c_enable(uint32_t i2c_periph);
Function descriptions	enable I2C
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable I2C0 */
i2c_enable(I2C0);
```

i2c_disable

The description of i2c_disable is shown as below:

Table 3-391. Function i2c_disable

Function name	i2c_disable
Function prototype	void i2c_disable(uint32_t i2c_periph);
Function descriptions	disable I2C
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable I2C0 */
```

```
i2c_disable(I2C0);
```

i2c_start_on_bus

The description of i2c_start_on_bus is shown as below:

Table 3-392. Function i2c_start_on_bus

Function name	i2c_start_on_bus
Function prototype	void i2c_start_on_bus(uint32_t i2c_periph);
Function descriptions	generate a START condition on I2C bus
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* I2C0 send a start condition to I2C bus */
i2c_start_on_bus(I2C0);
```

i2c_stop_on_bus

The description of i2c_stop_on_bus is shown as below:

Table 3-393. Function i2c_stop_on_bus

Function name	i2c_stop_on_bus
Function prototype	void i2c_stop_on_bus(uint32_t i2c_periph);
Function descriptions	generate a STOP condition on I2C bus
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* I2C0 generate a STOP condition to I2C bus */
```

```
i2c_stop_on_bus(I2C0);
```

i2c_data_transmit

The description of i2c_data_transmit is shown as below:

Table 3-394. Function i2c_data_transmit

Function name	i2c_data_transmit
Function prototype	void i2c_data_transmit(uint32_t i2c_periph, uint8_t data);
Function descriptions	I2C transmit data function
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
data	transmit data
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* I2C0 transmit data */
i2c_data_transmit(I2C0);
```

i2c_data_receive

The description of i2c_data_receive is shown as below:

Table 3-395. Function i2c_data_receive

Function name	i2c_data_receive
Function prototype	uint8_t i2c_data_receive(uint32_t i2c_periph);
Function descriptions	I2C receive data function
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Output parameter{out}	
-	-
Return value	
uint8_t	0x00..0xFF

Example:

```

/* I2C0 receive data */

uint8_t i2c_receiver;

i2c_receiver = i2c_data_receive(I2C0);
  
```

i2c_dma_config

The description of i2c_dma_config is shown as below:

Table 3-396. Function i2c_dma_config

Function name	i2c_dma_config
Function prototype	void i2c_dma_config(uint32_t i2c_periph, uint32_t dmastate);
Function descriptions	configure I2C DMA mode
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
dmastate	on or off
I2C_DMA_ON	DMA mode enable
I2C_DMA_OFF	DMA mode disable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* I2C0 DMA mode enable */

i2c_dma_config(I2C0, I2C_DMA_ON);
  
```

i2c_dma_last_transfer_config

The description of i2c_dma_last_transfer_config is shown as below:

Table 3-397. Function i2c_dma_last_transfer_config

Function name	i2c_dma_last_transfer_config
Function prototype	void i2c_dma_last_transfer_config(uint32_t i2c_periph, uint32_t dmalast);
Function descriptions	configure whether next DMA EOT is DMA last transfer or not
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)

Input parameter{in}	
<i>dmalast</i>	next DMA EOT is the last transfer or not
<i>I2C_DMALST_ON</i>	next DMA EOT is the last transfer
<i>I2C_DMALST_OFF</i>	next DMA EOT is not the last transfer
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* next DMA EOT is the last transfer */

i2c_dma_last_transfer_config(I2C0, I2C_DMALST_ON);
```

i2c_stretch_scl_low_config

The description of i2c_stretch_scl_low_config is shown as below:

Table 3-398. Function i2c_stretch_scl_low_config

Function name	i2c_stretch_scl_low_config
Function prototype	void i2c_stretch_scl_low_config(uint32_t i2c_periph, uint32_t stretchpara);
Function descriptions	whether to stretch SCL low when data is not ready in slave mode
Precondition	-
The called functions	-
Input parameter{in}	
<i>i2c_periph</i>	I2C peripheral
<i>I2Cx</i>	(x=0,1)
Input parameter{in}	
<i>stretchpara</i>	SCL stretching enable or disable
<i>I2C_SCLSTRETCH_ENABLE</i>	SCL stretching is enabled
<i>I2C_SCLSTRETCH_DISABLE</i>	SCL stretching is disabled
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* stretch SCL low when data is not ready in slave mode */

i2c_stretch_scl_low_config(I2C0, I2C_SCLSTRETCH_ENABLE);
```

i2c_slave_response_to_gcall_config

The description of i2c_slave_response_to_gcall_config is shown as below:

Table 3-399. Function i2c_slave_response_to_gcall_config

Function name	i2c_slave_response_to_gcall_config
Function prototype	void i2c_slave_response_to_gcall_config(uint32_t i2c_periph, uint32_t gcallpara);
Function descriptions	w hether or not to response to a general call
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
gcallpara	response to a general call or not
I2C_GCEN_ENABLE	slave w ill response to a general call
I2C_GCEN_DISABLE	slave w ill not response to a general call
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* I2C0 will response to a general call */
i2c_slave_response_to_gcall_config(I2C0, I2C_GCEN_ENABLE);
```

i2c_software_reset_config

The description of i2c_software_reset_config is shown as below:

Table 3-400. Function i2c_software_reset_config

Function name	i2c_softw are_reset_config
Function prototype	void i2c_softw are_reset_config(uint32_t i2c_periph, uint32_t sreset);
Function descriptions	softw are reset I2C
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
sreset	under reset or not
I2C_SRESET_SET	I2C is under reset
I2C_SRESET_RESET	I2C is not under reset

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* software reset I2C0 */

i2c_software_reset_config(I2C0, I2C_SRESET_SET);
```

i2c_pec_config

The description of i2c_pec_config is shown as below:

Table 3-401. Function i2c_pec_config

Function name	i2c_pec_config
Function prototype	void i2c_pec_config(uint32_t i2c_periph, uint32_t pecstate);
Function descriptions	configure I2C PEC calculation
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
pecstate	On or off
I2C_PEC_ENABLE	PEC calculation on
I2C_PEC_DISABLE	PEC calculation off
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable I2C PEC calculation */

i2c_pec_config(I2C0, I2C_PEC_ENABLE);
```

i2c_pec_transfer_config

The description of i2c_pec_transfer_config is shown as below:

Table 3-402. Function i2c_pec_transfer_config

Function name	i2c_pec_transfer_config
Function prototype	void i2c_pec_transfer_config (uint32_t i2c_periph, uint32_t pecpara);
Function descriptions	configure whether to transfer PEC value
Precondition	-

The called functions	-
Input parameter{in}	
<i>i2c_periph</i>	I2C peripheral
<i>I2Cx</i>	(x=0,1)
Input parameter{in}	
<i>pecpara</i>	Transfer PEC or not
<i>I2C_PECTRANS_ENA BLE</i>	transfer PEC
<i>I2C_PECTRANS_DISA BLE</i>	not transfer PEC
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* I2C0 transfer PEC */

i2c_pec_transfer_config(I2C0, I2C_PECTRANS_ENABLE);
```

i2c_pec_value_get

The description of i2c_pec_value_get is shown as below:

Table 3-403. Function i2c_pec_value_get

Function name	i2c_pec_value_get
Function prototype	uint8_t i2c_pec_value_get(uint32_t i2c_periph);
Function descriptions	get packet error checking value
Precondition	-
The called functions	-
Input parameter{in}	
<i>i2c_periph</i>	I2C peripheral
<i>I2Cx</i>	(x=0,1)
Output parameter{out}	
-	-
Return value	
uint8_t	0..255

Example:

```
/* I2C0 get packet error checking value */

uint8_t pec_value;

pec_value = i2c_pec_value_get(I2C0);
```

i2c_smbus_alert_config

The description of i2c_smbus_alert_config is shown as below:

Table 3-404. Function i2c_smbus_alert_config

Function name	i2c_smbus_alert_config
Function prototype	void i2c_smbus_alert_config(uint32_t i2c_periph, uint32_t smbuspara);
Function descriptions	configure I2C alert through SMBA pin
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
smbuspara	issue alert through SMBA pin or not
I2C_SALTSEND_ENAB LE	issue alert through SMBA pin
I2C_SALTSEND_DISA BLE	not issue alert through SMBA pin
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* I2C0 issue alert through SMBA pin enable*/
i2c_smbus_alert_config(I2C0, I2C_SALTSEND_ENABLE);
```

i2c_smbus_arp_config

The description of i2c_smbus_arp_config is shown as below:

Table 3-405. Function i2c_smbus_arp_config

Function name	i2c_smbus_arp_config
Function prototype	void i2c_smbus_arp_config (uint32_t i2c_periph, uint32_t arpstate);
Function descriptions	configure I2C ARP protocol in SMBus
Precondition	-
The called functions	-
Input parameter{in}	
i2c_periph	I2C peripheral
I2Cx	(x=0,1)
Input parameter{in}	
arpstate	ARP protocol in SMBus switch
I2C_ARP_ENABLE	enable ARP

<i>I2C_ARP_DISABLE</i>	disable ARP
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable I2C0 ARP protocol in SMBus switch */
i2c_smbus_arp_config(I2C0, I2C_ARP_ENABLE);
```

i2c_flag_get

The description of i2c_flag_get is shown as below:

Table 3-406. Function i2c_flag_get

Function name	i2c_flag_get				
Function prototype	FlagStatus i2c_flag_get(uint32_t i2c_periph, i2c_flag_enum flag);				
Function descriptions	get I2C flag status				
Precondition	-				
The called functions	-				
Input parameter{in}					
<i>i2c_periph</i>	I2C peripheral				
<i>I2Cx</i>	(x=0,1)				
Input parameter{in}					
<i>flag</i>	I2C flags, refer to				
	<i>I2C_FLAG_SMBALT</i>	SMBus alert status			
	<i>I2C_FLAG_MASTER</i>	a flag indicating whether I2C block is in master mode			
<i>I2C_FLAG_SBSEND</i>	start condition send out				
<i>I2C_FLAG_ADDSEND</i>	address is sent in master mode or received and matches in slave mode				
<i>I2C_FLAG_BTCT</i>	byte transmission finishes				
<i>I2C_FLAG_ADD10SEN</i>	header of 10-bit address is sent in master mode				
<i>I2C_FLAG_STPDET</i>	stop condition detected in slave mode				
<i>I2C_FLAG_RBNE</i>	I2C_DATA is not Empty during receiving				
<i>I2C_FLAG_TBE</i>	I2C_DATA is empty during transmitting				
<i>I2C_FLAG_BERR</i>	a bus error occurs indicating an unexpected start or stop condition on I2C bus				
<i>I2C_FLAG_LOSTARB</i>	arbitration lost in master mode				
<i>I2C_FLAG_AERR</i>	acknowledge error				
<i>I2C_FLAG_OVERRR</i>	overrun or underrun situation occurs in slave mode				
<i>I2C_FLAG_PECERR</i>	PEC error when receiving data				
<i>I2C_FLAG_SMBTO</i>	timeout signal in SMBus mode				

<i>I2C_FLAG_SMBALT</i>	SMBus alert status
<i>I2C_FLAG_MASTER</i>	a flag indicating whether I2C block is in master or slave mode
<i>I2C_FLAG_I2CBSY</i>	busy flag
<i>I2C_FLAG_TRS</i>	whether the I2C is a transmitter or a receiver
<i>I2C_FLAG_RXGC</i>	general call address (00h) received
<i>I2C_FLAG_DEFSMB</i>	default address of SMBus device
<i>I2C_FLAG_HSTSMB</i>	SMBus host header detected in slave mode
<i>I2C_FLAG_DUMOD</i>	dual flag in slave mode indicating which address is matched in dual-address mode
Output parameter{out}	
-	-
Return value	
FlagStatus	SET / RESET

Example:

```
/* check whether start condition send out */

FlagStatus flag_state = RESET;

flag_state = i2c_flag_get(I2C0, I2C_FLAG_SBSEND);
```

i2c_flag_clear

The description of i2c_flag_clear is shown as below:

Table 3-407. Function i2c_flag_clear

Function name	i2c_flag_clear
Function prototype	void i2c_flag_clear(uint32_t i2c_periph, i2c_flag_enum flag);
Function descriptions	clear I2C flag status
Precondition	-
The called functions	-
Input parameter{in}	
<i>i2c_periph</i>	I2C peripheral
<i>I2Cx</i>	(x=0,1)
Input parameter{in}	
<i>flag</i>	I2C flags
<i>I2C_FLAG_SMBALT</i>	SMBus Alert status
<i>I2C_FLAG_SMBTO</i>	timeout signal in SMBus mode
<i>I2C_FLAG_PECERR</i>	PEC error when receiving data
<i>I2C_FLAG_OUERR</i>	over-run or under-run situation occurs in slave mode
<i>I2C_FLAG_AERR</i>	acknowledge error
<i>I2C_FLAG_LOSTARB</i>	arbitration lost in master mode
<i>I2C_FLAG_BERR</i>	a bus error
<i>I2C_FLAG_ADDSEND</i>	cleared by reading I2C_STAT0 and reading I2C_STAT1
Output parameter{out}	

-	-	-
Return value		
-	-	-

Example:

```
/* clear a bus error flag*/
i2c_flag_clear(I2C0, I2C_FLAG_BERR);
```

i2c_interrupt_enable

The description of i2c_interrupt_enable is shown as below:

Table 3-408. Function i2c_interrupt_enable

Function name	i2c_interrupt_enable	
Function prototype	void i2c_interrupt_enable(uint32_t i2c_periph, i2c_interrupt_enum interrupt);	
Function descriptions	enable I2C interrupt	
Precondition	-	
The called functions	-	
Input parameter{in}		
i2c_periph	I2C peripheral	
I2Cx	(x=0,1)	
Input parameter{in}		
interrupt	I2C interrupts, refer to	
	I2C_INT_FLAG_TBE	I2C_DATA is empty during transmitting
	I2C_INT_FLAG_BERR	a bus error occurs indication a unexpected start bus interrupt flag
I2C_INT_ERR	error interrupt enable	
I2C_INT_EV	event interrupt enable	
I2C_INT_BUF	buffer interrupt enable	
Output parameter{out}		
-	-	
Return value		
-	-	

Example:

```
/* enable I2C0 error interrupt */
i2c_interrupt_enable(I2C0, I2C_INT_ERR);
```

i2c_interrupt_disable

The description of i2c_interrupt_disable is shown as below:

Table 3-409. Function i2c_interrupt_disable

Function name	i2c_interrupt_disable				
Function prototype	void i2c_interrupt_disable(uint32_t i2c_periph, i2c_interrupt_enum interrupt);				
Function descriptions	disable I2C interrupt				
Precondition	-				
The called functions	-				
Input parameter{in}					
i2c_periph	I2C peripheral				
I2Cx	(x=0,1)				
Input parameter{in}					
interrupt	I2C interrupts, refer to				
	I2C_INT_FLAG_TBE	I2C_DATA is empty during transmitting			
	I2C_INT_FLAG_BERR	a bus error occurs indicating an unexpected start bus interrupt flag			
I2C_INT_ERR	error interrupt disable				
I2C_INT_EV	event interrupt disable				
I2C_INT_BUF	buffer interrupt disable				
Output parameter{out}					
-	-				
Return value					
-	-				

Example:

```
/* disable I2C0 error interrupt */
i2c_interrupt_disable(I2C0, I2C_INT_ERR);
```

i2c_interrupt_flag_get

The description of i2c_interrupt_flag_get is shown as below:

Table 3-410. Function i2c_interrupt_flag_get

Function name	i2c_interrupt_flag_get		
Function prototype	FlagStatus i2c_interrupt_flag_get(uint32_t i2c_periph, i2c_interrupt_flag_enum int_flag);		
Function descriptions	get I2C interrupt flag status		
Precondition	-		
The called functions	-		
Input parameter{in}			
i2c_periph	I2C peripheral		
I2Cx	(x=0,1)		
Input parameter{in}			

int_flag	I2C interrupts flags, refer to	
	I2C_INT_FLAG_AERR	acknowledge error interrupt
	I2C_INT_FLAG_OUERR	over-run or under-run situation occurs in slave mode interrupt flag
<i>I2C_INT_FLAG_SBSEN</i>	start condition sent out in master mode interrupt flag	
<i>I2C_INT_FLAG_ADDSEN</i>	address is sent in master mode or received and matches in slave mode interrupt flag	
<i>I2C_INT_FLAG_BTCS</i>	byte transmission finishes	
<i>I2C_INT_FLAG_ADD10SEN</i>	header of 10-bit address is sent in master mode interrupt flag	
<i>I2C_INT_FLAG_STPDES</i>	stop condition detected in slave mode interrupt flag	
<i>I2C_INT_FLAG_RBNE</i>	I2C_DATA is not Empty during receiving interrupt flag	
<i>I2C_INT_FLAG_TBE</i>	I2C_DATA is empty during transmitting interrupt flag	
<i>I2C_INT_FLAG_BERR</i>	a bus error occurs indication a unexpected start or stop condition on I2C bus interrupt flag	
<i>I2C_INT_FLAG_LOSTA</i>	arbitration lost in master mode interrupt flag	
<i>I2C_INT_FLAG_AERR</i>	acknowledge error interrupt flag	
<i>I2C_INT_FLAG_OUER</i>	over-run or under-run situation occurs in slave mode interrupt flag	
<i>I2C_INT_FLAG_PECERR</i>	PEC error when receiving data interrupt flag	
<i>I2C_INT_FLAG_SMBTO</i>	timeout signal in SMBus mode interrupt flag	
<i>I2C_INT_FLAG_SMBA</i>	SMBus Alert status interrupt flag	
Output parameter{out}		
-	-	
Return value		
FlagStatus	SET / RESET	

Example:

```
/* check the byte transmission finishes interrupt flag is set or not*/
```

```
FlagStatus flag_state = RESET;
```

```
flag_state = i2c_interrupt_flag_get(I2C0, I2C_INT_FLAG_BTCS);
```

i2c_interrupt_flag_clear

The description of i2c_interrupt_flag_clear is shown as below:

Table 3-411. Function i2c_interrupt_flag_clear

Function name	i2c_interrupt_flag_clear
Function prototype	void i2c_interrupt_flag_clear(uint32_t i2c_periph, i2c_interrupt_flag_enum int_flag);
Function descriptions	clear I2C interrupt flag status
Precondition	-
The called functions	-
Input parameter{in}	
<i>i2c_periph</i>	I2C peripheral
<i>I2Cx</i>	(x=0,1)
Input parameter{in}	
<i>int_flag</i>	interrupt flag
<i>I2C_INT_FLAG_ADDS</i> <i>END</i>	address is sent in master mode or received and matches in slave mode interrupt flag
<i>I2C_INT_FLAG_BERR</i>	a bus error occurs indication a unexpected start or stop condition on I2C bus interrupt flag
<i>I2C_INT_FLAG_LOSTA</i> <i>RB</i>	arbitration lost in master mode interrupt flag
<i>I2C_INT_FLAG_AERR</i>	acknow ledge error interrupt flag
<i>I2C_INT_FLAG_OUER</i> <i>R</i>	over-run or under-run situation occurs in slave mode interrupt flag
<i>I2C_INT_FLAG_PCE</i> <i>RR</i>	PEC error w hen receiving data interrupt flag
<i>I2C_INT_FLAG_SMBT</i> <i>O</i>	timeout signal in SMBus mode interrupt flag
<i>I2C_INT_FLAG_SMBA</i> <i>LT</i>	SMBus Alert status interrupt flag
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear the acknowledge error interrupt flag */

i2c_interrupt_flag_clear(I2C0, I2C_INT_FLAG_AERR);
```

3.16. MISC

MISC is a software package that provide the interfaces for NVIC and SysTick. The NVIC and SysTick registers are listed in chapter [3.16.1](#), the MISC firmware functions are introduced in chapter [3.16.2](#).

3.16.1. Descriptions of Peripheral registers

Table 3-412. NVIC Registers

Registers	Descriptions
ISER ⁽¹⁾	Interrupt Set Enable Register
ICER ⁽¹⁾	Interrupt Clear Enable Register
ISPR ⁽¹⁾	Interrupt Set Pending Register
ICPR ⁽¹⁾	Interrupt Clear Pending Register
IABR ⁽¹⁾	Interrupt Active bit Register
IP ⁽¹⁾	Interrupt Priority Register
STIR ⁽¹⁾	Software Trigger Interrupt Register
CPUID ⁽²⁾	CPUID Base Register
ICSR ⁽²⁾	Interrupt Control and State Register
VTOR ⁽²⁾	Vector Table Offset Register
AIRCR ⁽²⁾	Application Interrupt and Reset Control Register
SCR ⁽²⁾	System Control Register
COR ⁽²⁾	Configuration Control Register
SHP ⁽²⁾	System Handlers Priority Registers
SHCSR ⁽²⁾	System Handler Control and State Register
CFSR ⁽²⁾	Configurable Fault Status Register
HFSR ⁽²⁾	HardFault Status Register
DFSR ⁽²⁾	Debug Fault Status Register
MMFAR ⁽²⁾	MemManage Fault Address Register
BFAR ⁽²⁾	BusFault Address Register
AFSR ⁽²⁾	Auxiliary Fault Status Register
PFR ⁽²⁾	Processor Feature Register
DFR ⁽²⁾	Debug Feature Register
ADR ⁽²⁾	Auxiliary Feature Register
MMFR ⁽²⁾	Memory Model Feature Register
ISAR ⁽²⁾	Instruction Set Attributes Register
CPACR ⁽²⁾	Coprocessor Access Control Register

1. refer to the structure NVIC_Type, is defined in the core_cm3.h file

2. refer to the structure SCB_Type, is defined in the core_cm3.h file

Table 3-413. SysTick Registers

Registers	Descriptions
CTRL ⁽¹⁾	SysTick Control and Status Register
LOAD ⁽¹⁾	SysTick Reload Value Register
VAL ⁽¹⁾	SysTick Current Value Register
CALIB ⁽¹⁾	SysTick Calibration Register

1. refer to the structure SysTick_Type, is defined in the core_cm3.h file

3.16.2. Descriptions of Peripheral functions

Enum IRQn_Type

Table 3-414. IRQn_Type

Member name	Function description
WWDGT_IRQn	w indow w atchDog timer interrupt
LVD_IRQn	LVD through EXTI line detect interrupt
TAMPER_IRQn	tamper through EXTI line detect
RTC_IRQn	RTC through EXTI line interrupt
FMC_IRQn	FMC interrupt
RCU_CTC_IRQn	RCU and CTC interrupt
EXTI0_IRQn	EXTI line 0 interrupts
EXTI1_IRQn	EXTI line 1 interrupts
EXTI2_IRQn	EXTI line 2 interrupts
EXTI3_IRQn	EXTI line 3 interrupts
EXTI4_IRQn	EXTI line 4 interrupts
DMA0_Channel0_IRQn	DMA0 channel0 interrupt
DMA0_Channel1_IRQn	DMA0 channel1 interrupt
DMA0_Channel2_IRQn	DMA0 channel2 interrupt
DMA0_Channel3_IRQn	DMA0 channel3 interrupt
DMA0_Channel4_IRQn	DMA0 channel4 interrupt
DMA0_Channel5_IRQn	DMA0 channel5 interrupt
DMA0_Channel6_IRQn	DMA0 channel6 interrupt
ADC0_1_IRQn	ADC0 and ADC1 interrupt
USBD_HP_CAN0_TX_IRQn / CAN0_TX_IRQn	USBD high priority interrupts or CAN0 TX interrupts / CAN0 TX interrupts
USBD_LP_CAN0_RX0_IRQn / CAN0_RX0_IRQn	USBD low priority interrupts or CAN0 RX0 interrupts / CAN0 RX0 interrupts
CAN0_RX1_IRQn	CAN0 RX1 interrupts
CAN0_EWMC_IRQn	CAN0 EWMC interrupts
EXTI5_9_IRQn	EXTI[9:5] interrupts
TIMER0_BRK_TIMER8_IRQn / TIMER0_BRK_IRQn	TIMER0 break and TIMER8 global interrupts / TIMER0 break interrupts
TIMER0_UP_TIMER9_IRQn / TIMER0_UP_IRQn	TIMER0 update and TIMER9 global interrupts / TIMER0 update interrupts
TIMER0_TRG_CMT_TIMER10_IRQn / TIMER0_TRG_CMT_IRQn	TIMER0 trigger and commutation and TIMER10 global interrupts / TIMER0 trigger and commutation interrupts
TIMER0_Channel_IRQn	TIMER0 channel capture compare interrupts
TIMER1_IRQn	TIMER1 global interrupt
TIMER2_IRQn	TIMER2 global interrupt
TIMER3_IRQn	TIMER3 global interrupt

Member name	Function description
I2C0_EV_IRQn	I2C0 event interrupt
I2C0_ER_IRQn	I2C0 error interrupt
I2C1_EV_IRQn	I2C1 event interrupt
I2C1_ER_IRQn	I2C1 error interrupt
SPI0_IRQn	SPI0 global interrupt
SPI1_IRQn	SPI1 global interrupt
USART0_IRQn	USART0 global interrupt
USART1_IRQn	USART1 global interrupt
USART2_IRQn	USART2 global interrupt
EXTI10_15_IRQn	EXTI[15:10] interrupts
RTC_Alarm_IRQn	RTC alarm from EXTI interrupt
USBD_WKUP_IRQn / USBFS_WKUP_IRQn	USBD wakeup from EXTI interrupt / USBFS wakeup from EXTI interrupt
TIMER7_BRK_TIMER11_IRQn / TIMER7_BRK_IRQn	TIMER7 break and TIMER11 global interrupts / TIMER7 break interrupts
TIMER7_UP_TIMER12_IRQn / TIMER7_UP_IRQn	TIMER7 update and TIMER12 global interrupts / TIMER7 update interrupts
TIMER7_TRG_CMT_TIMER13_IRQn / TIMER7_TRG_CMT_IRQn	TIMER7 trigger and channel commutation and TIMER13 global interrupts / TIMER7 trigger and commutation interrupts
TIMER7_Channel_IRQn	TIMER7 channel capture compare interrupts
ADC2_IRQn	ADC2 global interrupt
EXMC_IRQn	EXMC global interrupt
SDIO_IRQn	SDIO global interrupt
TIMER4_IRQn	TIMER4 global interrupt
SPI2_IRQn	SPI2 global interrupt
UART3_IRQn	UART3 global interrupt
UART4_IRQn	UART4 global interrupt
TIMER5_IRQn	TIMER5 global interrupt
TIMER6_IRQn	TIMER6 global interrupt
DMA1_Channel0_IRQn	DMA1 channel0 global interrupt
DMA1_Channel1_IRQn	DMA1 channel1 global interrupt
DMA1_Channel2_IRQn	DMA1 channel2 global interrupt
DMA1_Channel3_Channel4_IRQn / DMA1_Channel3_IRQn	DMA1 channel3 and channel4 global interrupt / DMA1 channel3 global interrupt
DMA1_Channel4_IRQn	DMA1 channel4 global interrupt
ENET_IRQn	ENET global interrupt
ENET_WKUP_IRQn	ENET wakeup from EXTI line interrupt
CAN1_TX_IRQn	CAN1 TX interrupt
CAN1_RX0_IRQn	CAN1 RX0 interrupt
CAN1_RX1_IRQn	CAN1 RX1 interrupt
CAN1_EWMC_IRQn	CAN1 EWMC interrupt

Member name	Function description
USBFS_IRQn	USBFS global interrupt

MISC firmware functions are listed in the table shown as below:

Table 3-415. MISC firmware function

Function name	Function description
nvic_priority_group_set	set the priority group
nvic_irq_enable	enable NVIC interrupt request
nvic_irq_disable	disable NVIC interrupt request
nvic_vector_table_set	set the NVIC vector table base address
system_low_power_set	set the state of the low power mode
system_low_power_reset	reset the state of the low power mode
systick_clocksource_set	set the systick clock source

nvic_priority_group_set

The description of nvic_priority_group_set is shown as below:

Table 3-416. Function nvic_priority_group_set

Function name	nvic_priority_group_set
Function prototype	void nvic_priority_group_set(uint32_t nvic_prigroup);
Function descriptions	set the priority group
Precondition	-
The called functions	-
Input parameter{in}	
nvic_prigroup	priority group
NVIC_PRIGROUP_PR_E0_SUB4	0 bits for pre-emption priority, 4 bits for subpriority
NVIC_PRIGROUP_PR_E1_SUB3	1 bits for pre-emption priority, 3 bits for subpriority
NVIC_PRIGROUP_PR_E2_SUB2	2 bits for pre-emption priority, 2 bits for subpriority
NVIC_PRIGROUP_PR_E3_SUB1	3 bits for pre-emption priority, 1 bits for subpriority
NVIC_PRIGROUP_PR_E4_SUB0	4 bits for pre-emption priority, 0 bits for subpriority
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* priority group configuration , 0 bits for pre-emption priority, 4 bits for subpriority */
```

```
nvic_priority_group_set(NVIC_PRIGROUP_PRE0_SUB4);
```

nvic_irq_enable

The description of nvic_irq_enable is shown as below:

Table 3-417. Function nvic_irq_enable

Function name	nvic_irq_enable		
Function prototype	void nvic_irq_enable(uint8_t nvic_irq, uint8_t nvic_irq_pre_priority, uint8_t nvic_irq_sub_priority);		
Function descriptions	enable NVIC interrupt request		
Precondition	-		
The called functions	nvic_priority_group_set		
Input parameter{in}			
nvic_irq	NVIC interrupt, refer to enum Table3-414. IRQn_Type USBD_HP_CAN0_RX_IRQHandler / CAN0_RX_IRQHandler		
Input parameter{in}			
nvic_irq_pre_priority	the pre-emption priority needed to set		
Input parameter{in}			
nvic_irq_sub_priority	the subpriority needed to set		
Output parameter{out}			
-	-		
Return value			
-	-		

Example:

```
/* enable window watchDog timer interrupt , pre-emption priority is 1, subpriority is 1 */
nvic_irq_enable(WWDGT_IRQHandler, 1, 1);
```

nvic_irq_disable

The description of nvic_irq_disable is shown as below:

Table 3-418. Function nvic_irq_disable

Function name	nvic_irq_disable		
Function prototype	void nvic_irq_disable(uint8_t nvic_irq);		
Function descriptions	disable NVIC request		
Precondition	-		
The called functions	-		
Input parameter{in}			
nvic_irq	NVIC interrupt, refer to enum Table3-414. IRQn_Type		
Output parameter{out}			
-	-		

Return value	
-	-

Example:

```
/* disable window watchDog timer interrupt */
nvic_irq_disable(WWDGT_IRQn);
```

nvic_vector_table_set

The description of nvic_vector_table_set is shown as below:

Table 3-419. Function nvic_vector_table_set

Function name	nvic_vector_table_set
Function prototype	void nvic_vector_table_set(uint32_t nvic_vict_tab, uint32_t offset);
Function descriptions	set the NVIC vector table base address
Precondition	-
The called functions	-
Input parameter{in}	
nvic_vict_tab	the RAM or FLASH base address
NVIC_VECTTAB_RAM	RAM base address
NVIC_VECTTAB_FLASH	Flash base address
Input parameter{in}	
offset	vector table offset (vector table start address= base address+offset)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set vector table address = NVIC_VECTTAB_FLASH +0x200 */
nvic_vector_table_set(NVIC_VECTTAB_FLASH,0x200);
```

system_lowpower_set

The description of system_lowpower_set is shown as below:

Table 3-420. Function system_lowpower_set

Function name	system_lowpower_set
Function prototype	void system_lowpower_set(uint8_t lowpower_mode);
Function descriptions	set the state of the low power mode
Precondition	-
The called functions	-
Input parameter{in}	
lowpower_mode	the low power mode state

<code>SCB_LPM_SLEEP_EXI_T_ISR</code>	if chose this para, the system always enter low power mode by exiting from ISR
<code>SCB_LPM_DEEPSLEEP_P</code>	if chose this para, the system will enter the DEEPSLEEP mode
<code>SCB_LPM_WAKE_BY_ALL_INT</code>	if chose this para, the low power mode can be woken up by all the enable and disable interrupts
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* the system always enter low power mode by exiting from ISR */
system_lowpower_set(SCB_LPM_SLEEP_EXIT_ISR);
```

system_lowpower_reset

The description of `system_lowpower_reset` is shown as below:

Table 3-421. Function `system_lowpower_reset`

Function name	system_lowpower_reset
Function prototype	<code>void system_lowpower_reset(uint8_t lowpower_mode);</code>
Function descriptions	reset the state of the low power mode
Precondition	-
The called functions	-
Input parameter{in}	
<code>lowpower_mode</code>	the low power mode state
<code>SCB_LPM_SLEEP_EXI_T_ISR</code>	if chose this para, the system will exit low power mode by exiting from ISR
<code>SCB_LPM_DEEPSLEEP_P</code>	if chose this para, the system will enter the SLEEP mode
<code>SCB_LPM_WAKE_BY_ALL_INT</code>	if chose this para, the low power mode only can be woken up by the enable interrupts
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* the system will exit low power mode by exiting from ISR */
system_lowpower_reset(SCB_LPM_SLEEP_EXIT_ISR);
```

systick_clksource_set

The description of systick_clksource_set is shown as below:

Table 3-422. Function systick_clksource_set

Function name	systick_clksource_set
Function prototype	void systick_clksource_set(uint32_t systick_clksource);
Function descriptions	set the systick clock source
Precondition	-
The called functions	-
Input parameter{in}	
systick_clksource	the systick clock source needed to choose
SYSTICK_CLKSOURC_E_HCLK	systick clock source is from HCLK
SYSTICK_CLKSOURC_E_HCLK_DIV8	systick clock source is from HCLK/8
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* systick clock source is HCLK/8 */
systick_clksource_set(SYSTICK_CLKSOURCE_HCLK_DIV8);
```

3.17. PMU

According to the Power management unit (PMU), provides three types of power saving modes, including Sleep, Deep-sleep and Standby mode. The PMU registers are listed in chapter [3.17.1](#), the PMU firmware functions are introduced in chapter [3.17.2](#).

3.17.1. Descriptions of Peripheral registers

PMU registers are listed in the table shown as below:

Table 3-423. PMU Registers

Registers	Descriptions
PMU_CTL	Control register
PMU_CS	Control and status register

3.17.2. Descriptions of Peripheral functions

PMU firmware functions are listed in the table shown as below:

Table 3-424. PMU firmware function

Function name	Function description
pmu_deinit	reset PMU registers
pmu_lvd_select	select low voltage detector threshold
pmu_lvd_disable	disable PMU lvd
pmu_to_sleepmode	PMU work at sleep mode
pmu_to_deepsleepmode	PMU work at deepsleep mode
pmu_to_standbymode	pmu work at standby mode
pmu_wakeup_pin_enable	enable wakeup pin
pmu_wakeup_pin_disable	disable wakeup pin
pmu_backup_write_enable	enable backup domain write
pmu_backup_write_disable	disable backup domain write
pmu_flag_get	get flag state
pmu_flag_clear	clear flag bit

pmu_deinit

The description of pmu_deinit is shown as below:

Table 3-425. Function pmu_deinit

Function name	pmu_deinit
Function prototype	void pmu_deinit(void);
Function descriptions	reset PMU registers
Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset PMU */
pmu_deinit();
```

pmu_lvd_select

The description of pmu_lvd_select is shown as below:

Table 3-426. Function pmu_lvd_select

Function name	pmu_lvd_select
Function prototype	void pmu_lvd_select(uint32_t lvdt_n);
Function descriptions	select low voltage detector threshold

Precondition	-
The called functions	-
Input parameter{in}	
<i>lvdt_n</i>	voltage threshold value
<i>PMU_LVDT_0</i>	voltage threshold is 2.2V
<i>PMU_LVDT_1</i>	voltage threshold is 2.3V
<i>PMU_LVDT_2</i>	voltage threshold is 2.4V
<i>PMU_LVDT_3</i>	voltage threshold is 2.5V
<i>PMU_LVDT_4</i>	voltage threshold is 2.6V
<i>PMU_LVDT_5</i>	voltage threshold is 2.7V
<i>PMU_LVDT_6</i>	voltage threshold is 2.8V
<i>PMU_LVDT_7</i>	voltage threshold is 2.9V
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* select low voltage detector threshold as 2.9V */
pmu_lvd_select(PMU_LVDT_7);
```

pmu_lvd_disable

The description of pmu_lvd_disable is shown as below:

Table 3-427. Function pmu_lvd_disable

Function name	pmu_lvd_disable
Function prototype	void pmu_lvd_disable (void);
Function descriptions	disable PMU lvd
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable PMU lvd */
pmu_lvd_disable();
```

pmu_to_sleepmode

The description of pmu_to_sleepmode is shown as below:

Table 3-428. Function pmu_to_sleepmode

Function name	pmu_to_sleepmode
Function prototype	void pmu_to_sleepmode(uint8_t sleepmodecmd);
Function descriptions	PMU work at sleep mode
Precondition	-
The called functions	-
Input parameter{in}	
sleepmodecmd	command to enter sleep mode
WFI_CMD	use WFI command
WFE_CMD	use WFE command
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* PMU work at sleep mode */
pmu_to_sleepmode(WFI_CMD);
```

pmu_to_deepsleepmode

The description of pmu_to_deepsleepmode is shown as below:

Table 3-429. Function pmu_to_deepsleepmode

Function name	pmu_to_deepsleepmode
Function prototype	void pmu_to_deepsleepmode(uint32_t ldo,uint8_t deepsleepmodecmd);
Function descriptions	PMU work at deepsleep mode
Precondition	-
The called functions	-
Input parameter{in}	
ldo	ldo work mode
PMU_LDO_NORMAL	LDO normal work when pmu enter deepsleep mode
PMU_LDO_LOWPOW_ER	LDO work at low power mode when pmu enter deepsleep mode
Input parameter{in}	
deepsleepmodecmd	command to enter deepsleep mode
WFI_CMD	use WFI command
WFE_CMD	use WFE command
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* PMU work at deepsleep mode */
pmu_to_deepsleepmode(PMU_LDO_NORMAL, WFI_CMD);
```

pmu_to_standbymode

The description of pmu_to_standbymode is shown as below:

Table 3-430. Function pmu_to_standbymode

Function name	pmu_to_standbymode
Function prototype	void pmu_to_standbymode(void);
Function descriptions	pmu work at standby mode
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* PMU work at standby mode */
pmu_to_standbymode();
```

pmu_wakeup_pin_enable

The description of pmu_wakeup_pin_enable is shown as below:

Table 3-431. Function pmu_wakeup_pin_enable

Function name	pmu_wakeup_pin_enable
Function prototype	void pmu_wakeup_pin_enable(void);
Function descriptions	enable wakeup pin
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable wakeup pin */
pmu_wakeup_pin_enable();
```

pmu_wakeup_pin_disable

The description of pmu_wakeup_pin_disable is shown as below:

Table 3-432. Function pmu_wakeup_pin_disable

Function name	pmu_wakeup_pin_disable
Function prototype	void pmu_wakeup_pin_disable (void);
Function descriptions	disable wakeup pin
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable wakeup pin */
pmu_wakeup_pin_disable();
```

pmu_backup_write_enable

The description of pmu_backup_write_enable is shown as below:

Table 3-433. Function pmu_backup_write_enable

Function name	pmu_backup_write_enable
Function prototype	void pmu_backup_write_enable (void);
Function descriptions	enable write access to the registers in backup domain
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable backup domain write */
```

```
pmu_backup_write_enable();
```

pmu_backup_write_disable

The description of pmu_backup_write_disable is shown as below:

Table 3-434. Function pmu_backup_write_disable

Function name	pmu_backup_write_disable
Function prototype	void pmu_backup_write_disable (void);
Function descriptions	disable write access to the registers in backup domain
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable backup domain write */
```

```
pmu_backup_write_disable();
```

pmu_flag_get

The description of pmu_flag_get is shown as below:

Table 3-435. Function pmu_flag_get

Function name	pmu_flag_get
Function prototype	FlagStatus pmu_flag_get(uint32_t flag);
Function descriptions	get flag state
Precondition	-
The called functions	-
Input parameter{in}	
flag	flag
PMU_FLAG_WAKEUP	wakeup flag
PMU_FLAG_STANDBY	standby flag
PMU_FLAG_LVD	low voltage detector status flag
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```

/* get flag state */

FlagStatus status;

status = pmu_flag_get(PMU_FLAG_WAKEUP);

pmu_flag_clear
  
```

The description of pmu_flag_clear is shown as below:

Table 3-436. Function pmu_flag_clear

Function name	pmu_flag_clear
Function prototype	void pmu_flag_clear(uint32_t flag_reset);
Function descriptions	clear flag bit
Precondition	-
The called functions	-
Input parameter{in}	
flag_reset	flag
PMU_FLAG_RESET_WAKEUP	reset wakeup flag
PMU_FLAG_RESET_STANDBY	reset standby flag
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* clear flag bit */

pmu_flag_clear(PMU_FLAG_RESET_WAKEUP);
  
```

3.18. RCU

RCU is the reset and clock unit. Reset Control includes the control of three kinds of reset: power reset, system reset and backup domain reset. The Clock Control unit provides a range of frequencies and clock functions. The RCU registers are listed in chapter [9](#), the RCU firmware functions are introduced in chapter [9](#).

3.18.1. Descriptions of Peripheral registers

RCU registers (MD, HD, XD series) are listed in the table shown as below:

Table 3-437. RCU Registers (MD, HD, XD series)

Registers	Descriptions
RCU_CTL	Control register
RCU_CFG0	Clock configuration register 0
RCU_INT	Clock interrupt register
RCU_APB2RST	APB2 reset register
RCU_APB1RST	APB1 reset register
RCU_AHBEN	AHB enable register
RCU_APB2EN	APB2 enable register
RCU_APB1EN	APB1 enable register
RCU_BDCTL	Backup domain control register
RCU_RSTSCK	Reset source/clock register
RCU_DSV	Deep-sleep mode voltage register

RCU registers (CL series) are listed in the table shown as below:

Table 3-438. RCU Registers (CL series)

Registers	Descriptions
RCU_CTL	Control register
RCU_CFG0	Clock configuration register 0
RCU_INT	Clock interrupt register
RCU_APB2RST	APB2 reset register
RCU_APB1RST	APB1 reset register
RCU_AHBEN	AHB enable register
RCU_APB2EN	APB2 enable register
RCU_APB1EN	APB1 enable register
RCU_BDCTL	Backup domain control register
RCU_RSTSCK	Reset source/clock register
RCU_AHBRST	AHB reset register
RCU_CFG1	Clock configuration register 1
RCU_DSV	Deep-sleep mode voltage register

3.18.2. Descriptions of Peripheral functions

RCU firmware functions are listed in the table shown as below:

Table 3-439. RCU firmware function

Function name	Function description
rcu_deinit	deinitialize the RCU
rcu_periph_clock_enable	enable the peripherals clock
rcu_periph_clock_disable	disable the peripherals clock
rcu_periph_clock_sleep_enable	enable the peripherals clock when in sleep mode
rcu_periph_clock_sleep_disable	disable the peripherals clock when in sleep mode
rcu_periph_reset_enable	enable the peripherals reset

Function name	Function description
rcu_periph_reset_disable	disable the peripheral reset
rcu_bkp_reset_enable	enable the BKP domain reset
rcu_bkp_reset_disable	disable the BKP domain reset
rcu_system_clock_source_config	configure the system clock source
rcu_system_clock_source_get	get the system clock source
rcu_ahb_clock_config	configure the AHB clock prescaler selection
rcu_apb1_clock_config	configure the APB1 clock prescaler selection
rcu_apb2_clock_config	configure the APB2 clock prescaler selection
rcu_ckout0_config	configure the CK_OUT0 clock source
rcu_pll_config	configure the main PLL clock
rcu_predv0_config	configure the PREDV0 division factor
rcu_predv1_config	configure the PREDV1 division factor
rcu_pll1_config	configure the PLL1 clock
rcu_pll2_config	configure the PLL2 clock
rcu_adc_clock_config	configure the ADC prescaler factor
rcu_usb_clock_config	configure the USB prescaler factor
rcu_rtc_clock_config	configure the RTC clock source selection
rcu_i2s1_clock_config	configure the I2S1 clock source selection
rcu_i2s2_clock_config	configure the I2S2 clock source selection
rcu_flag_get	get the clock stabilization and peripheral reset flags
rcu_all_reset_flag_clear	clear all the reset flag
rcu_interrupt_flag_get	get the clock stabilization interrupt and ckm flags
rcu_interrupt_flag_clear	clear the interrupt flags
rcu_interrupt_enable	enable the stabilization interrupt
rcu_interrupt_disable	disable the stabilization interrupt
rcu_osc_stab_wait	wait for oscillator stabilization flags is SET or oscillator startup is timeout
rcu_osc_on	turn on the oscillator
rcu_osc_off	turn off the oscillator
rcu_osc_bypass_mode_enable	enable the oscillator bypass mode
rcu_osc_bypass_mode_disable	disable the oscillator bypass mode
rcu_hxtal_clock_monitor_enable	enable the HXTAL clock monitor
rcu_hxtal_clock_monitor_disable	disable the HXTAL clock monitor
rcu_irc8m_adjust_value_set	set the IRC8M adjust value
rcu_deepsleep_voltage_set	set the deep-sleep mode voltage value
rcu_clock_freq_get	get the system clock, bus clock frequency

Enum rcu_periph_enum

Table 3-440. Enum rcu_periph_enum

enum name	Function description
RCU_DMA0	DMA0 clock

enum name	Function description
RCU_DMA1	DMA1 clock
RCU_CRC	CRC clock
RCU_EXMC	EXMC clock
RCU_SDIO	SDIO clock(HD, XD, MD series)
RCU_USBFS	USBFS clock(only for CL series)
RCU_ENET	ENET clock(only for CL series)
RCU_ENETTX	ENETTX clock(only for CL series)
RCU_ENETRX	ENETRX clock(only for CL series)
RCU_TIMER1	TIMER1 clock
RCU_TIMER2	TIMER2 clock
RCU_TIMER3	TIMER3 clock
RCU_TIMER4	TIMER4 clock
RCU_TIMER5	TIMER5 clock
RCU_TIMER6	TIMER6 clock
RCU_TIMER11	TIMER11 clock(XD series)
RCU_TIMER12	TIMER12 clock(XD series)
RCU_TIMER13	TIMER13 clock(XD series)
RCU_WWDGT	WWWDGT clock
RCU_SPI1	SPI1 clock
RCU_SPI2	SPI2 clock
RCU_USART1	USART1 clock
RCU_USART2	USART2 clock
RCU_UART3	UART3 clock
RCU_UART4	UART4 clock
RCU_I2C0	I2C0 clock
RCU_I2C1	I2C1 clock
RCU_USBD	USBD clock(XD, HD, MD series)
RCU_CAN0	CAN0 clock
RCU_CAN1	CAN1 clock(only for CL series)
RCU_BKPI	BKPI clock
RCU_PMU	PMU clock
RCU_DAC	DAC clock
RCU_RTC	RTC clock
RCU_AF	alternate function clock
RCU_GPIOA	GPIOA clock
RCU_GPIOB	GPIOB clock
RCU_GPIOC	GPIOC clock
RCU_GPIOD	GPIOD clock
RCU_GPIOE	GPIOE clock
RCU_GPIOF	GPIOF clock
RCU_GPIOG	GPIOG clock

enum name	Function description
RCU_ADC0	ADC0 clock
RCU_ADC1	ADC1 clock
RCU_TIMER0	TIMER0 clock
RCU_SPI0	SPI0 clock
RCU_TIMER7	TIMER7 clock
RCU_USART0	USART0 clock
RCU_ADC2	ADC2 clock(only for CL series)
RCU_TIMER8	TIMER8 clock(XD series)
RCU_TIMER9	TIMER9 clock(XD series)
RCU_TIMER10	TIMER10 clock(XD series)

Enum rcu_periph_sleep_enum

Table 3-441. Enum rcu_periph_sleep_enum

enum name	Function description
RCU_SRAM_SLP	SRAM clock when sleep mode
RCU_FMC_SLP	FMC clock when sleep mode

Enum rcu_periph_reset_enum

Table 3-442. Enum rcu_periph_reset_enum

enum name	Function description
RCU_USBFSRST	USBFS clock reset(only for CL series)
RCU_ENETRST	ENET clock reset(only for CL series)
RCU_TIMER1RST	TIMER1 clock reset
RCU_TIMER2RST	TIMER2 clock reset
RCU_TIMER3RST	TIMER3 clock reset
RCU_TIMER4RST	TIMER4 clock reset
RCU_TIMER5RST	TIMER5 clock reset
RCU_TIMER6RST	TIMER6 clock reset
RCU_TIMER11RST	TIMER11 clock reset(XD series)
RCU_TIMER12RST	TIMER12 clock reset(XD series)
RCU_TIMER13RST	TIMER13 clock reset(XD series)
RCU_WWDGTRST	WWDGT clock reset
RCU_SPI1RST	SPI1 clock reset
RCU_SPI2RST	SPI2 clock reset
RCU_USART1RST	USART1 clock reset
RCU_USART2RST	USART2 clock reset
RCU_UART3RST	UART3 clock reset
RCU_UART4RST	UART4 clock reset
RCU_I2C0RST	I2C0 clock reset
RCU_I2C1RST	I2C1 clock reset

enum name	Function description
RCU_USBDRST	USBD clock reset(XD, HD, MD series)
RCU_CAN0RST	CAN0 clock reset
RCU_CAN1RST	CAN1 clock reset(only for CL series)
RCU_BKPIRST	BKPI clock reset
RCU_PMURST	PMU clock reset
RCU_DACRST	DAC clock reset
RCU_AFRST	alternate function clock reset
RCU_GPIOARST	GPIOA clock reset
RCU_GPIOBRST	GPIOB clock reset
RCU_GPIOCRST	GPIOC clock reset
RCU_GPIODRST	GPIOD clock reset
RCU_GPIOERST	GPIOE clock reset
RCU_GPIOFRST	GPIOF clock reset
RCU_GPIOGRST	GPIOG clock reset
RCU_ADC0RST	ADC0 clock reset
RCU_ADC1RST	ADC1 clock reset
RCU_TIMER0RST	TIMER0 clock reset
RCU_SPI0RST	SPI0 clock reset
RCU_TIMER7RST	TIMER7 clock reset
RCU_USART0RST	USART0 clock reset
RCU_ADC2RST	ADC2 clock reset(only for CL series)
RCU_TIMER8RST	TIMER8 clock reset(XD series)
RCU_TIMER9RST	TIMER9 clock reset(XD series)
RCU_TIMER10RST	TIMER10 clock reset(XD series)
RCU_USART5RST	USART5 clock reset

Enum rcu_flag_enum

Table 3-443. Enum rcu_flag_enum

enum name	Function description
RCU_FLAG_IRC8MSTB	IRC8M stabilization flags
RCU_FLAG_HXTALSTB	HXTAL stabilization flags
RCU_FLAG_PLLSTB	PLL stabilization flags
RCU_FLAG_PLL1STB	PLL1 stabilization flags(only for CL series)
RCU_FLAG_PLL2STB	PLL2 stabilization flags(only for CL series)
RCU_FLAG_LXTALSTB	LXTAL stabilization flags
RCU_FLAG_IRC40KSTB	IRC40K stabilization flags
RCU_FLAG_EPRST	external PIN reset flags

enum name	Function description
RCU_FLAG_PORRST	power reset flags
RCU_FLAG_SWRST	software reset flags
RCU_FLAG_FWDGTR_ST	FWDGT reset flags
RCU_FLAG_WWDGTR_ST	WWDGT reset flags
RCU_FLAG_LPRST	low-power reset flags

Enum rcu_int_flag_enum

Table 3-444. Enum rcu_int_flag_enum

enum name	Function description
RCU_INT_FLAG_IRC4_0KSTB	IRC40K stabilization interrupt flag
RCU_INT_FLAG_LXTA_LSTB	LXTAL stabilization interrupt flag
RCU_INT_FLAG_IRC8_MSTB	IRC8M stabilization interrupt flag
RCU_INT_FLAG_HXTA_LSTB	HXTAL stabilization interrupt flag
RCU_INT_FLAG_PLLS_TB	PLL stabilization interrupt flag
RCU_INT_FLAG_PLL1_STB	PLL1 stabilization interrupt flag(only for CL series)
RCU_INT_FLAG_PLL2_STB	PLL2 stabilization interrupt flag(only for CL series)
RCU_INT_FLAG_CKM	HXTAL clock stuck interrupt flag

Enum rcu_int_flag_clear_enum

Table 3-445. Enum rcu_int_flag_clear_enum

enum name	Function description
RCU_INT_FLAG_IRC4_0KSTB_CLR	IRC40K stabilization interrupt flags clear
RCU_INT_FLAG_LXTA_LSTB_CLR	LXTAL stabilization interrupt flags clear
RCU_INT_FLAG_IRC8_MSTB_CLR	IRC8M stabilization interrupt flags clear
RCU_INT_FLAG_HXTA_LSTB_CLR	HXTAL stabilization interrupt flags clear
RCU_INT_FLAG_PLLS_TB_CLR	PLL stabilization interrupt flags clear
RCU_INT_FLAG_PLL1	PLL1 stabilization interrupt flags clear(only for CL series)

enum name	Function description
STB_CLR	
RCU_INT_FLAG_PLL2_STB_CLR	PLL2 stabilization interrupt flags clear(only for CL series)
RCU_INT_FLAG_CKM_CLR	CKM interrupt flags clear

Enum rcu_int_enum

Table 3-446. Enum rcu_int_enum

enum name	Function description
RCU_INT_IRC40KSTB	IRC40K stabilization interrupt
RCU_INT_LXTALSTB	LXTAL stabilization interrupt
RCU_INT_IRC8MSTB	IRC8M stabilization interrupt
RCU_INT_HXTALSTB	HXTAL stabilization interrupt
RCU_INT_PLLSTB	PLL stabilization interrupt
RCU_INT_PLL1STB	PLL1 stabilization interrupt(only for CL series)
RCU_INT_PLL2STB	PLL2 stabilization interrupt(only for CL series)

Enum rcu_osc_type_enum

Table 3-447. Enum rcu_osc_type_enum

enum name	Function description
RCU_HXTAL	HXTAL
RCU_LXTAL	LXTAL
RCU_IRC8M	IRC8M
RCU_IRC40K	IRC40K
RCU_PLL_CK	PLL
RCU_PLL1_CK	PLL1(only for CL series)
RCU_PLL2_CK	PLL2(only for CL series)

Enum rcu_clock_freq_enum

Table 3-448. Enum rcu_clock_freq_enum

enum name	Function description
CK_SYS	system clock
CK_AHB	AHB clock
CK_APB1	APB1 clock
CK_APB2	APB2 clock

rcu_deinit

The description of rcu_deinit is shown as below:

Table 3-449. Function rcu_deinit

Function name	rcu_deinit
Function prototype	void rcu_deinit(void);
Function descriptions	deinitialize the RCU, reset the value of all RCU registers into initial values
Precondition	-
The called functions	rcu_osc_stab_wait
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* deinitialize RCU */
rcu_deinit();
```

rcu_periph_clock_enable

The description of rcu_periph_clock_enable is shown as below:

Table 3-450. Function rcu_periph_clock_enable

Function name	rcu_periph_clock_enable	
Function prototype	void rcu_periph_clock_enable(rcu_periph_enum periph);	
Function descriptions	enable the peripherals clock	
Precondition	-	
The called functions	-	
Input parameter{in}		
periph	RCU peripherals, refer to	
	RCU_USBD	USBD clock(XD, HD, MD series)
	RCU_CAN0	CAN0 clock
	RCU_CAN1	CAN1 clock(only for CL series)
Output parameter{out}		
-	-	
Return value		
-	-	

Example:

```
/* enable the USART0 clock */
rcu_periph_clock_enable(RCU_USART0);
```

rcu_periph_clock_disable

The description of rcu_periph_clock_disable is shown as below:

Table 3-451. Function rcu_periph_clock_disable

Function name	rcu_periph_clock_disable				
Function prototype	void rcu_periph_clock_disable(rcu_periph_enum periph);				
Function descriptions	disable the peripherals clock				
Precondition	-				
The called functions	-				
Input parameter{in}					
periph	RCU peripherals, refer to				
	RCU_USBD	USBD clock(XD, HD, MD series)			
	RCU_CAN0	CAN0 clock			
	RCU_CAN1	CAN1 clock(only for CL series)			
Output parameter{out}					
-	-				
Return value					
-	-				

Example:

```
/* disable the USART0 clock */
rcu_periph_clock_disable(RCU_USART0);
```

rcu_periph_clock_sleep_enable

The description of rcu_periph_clock_sleep_enable is shown as below:

Table 3-452. Function rcu_periph_clock_sleep_enable

Function name	rcu_periph_clock_sleep_enable				
Function prototype	void rcu_periph_clock_sleep_enable(rcu_periph_sleep_enum periph);				
Function descriptions	enable the peripherals clock when in sleep mode				
Precondition	-				
The called functions	-				
Input parameter{in}					
periph	RCU peripherals, refer to				
	RCU_USART1RST	USART1 clock reset			
	RCU_USART2RST	USART2 clock reset			
	RCU_UART3RST	UART3 clock reset			
Output parameter{out}					
-	-				
Return value					

Example:

```
/* enable the FMC clock when in sleep mode */
rcu_periph_clock_sleep_enable(RCU_FMC_SLP);
```

rcu_periph_clock_sleep_disable

The description of `rcu_periph_clock_sleep_disable` is shown as below:

Table 3-453. Function `rcu_periph_clock_sleep_disable`

Function name	rcu_periph_clock_sleep_disable		
Function prototype	void rcu_periph_clock_sleep_disable(rcu_periph_sleep_enum periph);		
Function descriptions	disable the peripherals clock when in sleep mode		
Precondition	-		
The called functions	-		
Input parameter{in}			
periph	RCU peripherals, refer to		
	RCU_USART1RST		USART1 clock reset
	RCU_USART2RST		USART2 clock reset
	RCU_UART3RST		UART3 clock reset
Output parameter{out}			
-			-
Return value			
-			-

Example:

```
/* disable the FMC clock when in sleep mode */
rcu_periph_clock_sleep_disable(RCU_FMC_SLP);
```

rcu_periph_reset_enable

The description of `rcu_periph_reset_enable` is shown as below:

Table 3-454. Function `rcu_periph_reset_enable`

Function name	rcu_periph_reset_enable		
Function prototype	void rcu_periph_reset_enable(rcu_periph_reset_enum periph_reset);		
Function descriptions	enable the peripherals reset		
Precondition	-		
The called functions	-		
Input parameter{in}			
periph_reset	RCU peripherals reset, refer to		
	RCU_USBDRST		USBD clock reset(XD, HD, MD)

		RCU_CAN0RST	CAN0 clock reset
		RCU_CAN1RST	CAN1 clock reset(only for CL s)
Output parameter{out}			
-		-	
Return value			
-		-	

Example:

```
/* enable SPI0 reset */
rcu_periph_reset_enable(RCU_SPI0RST);
```

rcu_periph_reset_disable

The description of `rcu_periph_reset_disable` is shown as below:

Table 3-455. Function `rcu_periph_reset_disable`

Function name	rcu_periph_reset_disable		
Function prototype	void rcu_periph_reset_disable(rcu_periph_reset_enum periph_reset);		
Function descriptions	disable the peripheral reset		
Precondition	-		
The called functions	-		
Input parameter{in}			
periph_reset	RCU peripherals reset, refer to		
	RCU_USBDRST	USBD clock reset(XD, HD, MD)	
	RCU_CAN0RST	CAN0 clock reset	
	RCU_CAN1RST	CAN1 clock reset(only for CL s)	
Output parameter{out}			
-		-	
Return value			
-		-	

Example:

```
/* disable SPI0 reset */
rcu_periph_reset_disable(RCU_SPI0RST);
```

rcu_bkp_reset_enable

The description of `rcu_bkp_reset_enable` is shown as below:

Table 3-456. Function `rcu_bkp_reset_enable`

Function name	rcu_bkp_reset_enable	
Function prototype	void rcu_bkp_reset_enable(void);	

Function descriptions	enable the BKP domain reset
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset the BKP domain */
rcu_bkp_reset_enable();
```

rcu_bkp_reset_disable

The description of `rcu_bkp_reset_disable` is shown as below:

Table 3-457. Function `rcu_bkp_reset_disable`

Function name	rcu_bkp_reset_disable
Function prototype	void rcu_bkp_reset_disable(void);
Function descriptions	disable the BKP domain reset
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the BKP domain reset */
rcu_bkp_reset_disable();
```

rcu_system_clock_source_config

The description of `rcu_system_clock_source_config` is shown as below:

Table 3-458. Function `rcu_system_clock_source_config`

Function name	rcu_system_clock_source_config
Function prototype	void rcu_system_clock_source_config(uint32_t ck_sys);
Function descriptions	configure the system clock source
Precondition	-

The called functions	-
Input parameter{in}	
<code>ck_sys</code>	system clock source select
<code>RCU_CKSYSRC_IRC8M</code>	select CK_IRC8M as the CK_SYS source
<code>RCU_CKSYSRC_HXTAL</code>	select CK_HXTAL as the CK_SYS source
<code>RCU_CKSYSRC_PLL</code>	select CK_PLL as the CK_SYS source
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the CK_HXTAL as the CK_SYS source */
rcu_system_clock_source_config(RCU_CKSYSRC_HXTAL);
```

rcu_system_clock_source_get

The description of `rcu_system_clock_source_get` is shown as below:

Table 3-459. Function `rcu_system_clock_source_get`

Function name	<code>rcu_system_clock_source_get</code>
Function prototype	<code>uint32_t rcu_system_clock_source_get(void);</code>
Function descriptions	get the system clock source
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
<code>uint32_t</code>	which clock is selected as CK_SYS source
<code>RCU_SCSS_IRC8M</code>	CK_IRC8M is selected as the CK_SYS source
<code>RCU_SCSS_HXTAL</code>	CK_HXTAL is selected as the CK_SYS source
<code>RCU_SCSS_PLL</code>	CK_PLL is selected as the CK_SYS source

Example:

```
/* get the CK_SYS source */

uint32_t temp_cksys_status;

temp_cksys_status = rcu_system_clock_source_get();
```

rcu_ahb_clock_config

The description of rcu_ahb_clock_config is shown as below:

Table 3-460. Function rcu_ahb_clock_config

Function name	rcu_ahb_clock_config
Function prototype	void rcu_ahb_clock_config(uint32_t ck_ahb);
Function descriptions	configure the AHB clock prescaler selection
Precondition	-
The called functions	-
Input parameter{in}	
ck_ahb	AHB clock prescaler selection
<i>RCU_AHB_CKSYS_DIVx</i>	select CK_SYS / x, (x=1, 2, 4, 8, 16, 64, 128, 256, 512)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure CK_SYS/128 */
rcu_ahb_clock_config(RCU_AHB_CKSYS_DIV128);
```

rcu_apb1_clock_config

The description of rcu_apb1_clock_config is shown as below:

Table 3-461. Function rcu_apb1_clock_config

Function name	rcu_apb1_clock_config
Function prototype	void rcu_apb1_clock_config(uint32_t ck_apb1);
Function descriptions	configure the APB1 clock prescaler selection
Precondition	-
The called functions	-
Input parameter{in}	
ck_apb1	APB1 clock prescaler selection
<i>RCU_APB1_CKAHB_DIV1</i>	select CK_AHB as CK_APB1
<i>RCU_APB1_CKAHB_DIV2</i>	select CK_AHB/2 as CK_APB1
<i>RCU_APB1_CKAHB_DIV4</i>	select CK_AHB/4 as CK_APB1
<i>RCU_APB1_CKAHB_DIV8</i>	select CK_AHB/8 as CK_APB1
<i>RCU_APB1_CKAHB_DIV16</i>	select CK_AHB/16 as CK_APB1

IV16	
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure CK_AHB/16 as CK_APB1 */
rcu_apb1_clock_config(RCU_APB1_CKAHB_DIV16);
```

rcu_apb2_clock_config

The description of `rcu_apb2_clock_config` is shown as below:

Table 3-462. Function `rcu_apb2_clock_config`

Function name	<code>rcu_apb2_clock_config</code>
Function prototype	<code>void rcu_apb2_clock_config(uint32_t ck_apb2);</code>
Function descriptions	configure the APB2 clock prescaler selection
Precondition	-
The called functions	-
Input parameter{in}	
<code>ck_apb2</code>	APB2 clock prescaler selection
<code>RCU_APB2_CKAHB_D</code> <code>IV1</code>	select CK_AHB as CK_APB2
<code>RCU_APB2_CKAHB_D</code> <code>IV2</code>	select CK_AHB/2 as CK_APB2
<code>RCU_APB2_CKAHB_D</code> <code>IV4</code>	select CK_AHB/4 as CK_APB2
<code>RCU_APB2_CKAHB_D</code> <code>IV8</code>	select CK_AHB/8 as CK_APB2
<code>RCU_APB2_CKAHB_D</code> <code>IV16</code>	select CK_AHB/16 as CK_APB2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure CK_AHB/8 as CK_APB2 */
rcu_apb2_clock_config(RCU_APB2_CKAHB_DIV8);
```

rcu_ckout0_config

The description of rcu_ckout0_config is shown as below:

Table 3-463. Function rcu_ckout0_config

Function name	rcu_ckout0_config
Function prototype	void rcu_ckout0_config(uint32_t ckout0_src);
Function descriptions	configure the CK_OUT0 clock source
Precondition	-
The called functions	-
Input parameter{in}	
ckout0_src	CK_OUT0 clock source selection
<i>RCU_CKOUT0SRC_N ONE</i>	no clock selected
<i>RCU_CKOUT0SRC_C KSYS</i>	select system clock CK_SYS
<i>RCU_CKOUT0SRC_I C8M</i>	select high speed 8M internal oscillator clock
<i>RCU_CKOUT0SRC_H XTAL</i>	select HXTAL
<i>RCU_CKOUT0SRC_C KPLL_DIV2</i>	select (CK_PLL / 2) clock
<i>RCU_CKOUT0SRC_C KPLL1</i>	select CK_PLL1 clock
<i>RCU_CKOUT0SRC_C KPLL2_DIV2</i>	select (CK_PLL2 / 2) clock
<i>RCU_CKOUT0SRC_E XT1</i>	select EXT1 clock
<i>RCU_CKOUT0SRC_C KPLL2</i>	select CK_PLL2 clock
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the HXTAL as CK_OUT0 clock source */
rcu_ckout0_config(RCU_CKOUT0SRC_HXTAL);
```

rcu_pll_config

The description of rcu_pll_config is shown as below:

Table 3-464. Function rcu_pll_config

Function name	rcu_pll_config
Function prototype	void rcu_pll_config(uint32_t pll_src, uint32_t pll_mul);
Function descriptions	configure the main PLL clock
Precondition	-
The called functions	-
Input parameter{in}	
pll_src	PLL clock source selection
<i>RCU_PLLSRC_IRC8M_DIV2</i>	IRC8M/2 clock is selected as source clock of PLL
<i>RCU_PLLSRC_HXTAL</i>	HXTAL is selected as source clock of PLL
Input parameter{in}	
pll_mul	PLL clock multiplication factor
<i>RCU_PLL_MULx</i>	PLL clock * x (x = 2..32 in XD series, x = 2..14, 6.5, 16..32 in CL series)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the PLL */
rcu_pll_config(RCU_PLLSRC_HXTAL, RCU_PLL_MUL10);
```

rcu_predv0_config (MD、HD、XD seires)

The description of rcu_predv0_config is shown as below:

Table 3-465. Function rcu_predv0_config

Function name	rcu_predv0_config
Function prototype	void rcu_predv0_config(uint32_t predv0_div);
Function descriptions	configure the PREDV0 division factor
Precondition	-
The called functions	-
Input parameter{in}	
predv0_div	PREDV0 division factor
<i>RCU_PREDV0_DIVx</i>	PREDV0 input source clock is divided by x, (x = 1,2)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the PREDV0 division factor */
```

```
rcu_predv0_config(RCU_PREDV0_DIV2);
```

rcu_predv0_config (CL seires)

The description of rcu_predv0_config is shown as below:

Table 3-466. Function rcu_predv0_config

Function name	rcu_predv0_config
Function prototype	void rcu_predv0_config(uint32_t predv0_source, uint32_t predv0_div);
Function descriptions	configure the PREDV0 division factor
Precondition	-
The called functions	-
Input parameter{in}	
predv0_source	PREDV0 input clock source selection
<i>RCU_PREDV0SRC_HXTAL</i>	select HXTAL as PREDV0 input source clock
<i>RCU_PREDV0SRC_CKPLL1</i>	select CK_PLL1 as PREDV0 input source clock
Input parameter{in}	
predv0_div	PREDV0 division factor
<i>RCU_PREDV0_DIVx</i>	PREDV0 input source clock is divided x (x=1..16)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the PREDV0 division factor */
rcu_predv0_config(RCU_PREDV0SRC_HXTAL, RCU_PREDV0_DIV4);
```

rcu_predv1_config (CL seires)

The description of rcu_predv1_config is shown as below:

Table 3-467. Function rcu_predv1_config

Function name	rcu_predv1_config
Function prototype	void rcu_predv1_config(uint32_t predv1_div);
Function descriptions	configure the PREDV1 division factor
Precondition	-
The called functions	-
Input parameter{in}	
predv1_div	PREDV1 division factor
<i>RCU_PREDV1_DIVx</i>	PREDV1 input source clock is divided x (x=1..16)
Output parameter{out}	

-	-	-
Return value		
-	-	-

Example:

```
/* configure the PREDV1 division factor */
rcu_predv1_config(RCU_PREDV1_DIV8);
```

rcu_pll1_config (CL seires)

The description of rcu_pll1_config is shown as below:

Table 3-468. Function rcu_pll1_config

Function name	rcu_pll1_config
Function prototype	void rcu_pll1_config(uint32_t pll_mul);
Function descriptions	configure the PLL1 clock
Precondition	-
The called functions	-
Input parameter{in}	
pll_mul	PLL clock multiplication factor
<i>RCU_PLL1_MULx</i>	PLL1 clock * x, (x = 8..16, 20)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the PLL1 clock */
rcu_pll1_config(RCU_PLL1_MUL8);
```

rcu_pll2_config (CL seires)

The description of rcu_pll2_config is shown as below:

Table 3-469. Function rcu_pll2_config

Function name	rcu_pll2_config
Function prototype	void rcu_pll2_config(uint32_t pll_mul)
Function descriptions	configure the PLL2 clock
Precondition	-
The called functions	-
Input parameter{in}	
pll_mul	PLL clock multiplication factor
<i>RCU_PLL2_MULx</i>	PLL2 clock * x, (x = 8..16, 20)
Output parameter{out}	

-	-	-
Return value		
-	-	-

Example:

```
/* configure the PLL2 clock */
rcu_pll2_config(RCU_PLL2_MUL8);
```

rcu_adc_clock_config

The description of `rcu_adc_clock_config` is shown as below:

Table 3-470. Function `rcu_adc_clock_config`

Function name	<code>rcu_adc_clock_config</code>
Function prototype	<code>void rcu_adc_clock_config(uint32_t adc_psc);</code>
Function descriptions	configure the ADC prescaler factor
Precondition	-
The called functions	-
Input parameter{in}	
adc_psc	ADC prescaler factor
<code>RCU_CKADC_CKAPB_2_DIV2</code>	$CK_{ADC} = CK_{APB2} / 2$
<code>RCU_CKADC_CKAPB_2_DIV4</code>	$CK_{ADC} = CK_{APB2} / 4$
<code>RCU_CKADC_CKAPB_2_DIV6</code>	$CK_{ADC} = CK_{APB2} / 6$
<code>RCU_CKADC_CKAPB_2_DIV8</code>	$CK_{ADC} = CK_{APB2} / 8$
<code>RCU_CKADC_CKAPB_2_DIV12</code>	$CK_{ADC} = CK_{APB2} / 12$
<code>RCU_CKADC_CKAPB_2_DIV16</code>	$CK_{ADC} = CK_{APB2} / 16$
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the ADC prescaler factor */
rcu_adc_clock_config(RCU_CKADC_CKAPB2_DIV8);
```

rcu_usb_clock_config

The description of rcu_usb_clock_config is shown as below:

Table 3-471. Function rcu_usb_clock_config

Function name	rcu_usb_clock_config
Function prototype	void rcu_usb_clock_config(uint32_t usb_psc);
Function descriptions	configure the USB prescaler factor
Precondition	-
The called functions	-
Input parameter{in}	
usb_psc	USB prescaler factor
<i>RCU_CKUSB_CKPLL_DIV1_5</i>	$CK_{USBFS} = CK_{PLL} / 1.5$
<i>RCU_CKUSB_CKPLL_DIV1</i>	$CK_{USBFS} = CK_{PLL} / 1$
<i>RCU_CKUSB_CKPLL_DIV2_5</i>	$CK_{USBFS} = CK_{PLL} / 2.5$
<i>RCU_CKUSB_CKPLL_DIV2</i>	$CK_{USBFS} = CK_{PLL} / 2$
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the USB prescaler factor */
rcu_usb_clock_config(RCU_CKUSB_CKPLL_DIV2_5);
```

rcu_rtc_clock_config

The description of rcu_rtc_clock_config is shown as below:

Table 3-472. Function rcu_rtc_clock_config

Function name	rcu_rtc_clock_config
Function prototype	void rcu_rtc_clock_config(uint32_t rtc_clock_source);
Function descriptions	configure the RTC clock source selection
Precondition	-
The called functions	-
Input parameter{in}	
rtc_clock_source	RTC clock source selection
<i>RCU_RTCSRC_NONE</i>	no clock selected
<i>RCU_RTCSRC_LXTAL</i>	select CK_LXTAL as RTC source clock
<i>RCU_RTCSRC_IRC40</i>	select CK_IRC40K as RTC source clock

K	
<i>RCU_RTCSRC_HXTAL _DIV_128</i>	select CK_HXTAL/128 as RTC source clock
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the RTC clock source selection */
```

```
rcu_rtc_clock_config(RCU_RTCSRC_IRC40K);
```

rcu_i2s1_clock_config (CL seires)

The description of rcu_i2s1_clock_config is shown as below:

Table 3-473. Function rcu_i2s1_clock_config

Function name	rcu_i2s1_clock_config
Function prototype	void rcu_i2s1_clock_config(uint32_t i2s_clock_source);
Function descriptions	configure the I2S1 clock source selection
Precondition	-
The called functions	-
Input parameter{in}	
i2s_clock_source	I2S clock source selection
<i>RCU_I2S1SRC_CKSYS</i>	select system clock as I2S1 source clock
<i>RCU_I2S1SRC_CKPLL2_MUL2</i>	select CK_PLL2 * 2 as I2S1 source clock
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the I2S1 clock source selection */
```

```
rcu_i2s1_clock_config(RCU_I2S1SRC_CKPLL2_MUL2);
```

rcu_i2s2_clock_config (CL seires)

The description of rcu_i2s2_clock_config is shown as below:

Table 3-474. Function rcu_i2s2_clock_config

Function name	rcu_i2s2_clock_config
Function prototype	void rcu_i2s2_clock_config(uint32_t i2s_clock_source);

Function descriptions	configure the I2S2 clock source selection
Precondition	-
The called functions	-
Input parameter{in}	
i2s_clock_source	I2S clock source selection
RCU_I2S2SRC_CKSY_S	select system clock as I2S2 source clock
RCU_I2S2SRC_CKPLL2_MUL2	select CK_PLL2 * 2 as I2S2 source clock
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the I2S2 clock source selection */
rcu_i2s2_clock_config(RCU_I2S2SRC_CKPLL2_MUL2);
```

rcu_osc_stab_wait

The description of **rcu_osc_stab_wait** is shown as below:

Table 3-475. Function rcu_osc_stab_wait

Function name	rcu_osc_stab_wait	
Function prototype	ErrStatus rcu_osc_stab_wait(rcu_osc_type_enum osci);	
Function descriptions	wait for oscillator stabilization flags is SET or oscillator startup is timeout	
Precondition	-	
The called functions	rcu_flag_get	
Input parameter{in}		
osci	oscillator types, refer to	
	Input parameter{in}	
	-	-
Output parameter{out}		
osci	-	-
	Return value	
	-	-
Example:		
/* deinitialize RC		
Output parameter{out}		
-	-	
Return value		
ErrStatus	SUCCESS or ERROR	

Example:

```
/* wait for oscillator stabilization flag */

if(SUCCESS == rcu_osc_on(RCU_HXTAL)){

}
```

rcu_osc_on

The description of rcu_osc_on is shown as below:

Table 3-476. Function rcu_osc_on

Function name	rcu_osc_on	
Function prototype	void rcu_osc_on(rcu_osc_type_enum osci);	
Function descriptions	turn on the oscillator	
Precondition	-	
The called functions	-	
Input parameter{in}		
osci	oscillator types, refer to	
	-	-
	Input parameter{in}	
Output parameter{out}		
osci	-	-
	Output parameter{out}	
	-	-
Return value		
-		
Example:		
/* deinitialize RC		
Output parameter{out}		
-		
Return value		
-		

Example:

```
/* turn on the high speed crystal oscillator */

rcu_osc_on(RCU_HXTAL);
```

rcu_osc_off

The description of rcu_osc_off is shown as below:

Table 3-477. Function rcu_osc_off

Function name	rcu_osc_off	
Function prototype	void rcu_osc_off(rcu_osc_type_enum osci);	
Function descriptions	turn off the oscillator	

Precondition	-	
The called functions	-	
Input parameter{in}		
osci	oscillator types, refer to	
	Input parameter{in}	-
	Output parameter{out}	-
	Return value	-
Example:		
/* deinitialize RC		
Output parameter{out}		
-	-	
Return value		
-	-	

Example:

```
/* turn off the high speed crystal oscillator */
rcu_osci_off(RCU_HXTAL);
```

rcu_osci_bypass_mode_enable

The description of **rcu_osci_bypass_mode_enable** is shown as below:

Table 3-478. Function `rcu_osci_bypass_mode_enable`

Function name	rcu_osci_bypass_mode_enable	
Function prototype	void rcu_osci_bypass_mode_enable(rcu_osci_type_enum osci);	
Function descriptions	enable the oscillator bypass mode	
Precondition	HXTALEN or LXTALEN must be reset before it	
The called functions	-	
Input parameter{in}		
osci	oscillator types, refer to	
	Input parameter{in}	-
	Output parameter{out}	-
	Return value	-
Example:		
/* deinitialize RC		
RCU_HXTAL	high speed crystal oscillator(HXTAL)	

<i>RCU_LXTAL</i>	low speed crystal oscillator(LXTAL)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the high speed crystal oscillator bypass mode */
rcu_osci_bypass_mode_enable(RCU_HXTAL);
```

rcu_osci_bypass_mode_disable

The description of *rcu_osci_bypass_mode_disable* is shown as below:

Table 3-479. Function *rcu_osci_bypass_mode_disable*

Function name	<i>rcu_osci_bypass_mode_disable</i>	
Function prototype	void <i>rcu_osci_bypass_mode_disable</i> (<i>rcu_osci_type_enum osci</i>);	
Function descriptions	disable the oscillator bypass mode	
Precondition	HXTALEN or LXTALEN must be reset before it	
The called functions	-	
Input parameter{in}		
osci	oscillator types, refer to	
	Input parameter{in}	
	-	-
	Output parameter{out}	
	-	
	Return value	
	-	-
	Example: /* deinitialize RC	
<i>RCU_HXTAL</i>	high speed crystal oscillator(HXTAL)	
<i>RCU_LXTAL</i>	low speed crystal oscillator(LXTAL)	
Output parameter{out}		
-	-	
Return value		
-	-	

Example:

```
/* disable the high speed crystal oscillator bypass mode */
rcu_osci_bypass_mode_disable(RCU_HXTAL);
```

rcu_hxtal_clock_monitor_enable

The description of `rcu_hxtal_clock_monitor_enable` is shown as below:

Table 3-480. Function `rcu_hxtal_clock_monitor_enable`

Function name	rcu_hxtal_clock_monitor_enable
Function prototype	<code>void rcu_hxtal_clock_monitor_enable(void);</code>
Function descriptions	enable the HXTAL clock monitor
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the HXTAL clock monitor */
rcu_hxtal_clock_monitor_enable();
```

rcu_hxtal_clock_monitor_disable

The description of `rcu_hxtal_clock_monitor_disable` is shown as below:

Table 3-481. Function `rcu_hxtal_clock_monitor_disable`

Function name	rcu_hxtal_clock_monitor_disable
Function prototype	<code>void rcu_hxtal_clock_monitor_disable(void);</code>
Function descriptions	disable the HXTAL clock monitor
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the HXTAL clock monitor */
rcu_hxtal_clock_monitor_disable();
```

rcu_irc8m_adjust_value_set

The description of `rcu_irc8m_adjust_value_set` is shown as below:

Table 3-482. Function `rcu_irc8m_adjust_value_set`

Function name	rcu_irc8m_adjust_value_set
Function prototype	<code>void rcu_irc8m_adjust_value_set(uint8_t irc8m_adjval);</code>
Function descriptions	set the IRC8M adjust value
Precondition	-
The called functions	-
Input parameter{in}	
<code>irc8m_adjval</code>	IRC8M adjust value, must be between 0 and 0x1F
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set the IRC8M adjust value */
rcu_irc8m_adjust_value_set(0x10);
```

rcu_deepsleep_voltage_set

The description of `rcu_deepsleep_voltage_set` is shown as below:

Table 3-483. Function `rcu_deepsleep_voltage_set`

Function name	rcu_deepsleep_voltage_set
Function prototype	<code>void rcu_deepsleep_voltage_set(uint32_t dsvol);</code>
Function descriptions	set the deep-sleep mode voltage value
Precondition	-
The called functions	-
Input parameter{in}	
<code>dsvol</code>	deep sleep mode voltage
<code>RCU_DEEPSLEEP_V_1_2</code>	the core voltage is 1.2V in deep-sleep mode
<code>RCU_DEEPSLEEP_V_1_1</code>	the core voltage is 1.1V in deep-sleep mode
<code>RCU_DEEPSLEEP_V_1_0</code>	the core voltage is 1.0V in deep-sleep mode
<code>RCU_DEEPSLEEP_V_0_9</code>	the core voltage is 0.9V in deep-sleep mode
Output parameter{out}	
-	-
Return value	

Example:

```
/* set the deep-sleep mode voltage */
rcu_deepsleep_voltage_set(RCU_DEEPSLEEP_V_1_1);
```

rcu_clock_freq_get

The description of rcu_clock_freq_get is shown as below:

Table 3-484. Function rcu_clock_freq_get

Function name	rcu_clock_freq_get		
Function prototype	uint32_t rcu_clock_freq_get(rcu_clock_freq_enum clock);		
Function descriptions	get the system clock, bus clock frequency		
Precondition	-		
The called functions	-		
Input parameter{in}			
clock	the clock frequency which to get, refers to _		
		Function name	rcu_periph_clock_enable
		Function prototype	void rcu_periph_clock_enable(rcu_periph_
Output parameter{out}			
-	-		
Return value			
ck_freq	clock frequency of system, AHB, APB1, APB2		

Example:

```
uint32_t temp_freq;
/* get the system clock frequency */
temp_freq = rcu_clock_freq_get(CK_SYS);
```

rcu_flag_get

The description of rcu_flag_get is shown as below:

Table 3-485. Function rcu_flag_get

Function name	rcu_flag_get	
Function prototype	FlagStatus rcu_flag_get(rcu_flag_enum flag);	
Function descriptions	get the clock stabilization and periphral reset flags	
Precondition	-	
The called functions	-	
Input parameter{in}		
flag	the clock stabilization and periphral reset flags, refer to _	

		RCU_INT_FLAG_LXTA LSTB	LXTAL stabilization interrupt
		RCU_INT_FLAG_IRC8 MSTB	IRC8M stabilization interrupt
Output parameter{out}			
-		-	
Return value			
FlagStatus		SET or RESET	

Example:

```
/* get the clock stabilization flag */

if(RESET != rcu_flag_get(RCU_FLAG_LXTALSTB)){
}
```

rcu_all_reset_flag_clear

The description of `rcu_all_reset_flag_clear` is shown as below:

Table 3-486. Function `rcu_all_reset_flag_clear`

Function name	rcu_all_reset_flag_clear
Function prototype	void rcu_all_reset_flag_clear(void);
Function descriptions	clear all the reset flag
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear all the reset flag */

rcu_all_reset_flag_clear();
```

rcu_interrupt_flag_get

The description of `rcu_interrupt_flag_get` is shown as below:

Table 3-487. Function `rcu_interrupt_flag_get`

Function name	rcu_interrupt_flag_get
Function prototype	FlagStatus rcu_interrupt_flag_get(rcu_int_flag_enum int_flag);

Function descriptions	get the clock stabilization interrupt and ckm flags		
Precondition	-		
The called functions	-		
Input parameter{in}			
int_flag		RCU_INT_FLAG_LXTA LSTB_CLR	LXTAL stabilization interrupt flag
		RCU_INT_FLAG_IRC8 MSTB_CLR	IRC8M stabilization interrupt flag
		RCU_INT_FLAG_HXTA LSTB_CLR	HXTAL stabilization interrupt flag
Output parameter{out}			
-		-	
Return value			
FlagStatus	SET or RESET		

Example:

```
/* get the clock stabilization interrupt flag */
if(SET == rcu_interrupt_flag_get(RCU_INT_FLAG_HXTALSTB)){
}
```

rcu_interrupt_flag_clear

The description of rcu_interrupt_flag_clear is shown as below:

Table 3-488. Function rcu_interrupt_flag_clear

Function name	rcu_interrupt_flag_clear		
Function prototype	void rcu_interrupt_flag_clear(rcu_int_flag_clear_enum int_flag_clear)		
Function descriptions	clear the interrupt flags		
Precondition	-		
The called functions	-		
Input parameter{in}			
int_flag_clear		RCU_INT_LXTALSTB	LXTAL stabilization interrupt
		RCU_INT_IRC8MSTB	IRC8M stabilization interrupt
		RCU_INT_HXTALSTB	HXTAL stabilization interrupt
Output parameter{out}			
-		-	
Return value			
-		-	

Example:

```
/* clear the interrupt HXTAL stabilization interrupt flag */
rcu_interrupt_flag_clear(RCU_INT_FLAG_HXTALSTB_CLR);
```

rcu_interrupt_enable

The description of rcu_interrupt_enable is shown as below:

Table 3-489. Function rcu_interrupt_enable

Function name	rcu_interrupt_enable				
Function prototype	void rcu_interrupt_enable(rcu_int_enum stab_int);				
Function descriptions	enable the stabilization interrupt				
Precondition	-				
The called functions	-				
Input parameter{in}					
stab_int	clock stabilization interrupt, refer to eq_enum				
	enum name				
	CK_SYS	system clock			
	CK_AHB	AHB clock			
	Output parameter{out}				
	-	-			
Return value					
-	-				

Example:

```
/* enable the HXTAL stabilization interrupt */
rcu_interrupt_enable(RCU_INT_HXTALSTB);
```

rcu_interrupt_disable

The description of rcu_interrupt_disable is shown as below:

Table 3-490. Function rcu_interrupt_disable

Function name	rcu_interrupt_disable		
Function prototype	void rcu_interrupt_disable(rcu_int_enum stab_int);		
Function descriptions	disable the stabilization interrupt		
Precondition	-		
The called functions	-		
Input parameter{in}			
stab_int	clock stabilization interrupt, refer to eq_enum		
	enum name		
	CK_SYS	system clock	

	CK_AHB	AHB clock
Output parameter{out}		
-	-	-
Return value		
-	-	-

Example:

```
/* disable the HXTAL stabilization interrupt */
rcu_interrupt_disable(RCU_INT_HXTALSTB);
```

3.19. RTC

The Real-time Clock (RTC) is usually used as a clock-calendar. The ones in the Backup Domain consist of a 32-bit up-counter, an alarm, a prescaler, a divider and the RTC clock configuration register. The RTC registers are listed in chapter [9](#), the FWDGT firmware functions are introduced in chapter [9](#).

3.19.1. Descriptions of Peripheral registers

RTC registers are listed in the table shown as below:

Table 3-491. RTC Registers

Registers	Descriptions
RTC_INTEN	Interrupt enable register
RTC_CTL	Control register
RTC_PSCH	Prescaler high register
RTC_PSCL	Prescaler low register
RTC_DIVH	Divider high register
RTC_DIVL	Divider low register
RTC_CNTH	counter high register
RTC_CNTL	counter low register
RTC_ALRMH	Alarm high register
RTC_ALRML	Alarm low register

3.19.2. Descriptions of Peripheral functions

RTC firmware functions are listed in the table shown as below:

Table 3-492.RTC firmware function

Function name	Function description
rtc_configuration_mode_enter	enter RTC configuration mode
rtc_configuration_mode_exit	exit RTC configuration mode

Function name	Function description
rtc_counter_set	set RTC counter value
rtc_prescaler_set	set RTC prescaler value
rtc_lwoff_wait	wait RTC last write operation finished flag set
rtc_register_sync_wait	wait RTC registers synchronized flag set
rtc_alarm_config	set RTC alarm value
rtc_counter_get	get RTC counter value
rtc_divider_get	get RTC divider value
rtc_flag_get	get RTC flag status
rtc_flag_clear	clear RTC flag status
rtc_interrupt_flag_get	get RTC interrupt flag status
rtc_interrupt_flag_clear	clear RTC interrupt flag status
rtc_interrupt_enable	enable RTC interrupt
rtc_interrupt_disable	disable RTC interrupt

rtc_configuration_mode_enter

The description of rtc_configuration_mode_enter is shown as below:

Table 3-493. Function rtc_configuration_mode_enter

Function name	rtc_configuration_mode_enter
Function prototype	void rtc_configuration_mode_enter(void);
Function descriptions	enter RTC configuration mode
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enter RTC configuration mode */

rtc_configuration_mode_enter();
```

rtc_configuration_mode_exit

The description of rtc_configuration_mode_exit is shown as below:

Table 3-494. Function rtc_configuration_mode_exit

Function name	rtc_configuration_mode_exit
Function prototype	void rtc_configuration_mode_exit(void);
Function descriptions	exit RTC configuration mode

Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* exit RTC configuration mode */

rtc_configuration_mode_exit( );
```

rtc_counter_set

The description of rtc_counter_set is shown as below:

Table 3-495. Function rtc_counter_set

Function name	rtc_counter_set
Function prototype	void rtc_counter_set(uint32_t cnt);
Function descriptions	set RTC counter value
Precondition	before using this function, you must call rtc_lwoff_wait() function (wait until LWOFF flag is set).
The called functions	rtc_configuration_mode_enter / rtc_configuration_mode_exit
Input parameter{in}	
cnt	RTC counter value (0-0xFFFF FFFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* wait until last write operation on RTC registers has finished */

rtc_lwoff_wait( );

/* set counter value to 0xFFFF */

rtc_counter_set(0xFFFF);
```

rtc_prescaler_set

The description of rtc_prescaler_set is shown as below:

Table 3-496. Function rtc_prescaler_set

Function name	rtc_prescaler_set
----------------------	-------------------

Function prototype	void rtc_prescaler_set(uint32_t psc);
Function descriptions	set RTC prescaler value
Precondition	before using this function, you must call rtc_lwoff_wait() function (wait until LWOFF flag is set).
The called functions	rtc_configuration_mode_enter / rtc_configuration_mode_exit
Input parameter{in}	
psc	RTC prescaler value (0-0x000F FFFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* wait until last write operation on RTC registers has finished */

rtc_lwoff_wait();

/* set RTC prescaler value to 0x7FFF */

rtc_prescaler_set (0x7FFF);

```

rtc_lwoff_wait

The description of rtc_lwoff_wait is shown as below:

Table 3-497. Function rtc_lwoff_wait

Function name	rtc_lwoff_wait
Function prototype	void rtc_lwoff_wait(void);
Function descriptions	Wait RTC last write operation finished flag set
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* wait until last write operation on RTC registers has finished */

rtc_lwoff_wait();

```

rtc_register_sync_wait

The description of rtc_register_sync_wait is shown as below:

Table 3-498. Function rtc_register_sync_wait

Function name	rtc_register_sync_wait
Function prototype	void rtc_register_sync_wait(void);
Function descriptions	w ait RTC registers synchronized flag set
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* wait for RTC registers synchronization */

rtc_register_sync_wait();
```

rtc_alarm_config

The description of rtc_alarm_config is shown as below:

Table 3-499. Function rtc_alarm_config

Function name	rtc_alarm_config
Function prototype	void rtc_alarm_config(uint32_t alarm);
Function descriptions	set RTC alarm value
Precondition	before using this function, you must call rtc_lwoff_wait() function (w ait until LWOFF flag is set).
The called functions	rtc_configuration_mode_enter / rtc_configuration_mode_exit
Input parameter{in}	
alarm	RTC alarm value (0-0xFFFF FFFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* wait until last write operation on RTC registers has finished */

rtc_lwoff_wait();

/* set alarm value to 0xFFFF */

rtc_alarm_config(0xFFFF);
```

rtc_counter_get

The description of rtc_counter_get is shown as below:

Table 3-500. Function rtc_counter_get

Function name	rtc_counter_get
Function prototype	uint32_t rtc_counter_get(void);
Function descriptions	get RTC counter value
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint32_t	the value of RTC counter

Example:

```
/* get the counter value */

uint32_t rtc_counter_value;

rtc_counter_value = rtc_counter_get();
```

rtc_divider_get

The description of rtc_divider_get is shown as below:

Table 3-501. Function rtc_divider_get

Function name	rtc_divider_get
Function prototype	uint32_t rtc_divider_get(void);
Function descriptions	get RTC divider value
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint32_t	the value of RTC divider

Example:

```
/* get the current RTC divider value */

uint32_t rtc_divider_value;

rtc_divider_value = rtc_divider_get();
```

rtc_flag_get

The description of rtc_flag_get is shown as below:

Table 3-502. Function rtc_flag_get

Function name	rtc_flag_get
Function prototype	FlagStatus rtc_flag_get(uint32_t flag);
Function descriptions	get RTC flag status
Precondition	-
The called functions	-
Input parameter{in}	
flag	specify which RTC flag status to get
<i>RTC_FLAG_SECOND</i>	second interrupt flag
<i>RTC_FLAG_ALARM</i>	alarm interrupt flag
<i>RTC_FLAG_OVERFLOW</i> <i>W</i>	overflow interrupt flag
<i>RTC_FLAG_RSYN</i>	registers synchronized flag
<i>RTC_FLAG_LWOF</i>	last write operation finished flag
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get the RTC alarm flag status */

FlagStatus alarm_status;

alarm_status = rtc_flag_get(RTC_FLAG_ALARM);
```

rtc_flag_clear

The description of rtc_flag_clear is shown as below:

Table 3-503. Function rtc_flag_clear

Function name	rtc_flag_clear
Function prototype	void rtc_flag_clear(uint32_t flag);
Function descriptions	clear RTC flag status
Precondition	before using this function, you must call rtc_lwoff_wait() function (wait until LWOFF flag is set).
The called functions	-
Input parameter{in}	
flag	specify which RTC flag status to clear
<i>RTC_FLAG_SECOND</i>	second interrupt flag
<i>RTC_FLAG_ALARM</i>	alarm interrupt flag

<i>RTC_FLAG_OVERFLOW</i>	overflow interrupt flag
<i>RTC_FLAG_RSYN</i>	registers synchronized flag
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* wait until last write operation on RTC registers has finished */

rtc_lwoff_wait();

/* clear the RTC alarm flag */

rtc_flag_clear(RTC_FLAG_ALARM);
```

rtc_interrupt_flag_get

The description of `rtc_interrupt_flag_get` is shown as below:

Table 3-504. Function `rtc_interrupt_flag_get`

Function name	rtc_interrupt_flag_get
Function prototype	FlagStatus rtc_interrupt_flag_get(uint32_t flag);
Function descriptions	get RTC interrupt flag status
Precondition	-
The called functions	-
Input parameter{in}	
<i>flag</i>	specify which flag status to get
<i>RTC_INT_FLAG_SEC</i> <i>OND</i>	second interrupt flag
<i>RTC_INT_FLAG_ALARM</i>	alarm interrupt flag
<i>RTC_INT_FLAG_OVFLOW</i>	overflow interrupt flag
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get the RTC overflow interrupt flag status */

FlagStatus overflow_status;

overflow_status = rtc_interrupt_flag_get(RTC_INT_FLAG_OVERFLOW);
```

rtc_interrupt_flag_clear

The description of rtc_interrupt_flag_clear is shown as below:

Table 3-505. Function rtc_interrupt_flag_clear

Function name	rtc_interrupt_flag_clear
Function prototype	void rtc_interrupt_flag_clear(uint32_t flag);
Function descriptions	clear RTC interrupt flag status
Precondition	before using this function, you must call rtc_lwoff_wait() function (wait until LWOFF flag is set).
The called functions	-
Input parameter{in}	
flag	specify which flag status to clear
<i>RTC_INT_FLAG_SEC OND</i>	second interrupt flag
<i>RTC_INT_FLAG_ALARM M</i>	alarm interrupt flag
<i>RTC_INT_FLAG_OVF RFLOW</i>	overflow interrupt flag
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* wait until last write operation on RTC registers has finished */

rtc_lwoff_wait();

/* clear the RTC alarm interrupt flag */

rtc_interrupt_flag_clear(RTC_INT_FLAG_ALARM);
```

rtc_interrupt_enable

The description of rtc_interrupt_enable is shown as below:

Table 3-506. Function rtc_interrupt_enable

Function name	rtc_interrupt_enable
Function prototype	void rtc_interrupt_enable(uint32_t interrupt);
Function descriptions	enable RTC interrupt
Precondition	before using this function, you must call rtc_lwoff_wait() function (wait until LWOFF flag is set).
The called functions	-
Input parameter{in}	
interrupt	specify which RTC interrupt to enable

<i>RTC_INT_SECOND</i>	second interrupt
<i>RTC_INT_ALARM</i>	alarm interrupt
<i>RTC_INT_OVERFLOW</i>	overflow interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* wait until last write operation on RTC registers has finished */

rtc_lwoff_wait();

/* enable the RTC second interrupt */

rtc_interrupt_enable(RTC_INT_SECOND);
```

rtc_interrupt_disable

The description of `rtc_interrupt_disable` is shown as below:

Table 3-507. Function `rtc_interrupt_disable`

Function name	rtc_interrupt_disable
Function prototype	void rtc_interrupt_disable(uint32_t interrupt);
Function descriptions	disable RTC interrupt
Precondition	before using this function, you must call <code>rtc_lwoff_wait()</code> function (wait until LWOFF flag is set).
The called functions	-
Input parameter{in}	
interrupt	specify which RTC interrupt to disable
<i>RTC_INT_SECOND</i>	second interrupt
<i>RTC_INT_ALARM</i>	alarm interrupt
<i>RTC_INT_OVERFLOW</i>	overflow interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* wait until last write operation on RTC registers has finished */

rtc_lwoff_wait();

/* disable the RTC second interrupt */

rtc_interrupt_disable(RTC_INT_SECOND);
```

3.20. SDIO

The secure digital input/output interface (SDIO) defines the SD, SD I/O, MMC and CE-ATA card host interface, which provides command/data transfer between the AHB system bus and SD memory cards, SD I/O cards, Multimedia Card (MMC) and CE-ATA devices. The SDIO registers are listed in chapter [9](#), the SDIO firmware functions are introduced in chapter [9](#).

3.20.1. Descriptions of Peripheral registers

SDIO registers are listed in the table shown as below:

Table 3-508. SDIO Registers

Registers	Descriptions
SDIO_PWRCTL	Power control register
SDIO_CLKCTL	Clock control register
SDIO_CMDARGMT	Command argument register
SDIO_CMDCTL	Command control register
SDIO_RSPCMDIDX	Command index response register
SDIO_RESPx x=0..3	Response register
SDIO_DATA TO	Data timeout register
SDIO_DATALEN	Data length register
SDIO_DATACTL	Data control register
SDIO_DATACNT	Data counter register
SDIO_STAT	Status register
SDIO_INTC	Interrupt clear register
SDIO_INTEN	Interrupt enable register
SDIO_FIFOCNT	FIFO counter register
SDIO_FIFO	FIFO data register

3.20.2. Descriptions of Peripheral functions

SDIO firmware functions are listed in the table shown as below:

Table 3-509. SDIO firmware function

Function name	Function description
sdio_deinit	deinitialize the SDIO
sdio_clock_config	configure the SDIO clock
sdio_hardware_clock_enable	enable hardware clock control
sdio_hardware_clock_disable	disable hardware clock control
sdio_bus_mode_set	set different SDIO card bus mode
sdio_power_state_set	set the SDIO power state
sdio_power_state_get	get the SDIO power state

Function name	Function description
sdio_clock_enable	enable SDIO_CLK clock output
sdio_clock_disable	disable SDIO_CLK clock output
sdio_command_response_config	configure the command and response
sdio_wait_type_set	set the command state machine wait type
sdio_csm_enable	enable the CSM(command state machine)
sdio_csm_disable	disable the CSM(command state machine)
sdio_command_index_get	get the last response command index
sdio_response_get	get the response for the last received command
sdio_data_config	configure the data timeout, data length and data block size
sdio_data_transfer_config	configure the data transfer mode and direction
sdio_dsm_enable	enable the DSM(data state machine) for data transfer
sdio_dsm_disable	disable the DSM(data state machine)
sdio_data_write	write data(one word) to the transmit FIFO
sdio_data_read	read data(one word) from the receive FIFO
sdio_data_counter_get	get the number of remaining data bytes to be transferred to card
sdio_fifo_counter_get	get the number of words remaining to be written or read from FIFO
sdio_dma_enable	enable the DMA request for SDIO
sdio_dma_disable	disable the DMA request for SDIO
sdio_flag_get	get the flags state of SDIO
sdio_flag_clear	clear the pending flags of SDIO
sdio_interrupt_enable	enable the SDIO interrupt
sdio_interrupt_disable	disable the SDIO interrupt
sdio_interrupt_flag_get	get the interrupt flags state of SDIO
sdio_interrupt_flag_clear	clear the interrupt pending flags of SDIO
sdio_readwait_enable	enable the read wait mode(SD I/O only)
sdio_readwait_disable	disable the read wait mode(SD I/O only)
sdio_stop_readwait_enable	enable the function that stop the read wait process(SD I/O only)
sdio_stop_readwait_disable	disable the function that stop the read wait process(SD I/O only)
sdio_readwait_type_set	set the read wait type(SD I/O only)
sdio_operation_enable	enable the SD I/O mode specific operation(SD I/O only)
sdio_operation_disable	disable the SD I/O mode specific operation(SD I/O only)
sdio_suspend_enable	enable the SD I/O suspend operation(SD I/O only)
sdio_suspend_disable	disable the SD I/O suspend operation(SD I/O only)
sdio_ceata_command_enable	enable the CE-ATA command(CE-ATA only)
sdio_ceata_command_disable	disable the CE-ATA command(CE-ATA only)
sdio_ceata_interrupt_enable	enable the CE-ATA interrupt(CE-ATA only)
sdio_ceata_interrupt_disable	disable the CE-ATA interrupt(CE-ATA only)

Function name	Function description
sdio_ceata_command_completion_enable	enable the CE-ATA command completion signal(CE-ATA only)
sdio_ceata_command_completion_disable	disable the CE-ATA command completion signal(CE-ATA only)

sdio_deinit

The description of sdio_deinit is shown as below:

Table 3-510. Function sdio_deinit

Function name	sdio_deinit
Function prototype	void sdio_deinit(void);
Function descriptions	deinitialize the SDIO
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* deinitialize the SDIO */
sdio_deinit();
```

sdio_clock_config

The description of sdio_clock_config is shown as below:

Table 3-511. Function sdio_clock_config

Function name	sdio_clock_config
Function prototype	void sdio_clock_config(uint32_t clock_edge, uint32_t clock_bypass, uint32_t clock_powersave, uint16_t clock_division);
Function descriptions	configure the SDIO clock
Precondition	-
The called functions	-
Input parameter{in}	
clock_edge	SDIO_CLK clock edge
SDIO_SDIOCLKEDGE_RISING	select the rising edge of the SDIOCLK to generate SDIO_CLK
SDIO_SDIOCLKEDGE_FALLING	select the falling edge of the SDIOCLK to generate SDIO_CLK

Input parameter{in}	
clock_bypass	clock bypass
SDIO_CLOCKBYPASS_ENABLE	clock bypass
SDIO_CLOCKBYPASS_DISABLE	no bypass
Input parameter{in}	
clock_powersave	SDIO_CLK clock dynamic switch on/off for power saving
SDIO_CLOCKPWRSAVE_ENABLE	SDIO_CLK closed when bus is idle
SDIO_CLOCKPWRSAVE_DISABLE	SDIO_CLK clock is always on
Input parameter{in}	
clock_division	clock division, less than 256
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the SDIO clock */
sdio_clock_config(SDIO_SDIOCLKEDGE_RISING, SDIO_CLOCKBYPASS_DISABLE,
SDIO_CLOCKPWRSAVE_DISABLE, SD_CLK_DIV_TRANS);
```

sdio_hardware_clock_enable

The description of **sdio_hardware_clock_enable** is shown as below:

Table 3-512. Function `sdio_hardware_clock_enable`

Function name	sdio_hardware_clock_enable
Function prototype	void sdio_hardware_clock_enable(void);
Function descriptions	enable hardware clock control
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable hardware clock control */
```

```
sdio_hardware_clock_enable();
```

sdio_hardware_clock_disable

The description of sdio_hardware_clock_disable is shown as below:

Table 3-513. Function sdio_hardware_clock_disable

Function name	sdio_hardware_clock_disable
Function prototype	void sdio_hardware_clock_disable(void);
Function descriptions	disable hardware clock control
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable hardware clock control */
```

```
sdio_hardware_clock_disable();
```

sdio_bus_mode_set

The description of sdio_bus_mode_set is shown as below:

Table 3-514. Function sdio_bus_mode_set

Function name	sdio_bus_mode_set
Function prototype	void sdio_bus_mode_set(uint32_t bus_mode);
Function descriptions	set different SDIO card bus mode
Precondition	-
The called functions	-
Input parameter{in}	
bus_mode	SDIO card bus mode
<i>SDIO_BUSMODE_1BIT</i> <i>T</i>	1-bit SDIO card bus mode
<i>SDIO_BUSMODE_4BIT</i> <i>T</i>	4-bit SDIO card bus mode
<i>SDIO_BUSMODE_8BIT</i> <i>T</i>	8-bit SDIO card bus mode
Output parameter{out}	
-	-
Return value	

Example:

```
/* set SDIO bus mode */
sdio_bus_mode_set(SDIO_BUSMODE_1BIT);
```

sdio_power_state_set

The description of `sdio_power_state_set` is shown as below:

Table 3-515. Function `sdio_power_state_set`

Function name	sdio_power_state_set
Function prototype	void sdio_power_state_set(uint32_t power_state);
Function descriptions	set the SDIO power state
Precondition	-
The called functions	-
Input parameter{in}	
power_state	SDIO power state
SDIO_POWER_ON	SDIO power on
SDIO_POWER_OFF	SDIO power off
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set SDIO power state */
sdio_power_state_set(SDIO_POWER_ON);
```

sdio_power_state_get

The description of `sdio_power_state_get` is shown as below:

Table 3-516. Function `sdio_power_state_get`

Function name	sdio_power_state_get
Function prototype	uint32_t sdio_power_state_get(void);
Function descriptions	get the SDIO power state
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	

uint32_t	SDIO_POWER_ON / SDIO_POWER_OFF
----------	--------------------------------

Example:

```
/* get the SDIO power state */

uint32_t sdio_power_value;

sdio_power_value = sdio_power_state_get();
```

sdio_clock_enable

The description of `sdio_clock_enable` is shown as below:

Table 3-517. Function `sdio_clock_enable`

Function name	<code>sdio_clock_enable</code>
Function prototype	<code>void sdio_clock_enable(void);</code>
Function descriptions	enable SDIO_CLK clock output
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable SDIO_CLK clock output */

sdio_clock_enable();
```

sdio_clock_disable

The description of `sdio_clock_disable` is shown as below:

Table 3-518. Function `sdio_clock_disable`

Function name	<code>sdio_clock_disable</code>
Function prototype	<code>void sdio_clock_disable(void);</code>
Function descriptions	disable SDIO_CLK clock output
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	

Example:

```
/* disable SDIO_CLK clock output */
sdio_clock_disable();
```

sdio_command_response_config

The description of `sdio_command_response_config` is shown as below:

Table 3-519. Function `sdio_command_response_config`

Function name	<code>sdio_command_response_config</code>
Function prototype	<code>void sdio_command_response_config(uint32_t cmd_index, uint32_t cmd_argument, uint32_t response_type);</code>
Function descriptions	configure the command and response
Precondition	-
The called functions	-
Input parameter{in}	
cmd_index	command index, refer to the related specifications
Input parameter{in}	
cmd_argument	command argument, refer to the related specifications
Input parameter{in}	
response_type	response type
<i>SDIO_RESPONSETYP_E_NO</i>	no response
<i>SDIO_RESPONSETYP_E_SHORT</i>	short response
<i>SDIO_RESPONSETYP_E_LONG</i>	long response
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* CMD2(SD_CMD_ALL_SEND_CID) command response config*/
sdio_command_response_config(SD_CMD_ALL_SEND_CID, (uint32_t)0x0,
  SDIO_RESPONSETYPE_LONG);
```

sdio_wait_type_set

The description of `sdio_wait_type_set` is shown as below:

Table 3-520. Function sdio_wait_type_set

Function name	sdio_wait_type_set
Function prototype	void sdio_wait_type_set(uint32_t wait_type);
Function descriptions	set the command state machine wait type
Precondition	-
The called functions	-
Input parameter{in}	
wait_type	wait type
SDIO_WAITTYPE_NO	not wait interrupt
SDIO_WAITTYPE_INT ERRUPT	wait interrupt
SDIO_WAITTYPE_DAT AEND	wait the end of data transfer
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set the command state machine wait type */

sdio_wait_type_set(SDIO_WAITTYPE_NO);
```

sdio_csm_enable

The description of sdio_csm_enable is shown as below:

Table 3-521. Function sdio_csm_enable

Function name	sdio_csm_enable
Function prototype	void sdio_csm_enable(void);
Function descriptions	enable the CSM(command state machine)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the CSM(command state machine) */

sdio_csm_enable();
```

sdio_csm_disable

The description of sdio_csm_disable is shown as below:

Table 3-522. Function sdio_csm_disable

Function name	sdio_csm_disable
Function prototype	void sdio_csm_disable(void);
Function descriptions	disable the CSM(command state machine)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the CSM(command state machine) */

sdio_csm_disable();
```

sdio_command_index_get

The description of sdio_command_index_get is shown as below:

Table 3-523. Function sdio_command_index_get

Function name	sdio_command_index_get
Function prototype	uint8_t sdio_command_index_get(void);
Function descriptions	get the last response command index
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint8_t	last response command index

Example:

```
/* get SDIO command index */

uint8_t sdio_command_value;

sdio_command_value = sdio_command_index_get();
```

sdio_response_get

The description of sdio_response_get is shown as below:

Table 3-524. Function sdio_response_get

Function name	sdio_response_get
Function prototype	uint32_t sdio_response_get(uint32_t responsex);
Function descriptions	get the response for the last received command
Precondition	-
The called functions	-
Input parameter{in}	
responsex	SDIO response
<i>SDIO_RESPONSE0</i>	card response[31:0]/card response[127:96]
<i>SDIO_RESPONSE1</i>	card response[95:64]
<i>SDIO_RESPONSE2</i>	card response[63:32]
<i>SDIO_RESPONSE3</i>	card response[31:1], plus bit 0
Output parameter{out}	
-	-
Return value	
uint32_t	response for the last received command

Example:

```
/* store the CID0 numbers */
uint32_t sdio_cid[0];
sdio_cid[0] = sdio_response_get(SDIO_RESPONSE0);
```

sdio_data_config

The description of sdio_data_config is shown as below:

Table 3-525. Function sdio_data_config

Function name	sdio_data_config
Function prototype	void sdio_data_config(uint32_t data_timeout, uint32_t data_length, uint32_t data_blocksize);
Function descriptions	configure the data timeout, data length and data block size
Precondition	-
The called functions	-
Input parameter{in}	
data_timeout	data timeout period in card bus clock periods
Input parameter{in}	
data_length	number of data bytes to be transferred
Input parameter{in}	
data_blocksize	size of data block for block transfer

<code>SDIO_DATABLOCKSIZE_1BYTE</code>	block size = 1 byte
<code>SDIO_DATABLOCKSIZE_2BYTES</code>	block size = 2 bytes
<code>SDIO_DATABLOCKSIZE_4BYTES</code>	block size = 4 bytes
<code>SDIO_DATABLOCKSIZE_8BYTES</code>	block size = 8 bytes
<code>SDIO_DATABLOCKSIZE_16BYTES</code>	block size = 16 bytes
<code>SDIO_DATABLOCKSIZE_32BYTES</code>	block size = 32 bytes
<code>SDIO_DATABLOCKSIZE_64BYTES</code>	block size = 64 bytes
<code>SDIO_DATABLOCKSIZE_128BYTES</code>	block size = 128 bytes
<code>SDIO_DATABLOCKSIZE_256BYTES</code>	block size = 256 bytes
<code>SDIO_DATABLOCKSIZE_512BYTES</code>	block size = 512 bytes
<code>SDIO_DATABLOCKSIZE_1024BYTES</code>	block size = 1024 bytes
<code>SDIO_DATABLOCKSIZE_2048BYTES</code>	block size = 2048 bytes
<code>SDIO_DATABLOCKSIZE_4096BYTES</code>	block size = 4096 bytes
<code>SDIO_DATABLOCKSIZE_8192BYTES</code>	block size = 8192 bytes
<code>SDIO_DATABLOCKSIZE_16384BYTES</code>	block size = 16384 bytes
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure SDIO data */
sdio_data_config(0, 0, SDIO_DATABLOCKSIZE_1BYTE);
```

sdio_data_transfer_config

The description of `sdio_data_transfer_config` is shown as below:

Table 3-526. Function sdio_data_transfer_config

Function name	sdio_data_transfer_config
Function prototype	void sdio_data_transfer_config(uint32_t transfer_mode, uint32_t transfer_direction);
Function descriptions	configure the data transfer mode and direction
Precondition	-
The called functions	-
Input parameter{in}	
transfer_mode	mode of data transfer
<i>SDIO_TRANSMODE_B LOCK</i>	block transfer
<i>SDIO_TRANSMODE_S TREAM</i>	stream transfer or SDIO multibyte transfer
Input parameter{in}	
transfer_direction	data transfer direction, read or write
<i>SDIO_TRANSDIRECTI ON_TOCARD</i>	write data to card
<i>SDIO_TRANSDIRECTI ON_TOSDIO</i>	read data from card
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure SDIO data transmission */
sdio_data_transfer_config(SDIO_TRANSDIRECTI_TOSDIO,
                           SDIO_TRANSMODE_BLOCK);
```

sdio_dsm_enable

The description of `sdio_dsm_enable` is shown as below:

Table 3-527. Function sdio_dsm_enable

Function name	sdio_dsm_enable
Function prototype	void sdio_dsm_enable(void);
Function descriptions	enable the DSM(data state machine) for data transfer
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* enable the DSM(data state machine) */
sdio_dsm_enable();
```

sdio_dsm_disable

The description of sdio_dsm_disable is shown as below:

Table 3-528. Function sdio_dsm_disable

Function name	sdio_dsm_disable
Function prototype	void sdio_dsm_disable(void);
Function descriptions	disable the DSM(data state machine)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the DSM(data state machine) */
sdio_dsm_disable();
```

sdio_data_write

The description of sdio_data_write is shown as below:

Table 3-529. Function sdio_data_write

Function name	sdio_data_w rite
Function prototype	void sdio_data_w rite(uint32_t data);
Function descriptions	w rite data(one w ord) to the transmit FIFO
Precondition	-
The called functions	-
Input parameter{in}	
data	32-bit data w rite to card
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* write data(one word) to the transmit FIFO */
sdio_data_write(0x0000 0001);
```

sdio_data_read

The description of `sdio_data_read` is shown as below:

Table 3-530. Function `sdio_data_read`

Function name	sdio_data_read
Function prototype	uint32_t sdio_data_read(void);
Function descriptions	read data(one word) from the receive FIFO
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint32_t	received data

Example:

```
/* read data(one word) from the receive FIFO */
sdio_data_read();
```

sdio_data_counter_get

The description of `sdio_data_counter_get` is shown as below:

Table 3-531. Function `sdio_data_counter_get`

Function name	sdio_data_counter_get
Function prototype	uint32_t sdio_data_counter_get(void);
Function descriptions	get the number of remaining data bytes to be transferred to card
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint32_t	number of remaining data bytes to be transferred

Example:

```
/* get the number of remaining data bytes to be transferred to card */
```

```
uint32_t sdio_data_value;
sdio_data_value = sdio_data_counter_get();
```

sdio_fifo_counter_get

The description of `sdio_fifo_counter_get` is shown as below:

Table 3-532. Function `sdio_data_counter_get`

Function name	sdio_fifo_counter_get
Function prototype	uint32_t sdio_fifo_counter_get(void);
Function descriptions	get the number of words remaining to be written or read from FIFO
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
uint32_t	remaining number of words

Example:

```
/* get the number of words remaining to be written or read from FIFO */
uint32_t sdio_fifo_value;
sdio_fifo_value = sdio_fifo_counter_get();
```

sdio_dma_enable

The description of `sdio_dma_enable` is shown as below:

Table 3-533. Function `sdio_dma_enable`

Function name	sdio_dma_enable
Function prototype	void sdio_dma_enable(void);
Function descriptions	enable the DMA request for SDIO
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the SDIO DMA */

sdio_dma_enable();
```

sdio_dma_disable

The description of `sdio_dma_disable` is shown as below:

Table 3-534. Function `sdio_dma_disable`

Function name	sdio_dma_disable
Function prototype	void sdio_dma_disable(void);
Function descriptions	disable the DMA request for SDIO
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the SDIO DMA */

sdio_dma_disable();
```

sdio_flag_get

The description of `sdio_flag_get` is shown as below:

Table 3-535. Function `sdio_flag_get`

Function name	sdio_flag_get
Function prototype	FlagStatus sdio_flag_get(uint32_t flag);
Function descriptions	get the flags state of SDIO
Precondition	-
The called functions	-
Input parameter{in}	
flag	flags state of SDIO
SDIO_FLAG_CCRCER R	command response received (CRC check failed) flag
SDIO_FLAG_DTCRCE RR	data block sent/received (CRC check failed) flag
SDIO_FLAG_CMDTMO UT	command response timeout flag

<code>SDIO_FLAG_DTTMOU_T</code>	data timeout flag
<code>SDIO_FLAG_TXURE</code>	transmit FIFO underrun error occurs flag
<code>SDIO_FLAG_RXORE</code>	received FIFO overrun error occurs flag
<code>SDIO_FLAG_CMDREC_V</code>	command response received (CRC check passed) flag
<code>SDIO_FLAG_CMDSEN_D</code>	command sent (no response required) flag
<code>SDIO_FLAG_DTEND</code>	data end (data counter, SDIO_DA TACNT, is zero) flag
<code>SDIO_FLAG_STBITE</code>	start bit error in the bus flag
<code>SDIO_FLAG_DTBanke_{ND}</code>	data block sent/received (CRC check passed) flag
<code>SDIO_FLAG_CMDRUN</code>	command transmission in progress flag
<code>SDIO_FLAG_TXRUN</code>	data transmission in progress flag
<code>SDIO_FLAG_RXRUN</code>	data reception in progress flag
<code>SDIO_FLAG_TFH</code>	transmit FIFO is half empty flag: at least 8 words can be written into the FIFO
<code>SDIO_FLAG_RFH</code>	receive FIFO is half full flag: at least 8 words can be read in the FIFO
<code>SDIO_FLAG_TFF</code>	transmit FIFO is full flag
<code>SDIO_FLAG_RFF</code>	receive FIFO is full flag
<code>SDIO_FLAG_TFE</code>	transmit FIFO is empty flag
<code>SDIO_FLAG_RFE</code>	receive FIFO is empty flag
<code>SDIO_FLAG_TXDTVAL</code>	data is valid in transmit FIFO flag
<code>SDIO_FLAG_RXDTVA_L</code>	data is valid in receive FIFO flag
<code>SDIO_FLAG_SDIOINT</code>	SD I/O interrupt received flag
<code>SDIO_FLAG_ATAEND</code>	CE-ATA command completion signal received (only for CMD61) flag
Output parameter{out}	
-	-
Return value	
<code>FlagStatus</code>	SET or RESET

Example:

```
/* get the flags state of SDIO */

FlagStatus flag_value;

flag_value = sdio_flag_get(SDIO_FLAG_RFH);
```

sdio_flag_clear

The description of `sdio_flag_clear` is shown as below:

Table 3-536. Function `sdio_flag_clear`

Function name	<code>sdio_flag_clear</code>
---------------	------------------------------

Function prototype	void sdio_flag_clear(uint32_t flag);
Function descriptions	clear the pending flags of SDIO
Precondition	-
The called functions	-
Input parameter{in}	
flag	flags state of SDIO
SDIO_FLAG_CCRCER <i>R</i>	command response received (CRC check failed) flag
SDIO_FLAG_DTCRCE <i>RR</i>	data block sent/received (CRC check failed) flag
SDIO_FLAG_CMDTMO <i>UT</i>	command response timeout flag
SDIO_FLAG_DTTMOU <i>T</i>	data timeout flag
SDIO_FLAG_TXURE	transmit FIFO underrun error occurs flag
SDIO_FLAG_RXORE	received FIFO overrun error occurs flag
SDIO_FLAG_CMDREC <i>V</i>	command response received (CRC check passed) flag
SDIO_FLAG_CMDSEN <i>D</i>	command sent (no response required) flag
SDIO_FLAG_DTEND	data end (data counter, SDIO_DA TACNT, is zero) flag
SDIO_FLAG_STBITE	start bit error in the bus flag
SDIO_FLAG_DTBKE <i>ND</i>	data block sent/received (CRC check passed) flag
SDIO_FLAG_SDIOINT	SD IO interrupt received flag
SDIO_FLAG_ATAEND	CE-ATA command completion signal received (only for CMD61) flag
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear the pending flags of SDIO */
sdio_flag_clear(SDIO_FLAG_DTCRCEERR);
```

sdio_interrupt_enable

The description of **sdio_interrupt_enable** is shown as below:

Table 3-537. Function `sdio_interrupt_enable`

Function name	<code>sdio_interrupt_enable</code>
Function prototype	<code>void sdio_interrupt_enable(uint32_t int_flag);</code>
Function descriptions	enable the SDIO interrupt

Precondition	-
The called functions	-
Input parameter{in}	
int_flag	interrupt flags state of SDIO
SDIO_INT_CCRCERR	SDIO CCRCERR interrupt
SDIO_INT_DTCRCKER <i>R</i>	SDIO DTCRCERR interrupt
SDIO_INT_CMDTMOU <i>T</i>	SDIO CMDTMOUT interrupt
SDIO_INT_DTTMOUT	SDIO DTTMOUT interrupt
SDIO_INT_TXURE	SDIO TXURE interrupt
SDIO_INT_RXORE	SDIO_INT_RXORE
SDIO_INT_CMDRECV	SDIO CMDRECV interrupt
SDIO_INT_CMDSEND	SDIO CMDSEND interrupt
SDIO_INT_DTEND	SDIO DTEND interrupt
SDIO_INT_STBITE	SDIO STBITE interrupt
SDIO_INT_DTBLKEND	SDIO DTBLKEND interrupt
SDIO_INT_CMDRUN	SDIO CMDRUN interrupt
SDIO_INT_TXRUN	SDIO TXRUN interrupt
SDIO_INT_RXRUN	SDIO RXRUN interrupt
SDIO_INT_TFH	SDIO TFH interrupt
SDIO_INT_RFH	SDIO RFH interrupt
SDIO_INT_TFF	SDIO TFF interrupt
SDIO_INT_RFF	SDIO RFF interrupt
SDIO_INT_TFE	SDIO TFE interrupt
SDIO_INT_RFE	SDIO RFE interrupt
SDIO_INT_TXDTVAL	SDIO TXDTVAL interrupt
SDIO_INT_RXDTVAL	SDIO RXDTVAL interrupt
SDIO_INT_SDIOINT	SDIO SDIOINT interrupt
SDIO_INT_ATAEND	SDIO ATAEND interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the SDIO corresponding interrupts */
```

```
sdio_interrupt_enable(SDIO_INT_CCRCERR | SDIO_INT_DTTMOUT | SDIO_INT_RXORE
| SDIO_INT_DTEND | SDIO_INT_STBITE);
```

sdio_interrupt_disable

The description of `sdio_interrupt_disable` is shown as below:

Table 3-538. Function `sdio_interrupt_disable`

Function name	<code>sdio_interrupt_disable</code>
Function prototype	<code>void sdio_interrupt_disable(uint32_t int_flag);</code>
Function descriptions	disable the SDIO interrupt
Precondition	-
The called functions	-
Input parameter{in}	
<code>int_flag</code>	interrupt flags state of SDIO
<code>SDIO_INT_CCRCERR</code>	SDIO CCRCERR interrupt
<code>SDIO_INT_DTCRCER_R</code>	SDIO DTCRCERR interrupt
<code>SDIO_INT_CMDTMOUT_T</code>	SDIO CMDTMOUT interrupt
<code>SDIO_INT_DTTMOUT</code>	SDIO DTTMOUT interrupt
<code>SDIO_INT_TXURE</code>	SDIO TXURE interrupt
<code>SDIO_INT_RXORE</code>	SDIO_INT_RXORE
<code>SDIO_INT_CMDRECV</code>	SDIO CMDRECV interrupt
<code>SDIO_INT_CMDSEND</code>	SDIO CMDSEND interrupt
<code>SDIO_INT_DTEND</code>	SDIO DTEND interrupt
<code>SDIO_INT_STBITE</code>	SDIO STBITE interrupt
<code>SDIO_INT_DTBLKEND</code>	SDIO DTBLKEND interrupt
<code>SDIO_INT_CMDRUN</code>	SDIO CMDRUN interrupt
<code>SDIO_INT_TXRUN</code>	SDIO TXRUN interrupt
<code>SDIO_INT_RXRUN</code>	SDIO RXRUN interrupt
<code>SDIO_INT_TFH</code>	SDIO TFH interrupt
<code>SDIO_INT_RFH</code>	SDIO RFH interrupt
<code>SDIO_INT_TFF</code>	SDIO TFF interrupt
<code>SDIO_INT_RFF</code>	SDIO RFF interrupt
<code>SDIO_INT_TFE</code>	SDIO TFE interrupt
<code>SDIO_INT_RFE</code>	SDIO RFE interrupt
<code>SDIO_INT_TXDTVAL</code>	SDIO TXDTVAL interrupt
<code>SDIO_INT_RXDTVAL</code>	SDIO RXDTVAL interrupt
<code>SDIO_INT_SDIONINT</code>	SDIO SDIONINT interrupt
<code>SDIO_INT_ATAEND</code>	SDIO ATAEND interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the SDIO interrupt */
sdio_interrupt_disable(SDIO_INT_DTCRCERR);
```

sdio_interrupt_flag_get

The description of sdio_interrupt_flag_get is shown as below:

Table 3-539. Function sdio_interrupt_flag_get

Function name	sdio_interrupt_flag_get
Function prototype	FlagStatus sdio_interrupt_flag_get(uint32_t int_flag);
Function descriptions	get the interrupt flags state of SDIO
Precondition	-
The called functions	-
Input parameter{in}	
int_flag	interrupt flags state of SDIO
<i>SDIO_INT_CCRCERR</i>	SDIO CCRCERR interrupt
<i>SDIO_INT_DTCRCER_R</i>	SDIO DTCRCERR interrupt
<i>SDIO_INT_CMDTMOU_T</i>	SDIO CMDTMOUT interrupt
<i>SDIO_INT_DTTMOUT</i>	SDIO DTTMOUT interrupt
<i>SDIO_INT_TXURE</i>	SDIO TXURE interrupt
<i>SDIO_INT_RXORE</i>	SDIO_INT_RXORE
<i>SDIO_INT_CMDRECV</i>	SDIO CMDRECV interrupt
<i>SDIO_INT_CMDSEND</i>	SDIO CMDSEND interrupt
<i>SDIO_INT_DTEND</i>	SDIO DTEND interrupt
<i>SDIO_INT_STBITE</i>	SDIO STBITE interrupt
<i>SDIO_INT_DTBLKEND</i>	SDIO DTBLKEND interrupt
<i>SDIO_INT_CMDRUN</i>	SDIO CMDRUN interrupt
<i>SDIO_INT_TXRUN</i>	SDIO TXRUN interrupt
<i>SDIO_INT_RXRUN</i>	SDIO RXRUN interrupt
<i>SDIO_INT_TFH</i>	SDIO TFH interrupt
<i>SDIO_INT_RFH</i>	SDIO RFH interrupt
<i>SDIO_INT_TFF</i>	SDIO TFF interrupt
<i>SDIO_INT_RFF</i>	SDIO RFF interrupt
<i>SDIO_INT_TFE</i>	SDIO TFE interrupt
<i>SDIO_INT_RFE</i>	SDIO RFE interrupt
<i>SDIO_INT_TXDTVAL</i>	SDIO TXDTVAL interrupt
<i>SDIO_INT_RXDTVAL</i>	SDIO RXDTVAL interrupt
<i>SDIO_INT_SDIOINT</i>	SDIO SDIOINT interrupt
<i>SDIO_INT_ATAEND</i>	SDIO ATAEND interrupt
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```

/* get the interrupt flags state of SDIO */

FlagStatus flag_value;

flag_value = sdio_interrupt_flag_get(SDIO_INT_FLAG_DTEND);
  
```

sdio_interrupt_flag_clear

The description of `sdio_interrupt_flag_clear` is shown as below:

Table 3-540. Function `sdio_interrupt_flag_clear`

Function name	sdio_interrupt_flag_clear
Function prototype	void sdio_interrupt_flag_clear(uint32_t int_flag);
Function descriptions	clear the interrupt pending flags of SDIO
Precondition	-
The called functions	-
Input parameter{in}	
<code>int_flag</code>	interrupt flags state of SDIO
<code>SDIO_INT_CCRCERR</code>	SDIO CCRCERR interrupt
<code>SDIO_INT_DTCRCER_R</code>	SDIO DTCRCERR interrupt
<code>SDIO_INT_CMDTMOUT_T</code>	SDIO CMDTMOUT interrupt
<code>SDIO_INT_DTTMOUT</code>	SDIO DTTMOUT interrupt
<code>SDIO_INT_TXURE</code>	SDIO TXURE interrupt
<code>SDIO_INT_RXORE</code>	SDIO_INT_RXORE
<code>SDIO_INT_CMDRECV</code>	SDIO CMDRECV interrupt
<code>SDIO_INT_CMDSEND</code>	SDIO CMDSEND interrupt
<code>SDIO_INT_DTEND</code>	SDIO DTEND interrupt
<code>SDIO_INT_STBITE</code>	SDIO STBITE interrupt
<code>SDIO_INT_DTBLKEND</code>	SDIO DTBLKEND interrupt
<code>SDIO_INT_SDIOINT</code>	SDIO SDIOINT interrupt
<code>SDIO_INT_ATAEND</code>	SDIO ATAEND interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* clear the interrupt pending flags of SDIO */

sdio_interrupt_flag_clear(SDIO_INT_DTEND);
  
```

sdio_readwait_enable

The description of `sdio_readwait_enable` is shown as below:

Table 3-541. Function sdio_readwait_enable

Function name	sdio_readwait_enable
Function prototype	void sdio_readwait_enable(void);
Function descriptions	enable the read wait mode(SD I/O only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the read wait mode(SD I/O only) */

sdio_readwait_enable();
```

sdio_readwait_disable

The description of sdio_readwait_disable is shown as below:

Table 3-542. Function sdio_readwait_disable

Function name	sdio_readwait_disable
Function prototype	void sdio_readwait_disable(void);
Function descriptions	disable the read wait mode(SD I/O only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the read wait mode(SD I/O only) */

sdio_readwait_disable();
```

sdio_stop_readwait_enable

The description of sdio_stop_readwait_enable is shown as below:

Table 3-543. Function sdio_stop_readwait_enable

Function name	sdio_stop_readwait_enable
----------------------	---------------------------

Function prototype	void sdio_stop_readw ait_enable(void);
Function descriptions	enable the function that stop the read wait process(SD I/O only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the function that stop the read wait process(SD I/O only) */
sdio_stop_readwait_enable();
```

sdio_stop_readwait_disable

The description of `sdio_stop_readwait_disable` is shown as below:

Table 3-544. Function `sdio_stop_readwait_disable`

Function name	sdio_stop_readw ait_disable
Function prototype	void sdio_stop_readw ait_disable(void);
Function descriptions	disable the function that stop the read wait process(SD I/O only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the function that stop the read wait process(SD I/O only) */
sdio_stop_readwait_disable();
```

sdio_readwait_type_set

The description of `sdio_readwait_type_set` is shown as below:

Table 3-545. Function `sdio_readwait_type_set`

Function name	sdio_readw ait_type_set
Function prototype	void sdio_readw ait_type_set(uint32_t readw ait_type);
Function descriptions	set the read wait type(SD I/O only)

Precondition	-
The called functions	-
Input parameter{in}	
readwait_type	SD I/O read wait type
SDIO_READWAITTYPE_CLK	read wait control by stopping SDIO_CLK
SDIO_READWAITTYPE_DAT2	read wait control using SDIO_DAT[2]
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set the read wait type(SD I/O only) */
sdio_readwait_type_set(SDIO_READWAITTYPE_CLK);
```

sdio_operation_enable

The description of `sdio_operation_enable` is shown as below:

Table 3-546. Function `sdio_operation_enable`

Function name	sdio_operation_enable
Function prototype	void sdio_operation_enable(void);
Function descriptions	enable the SD I/O mode specific operation(SD I/O only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the SD I/O mode specific operation(SD I/O only) */
sdio_operation_enable();
```

sdio_operation_disable

The description of `sdio_operation_disable` is shown as below:

Table 3-547. Function `sdio_operation_disable`

Function name	sdio_operation_disable
----------------------	------------------------

Function prototype	void sdio_operation_disable(void);
Function descriptions	disable the SD I/O mode specific operation(SD I/O only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the SD I/O mode specific operation(SD I/O only) */

void sdio_operation_disable();
```

sdio_suspend_enable

The description of `sdio_suspend_enable` is shown as below:

Table 3-548. Function `sdio_suspend_enable`

Function name	sdio_suspend_enable
Function prototype	void sdio_suspend_enable(void);
Function descriptions	enable the SD I/O suspend operation(SD I/O only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the SD I/O suspend operation(SD I/O only) */

sdio_suspend_enable();
```

sdio_suspend_disable

The description of `sdio_suspend_disable` is shown as below:

Table 3-549. Function `sdio_suspend_disable`

Function name	sdio_suspend_disable
Function prototype	void sdio_suspend_disable(void);
Function descriptions	disable the SD I/O suspend operation(SD I/O only)

Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the SD I/O suspend operation(SD I/O only) */

sdio_suspend_disable();
```

sdio_ceata_command_enable

The description of `sdio_ceata_command_enable` is shown as below:

Table 3-550. Function `sdio_ceata_command_enable`

Function name	sdio_ceata_command_enable
Function prototype	void sdio_ceata_command_enable(void);
Function descriptions	enable the CE-ATA command(CE-ATA only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the CE-ATA command(CE-ATA only) */

sdio_ceata_command_enable();
```

sdio_ceata_command_disable

The description of `sdio_ceata_command_disable` is shown as below:

Table 3-551. Function `sdio_ceata_command_disable`

Function name	sdio_ceata_command_disable
Function prototype	void sdio_ceata_command_disable(void);
Function descriptions	disable the CE-ATA command(CE-ATA only)
Precondition	-
The called functions	-

Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the CE-ATA command(CE-ATA only) */
```

```
sdio_ceata_command_disable();
```

sdio_ceata_interrupt_enable

The description of sdio_ceata_interrupt_enable is shown as below:

Table 3-552. Function sdio_ceata_interrupt_enable

Function name	sdio_ceata_interrupt_enable
Function prototype	void sdio_ceata_interrupt_enable(void);
Function descriptions	enable the CE-ATA interrupt(CE-ATA only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the CE-ATA interrupt(CE-ATA only) */
```

```
sdio_ceata_interrupt_enable();
```

sdio_ceata_interrupt_disable

The description of sdio_ceata_interrupt_disable is shown as below:

Table 3-553. Function sdio_ceata_interrupt_disable

Function name	sdio_ceata_interrupt_disable
Function prototype	void sdio_ceata_interrupt_disable(void);
Function descriptions	disable the CE-ATA interrupt(CE-ATA only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the CE-ATA interrupt(CE-ATA only) */

sdio_ceata_interrupt_disable();
```

sdio_ceata_command_completion_enable

The description of sdio_ceata_command_completion_enable is shown as below:

Table 3-554. Function sdio_ceata_command_completion_enable

Function name	sdio_ceata_command_completion_enable
Function prototype	void sdio_ceata_command_completion_enable(void);
Function descriptions	enable the CE-ATA command completion signal(CE-ATA only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the CE-ATA command completion signal(CE-ATA only) */

sdio_ceata_command_completion_enable();
```

sdio_ceata_command_completion_disable

The description of sdio_ceata_command_completion_disable is shown as below:

Table 3-555. Function sdio_ceata_command_completion_disable

Function name	sdio_ceata_command_completion_disable
Function prototype	void sdio_ceata_command_completion_disable(void);
Function descriptions	disable the CE-ATA command completion signal(CE-ATA only)
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* disable the CE-ATA command completion signal(CE-ATA only) */
sdio_ceata_command_completion_disable();
```

3.21. SPI

The SPI/I2S module can communicate with external devices using the SPI protocol or the I2S audio protocol. The SPI/I2S registers are listed in chapter [Q](#), the SPI/I2S firmware functions are introduced in chapter [Q](#).

3.21.1. Descriptions of Peripheral registers

SPI/I2S registers are listed in the table shown as below:

Table 3-556. SPI/I2S Registers

Registers	Descriptions
SPI_CTL0	SPI control register 0
SPI_CTL1	SPI control register 1
SPI_STAT	SPI status register
SPI_DATA	SPI data register
SPI_CRCPOLY	SPI CRC polynomial register
SPI_RCRC	SPI receive CRC register
SPI_TCRC	SPI transmit CRC register
SPI_I2SCTL	SPI/I2S control register
SPI_I2SPSC	SPI/I2S clock prescaler register

3.21.2. Descriptions of Peripheral functions

SPI/I2S firmware functions are listed in the table shown as below:

Table 3-557. SPI/I2S firmware function

Function name	Function description
spi_i2s_deinit	reset SPI and I2S
spi_struct_para_init	initialize the parameters of SPI structure with the default values
spi_init	initialize SPI parameters
spi_enable	enable SPI
spi_disable	disable SPI
i2s_init	initialize I2S parameter
i2s_psc_config	configure I2S prescaler

Function name	Function description
i2s_enable	enable I2S
i2s_disable	disable I2S
spi_nss_output_enable	enable SPI NSS output
spi_nss_output_disable	disable SPI NSS output
spi_nss_internal_high	SPI NSS pin high level in software mode
spi_nss_internal_low	SPI NSS pin low level in software mode
spi_dma_enable	enable SPI DMA send or receive
spi_dma_disable	disable SPI DMA send or receive
spi_i2s_data_frame_format_config	configure SPI data frame format
spi_bidirectional_transfer_config	configure SPI bidirectional transfer direction
spi_i2s_data_transmit	SPI transmit data
spi_i2s_data_receive	SPI receive data
spi_crc_polynomial_set	set SPI CRC polynomial
spi_crc_polynomial_get	get SPI CRC polynomial
spi_crc_on	turn on SPI CRC function
spi_crc_off	turn off SPI CRC function
spi_crc_next	SPI next data is CRC value
spi_crc_get	get SPI CRC send value or receive value
spi_i2s_flag_get	get SPI and I2S flag status
spi_i2s_interrupt_enable	enable SPI and I2S interrupt
spi_i2s_interrupt_disable	disable SPI and I2S interrupt
spi_i2s_interrupt_flag_get	get SPI and I2S interrupt status
spi_crc_error_clear	clear SPI CRC error flag status

Structure spi_parameter_struct

Table 3-558. spi_parameter_struct

Member name	Function description
device_mode	SPI master or slave (SPI_MASTER, SPI_SLAVE)
trans_mode	SPI transfer type (SPI_TRANSMODE_FULLDUPLEX, SPI_TRANSMODE_RECEIVEONLY, SPI_TRANSMODE_BDRECEIVE, SPI_TRANSMODE_BDTRANSMIT)
frame_size	SPI frame size (SPI_FRAMESIZE_16BIT, SPI_FRAMESIZE_8BIT)
nss	SPI NSS control by hardware or software (SPI_NSS_SOFT, SPI_NSS_HARD)
endian	SPI big endian or little endian (SPI_ENDIAN_MSB, SPI_ENDIAN_LSB)
clock_polarity_phase	SPI clock phase and polarity (SPI_CK_PL_LOW_PH_1EDGE, SPI_CK_PL_HIGH_PH_1EDGE, SPI_CK_PL_LOW_PH_2EDGE, SPI_CK_PL_HIGH_PH_2EDGE)

Member name	Function description
prescale	SPI prescale factor (SPI_PSC_n (n=2,4,8,16,32,64,128,256))

spi_i2s_deinit

The description of spi_i2s_deinit is shown as below:

Table 3-559. Function spi_i2s_deinit

Function name	spi_i2s_deinit
Function prototype	void spi_i2s_deinit(uint32_t spi_periph);
Function descriptions	reset SPI and I2S
Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
spi_periph	SPI/I2S peripheral
SPIx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset SPI0 */
spi_i2s_deinit(SPI0);
```

spi_struct_para_init

The description of spi_struct_para_init is shown as below:

Table 3-560. Function spi_struct_para_init

Function name	spi_struct_para_init				
Function prototype	void spi_struct_para_init(spi_parameter_struct* spi_struct);				
Function descriptions	initialize the parameters of SPI structure with the default values				
Precondition	-				
The called functions	-				
Input parameter{in}					
-	-				
Output parameter{out}					
spi_struct	SPI parameter struct, the structure members can refer to members of the structure 2s_deinit <table border="1" style="margin-top: 10px;"> <tr> <td>Function name</td> <td>spi_i2s_deinit</td> </tr> <tr> <td>Function prototype</td> <td>void spi_i2s_deinit(uint32_t spi_p</td> </tr> </table>	Function name	spi_i2s_deinit	Function prototype	void spi_i2s_deinit(uint32_t spi_p
Function name	spi_i2s_deinit				
Function prototype	void spi_i2s_deinit(uint32_t spi_p				

Return value	
-	-

Example:

```
/* initialize the parameters of SPI struct */

spi_parameter_struct spi_struct;
spi_struct_para_init(&spi_struct);
```

spi_init

The description of spi_init is shown as below:

Table 3-561. Function spi_init

Function name	spi_init	
Function prototype	void spi_init(uint32_t spi_periph, spi_parameter_struct* spi_struct);	
Function descriptions	initialize SPI parameters	
Precondition	-	
The called functions	-	
Input parameter{in}		
spi_periph	SPI peripheral	
SPIx	x=0,1,2	
Input parameter{in}		
spi_struct	SPI parameter initialization structure, the structure members can refer to members of the structure 2s_deinit	
	Function name	spi_i2s_deinit
	Function prototype	void spi_i2s_deinit(uint32_t spi_p
Output parameter{out}		
-	-	
Return value		
-	-	

Example:

```
/* initialize SPI0 */

spi_parameter_struct spi_init_struct;

spi_init_struct.trans_mode          = SPI_TRANSMODE_BDTRANSMIT;
spi_init_struct.device_mode         = SPI_MASTER;
spi_init_struct.frame_size         = SPI_FRAMESIZE_8BIT;
spi_init_struct.clock_polarity_phase = SPI_CK_PL_HIGH_PH_2EDGE;
spi_init_struct.nss                = SPI_NSS_SOFT;
```

```

spi_init_struct.prescale      = SPI_PSC_8;
spi_init_struct.endian       = SPI_ENDIAN_MSB;
spi_init(SPI0, &spi_init_struct);
  
```

spi_enable

The description of spi_enable is shown as below:

Table 3-562. Function spi_enable

Function name	spi_enable
Function prototype	void spi_enable(uint32_t spi_periph);
Function descriptions	enable SPI
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* enable SPI0 */

spi_enable(SPI0);
  
```

spi_disable

The description of spi_disable is shown as below:

Table 3-563. Function spi_disable

Function name	spi_disable
Function prototype	void spi_disable(uint32_t spi_periph);
Function descriptions	disable SPI
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable SPI0 */
```

```
spi_disable(SPI0);
```

i2s_init

The description of i2s_init is shown as below:

Table 3-564. Function i2s_init

Function name	i2s_init
Function prototype	void i2s_init(uint32_t spi_periph,uint32_t mode, uint32_t standard, uint32_t ckpl);
Function descriptions	initialize I2S parameters
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	I2S peripheral
SPIx	x=1,2
Input parameter{in}	
mode	I2S operation mode
<i>I2S_MODE_SLAVE TX</i>	I2S slave transmit mode
<i>I2S_MODE_SLAVE RX</i>	I2S slave receive mode
<i>I2S_MODE_MASTER TX</i>	I2S master transmit mode
<i>I2S_MODE_MASTER RX</i>	I2S master receive mode
Input parameter{in}	
standard	I2S standard
<i>I2S_STD_PHILLIPS</i>	I2S phillips standard
<i>I2S_STD_MSB</i>	I2S MSB standard
<i>I2S_STD_LSB</i>	I2S LSB standard
<i>I2S_STD_PCMSHORT</i>	I2S PCM short standard
<i>I2S_STD_PCMLONG</i>	I2S PCM long standard
Input parameter{in}	
ckpl	I2S idle state clock polarity
<i>I2S_CKPL_LOW</i>	I2S clock polarity low level
<i>I2S_CKPL_HIGH</i>	I2S clock polarity high level
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* initialize I2S1 */

i2s_init(SPI1, I2S_MODE_MASTERTX, I2S_STD_PHILLIPS, I2S_CKPL_LOW);

```

i2s_psc_config

The description of i2s_psc_config is shown as below:

Table 3-565. Function i2s_psc_config

Function name	i2s_psc_config
Function prototype	void i2s_psc_config(uint32_t spi_periph, uint32_t audiosample, uint32_t frameformat, uint32_t mckout);
Function descriptions	configure I2S prescaler
Precondition	-
The called functions	rcu_clock_freq_get
Input parameter{in}	
spi_periph	I2S peripheral
SPIx	x=1,2
Input parameter{in}	
audiosample	I2S audio sample rate
I2S_AUDIOSAMPLE_8K	audio sample rate is 8KHz
I2S_AUDIOSAMPLE_11K	audio sample rate is 11KHz
I2S_AUDIOSAMPLE_16K	audio sample rate is 16KHz
I2S_AUDIOSAMPLE_22K	audio sample rate is 22KHz
I2S_AUDIOSAMPLE_32K	audio sample rate is 32KHz
I2S_AUDIOSAMPLE_44K	audio sample rate is 44KHz
I2S_AUDIOSAMPLE_48K	audio sample rate is 48KHz
I2S_AUDIOSAMPLE_96K	audio sample rate is 96KHz
I2S_AUDIOSAMPLE_192K	audio sample rate is 192KHz
Input parameter{in}	
frameformat	I2S data length and channel length
I2S_FRAMEFORMAT_DT16B_CH16B	I2S data length is 16 bit and channel length is 16 bit
I2S_FRAMEFORMAT_DT16B_CH32B	I2S data length is 16 bit and channel length is 32 bit

<i>I2S_FRAMEFORMAT_DT24B_CH32B</i>	I2S data length is 24 bit and channel length is 32 bit
<i>I2S_FRAMEFORMAT_DT32B_CH32B</i>	I2S data length is 32 bit and channel length is 32 bit
Input parameter{in}	
mckout	I2S master clock output
<i>I2S_MCKOUT_ENABLE</i>	I2S master clock output enable
<i>I2S_MCKOUT_DISABLE</i>	I2S master clock output disable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure I2S1 prescaler */

i2s_psc_config(SPI1, I2S_AUDIOSAMPLE_44K, I2S_FRAMEFORMAT_DT16B_CH16B,
I2S_MCKOUT_DISABLE);
```

i2s_enable

The description of i2s_enable is shown as below:

Table 3-566. Function i2s_enable

Function name	i2s_enable
Function prototype	void i2s_enable(uint32_t spi_periph);
Function descriptions	enable I2S
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	I2S peripheral
SPIx	x=1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable I2S1*/

i2s_enable(SPI1);
```

i2s_disable

The description of i2s_disable is shown as below:

Table 3-567. Function i2s_disable

Function name	i2s_disable
Function prototype	void i2s_disable(uint32_t spi_periph);
Function descriptions	disable I2S
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	I2S peripheral
SPIx	x=1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable I2S1*/
i2s_disable(SPI1);
```

spi_nss_output_enable

The description of spi_nss_output_enable is shown as below:

Table 3-568. Function spi_nss_output_enable

Function name	spi_nss_output_enable
Function prototype	void spi_nss_output_enable(uint32_t spi_periph);
Function descriptions	enable SPI NSS output
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable SPI0 NSS output */
spi_nss_output_enable(SPI0);
```

spi_nss_output_disable

The description of `spi_nss_output_disable` is shown as below:

Table 3-569. Function `spi_nss_output_disable`

Function name	spi_nss_output_disable
Function prototype	void spi_nss_output_disable(uint32_t spi_periph);
Function descriptions	disable SPI NSS output
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable SPI0 NSS output */
spi_nss_output_disable(SPI0);
```

spi_nss_internal_high

The description of `spi_nss_internal_high` is shown as below:

Table 3-570. Function `spi_nss_internal_high`

Function name	spi_nss_internal_high
Function prototype	void spi_nss_internal_high(uint32_t spi_periph);
Function descriptions	SPI NSS pin high level in software mode
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* SPI0 NSS pin is pulled high level in software mode */
spi_nss_internal_high(SPI0);
```

spi_nss_internal_low

The description of `spi_nss_internal_low` is shown as below:

Table 3-571. Function `spi_nss_internal_low`

Function name	spi_nss_internal_low
Function prototype	void spi_nss_internal_low(uint32_t spi_periph);
Function descriptions	SPI NSS pin low level in software mode
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* SPI0 NSS pin is pulled low level in software mode */

spi_nss_internal_low(SPI0);
```

spi_dma_enable

The description of `spi_dma_enable` is shown as below:

Table 3-572. Function `spi_dma_enable`

Function name	spi_dma_enable
Function prototype	void spi_dma_enable(uint32_t spi_periph, uint8_t dma);
Function descriptions	enable SPI DMA send or receive
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Input parameter{in}	
dma	SPI DMA mode
SPI_DMA_TRANSMIT	SPI transmit data use DMA
SPI_DMA_RECEIVE	SPI receive data use DMA
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable SPI0 transmit data DMA function */

spi_dma_enable(SPI0, SPI_DMA_TRANSMIT);
```

spi_dma_disable

The description of `spi_dma_disable` is shown as below:

Table 3-573. Function `spi_dma_disable`

Function name	spi_dma_disable
Function prototype	void spi_dma_disable(uint32_t spi_periph, uint8_t dma);
Function descriptions	disable SPI DMA send or receive
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Input parameter{in}	
dma	SPI DMA mode
SPI_DMA_TRANSMIT	SPI transmit data use DMA
SPI_DMA_RECEIVE	SPI receive data use DMA
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable SPI0 transmit data DMA function */

spi_dma_disable(SPI0, SPI_DMA_TRANSMIT);
```

spi_i2s_data_frame_format_config

The description of `spi_i2s_data_frame_format_config` is shown as below:

Table 3-574. Function `spi_i2s_data_frame_format_config`

Function name	spi_i2s_data_frame_format_config
Function prototype	void spi_i2s_data_frame_format_config(uint32_t spi_periph, uint16_t frame_format);
Function descriptions	configure SPI data frame format
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI/I2S peripheral

SPIx	x=0,1,2
Input parameter{in}	
frame_format	SPI frame size
<i>SPI_FRAMESIZE_16BIT</i>	SPI frame size is 16 bits
<i>SPI_FRAMESIZE_8BIT</i>	SPI frame size is 8 bits
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure SPI1/I2S1 data frame format size is 16 bits */
spi_i2s_data_frame_format_config(SPI1, SPI_FRAMESIZE_16BIT);
```

spi_bidirectional_transfer_config

The description of spi_bidirectional_transfer_config is shown as below:

Table 3-575. Function spi_bidirectional_transfer_config

Function name	spi_bidirectional_transfer_config
Function prototype	void spi_bidirectional_transfer_config(uint32_t spi_periph, uint32_t transfer_direction);
Function descriptions	configure SPI bidirectional transfer direction
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Input parameter{in}	
transfer_direction	SPI transfer direction
<i>SPI_BIDIRECTIONAL_TRANSMIT</i>	SPI work in transmit-only mode
<i>SPI_BIDIRECTIONAL_RECEIVE</i>	SPI work in receive-only mode
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* SPI0 works in transmit-only mode */
spi_bidirectional_transfer_config(SPI0, SPI_BIDIRECTIONAL_TRANSMIT);
```

spi_i2s_data_transmit

The description of `spi_i2s_data_transmit` is shown as below:

Table 3-576. Function `spi_i2s_data_transmit`

Function name	spi_i2s_data_transmit
Function prototype	<code>void spi_i2s_data_transmit(uint32_t spi_periph, uint16_t data);</code>
Function descriptions	SPI transmit data
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI/I2S peripheral
<i>SPIx</i>	x=0,1,2
Input parameter{in}	
data	16-bit data
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
uint16_t spi0_send_data = 0xAA;:  
/* SPI0 transmit data */  
  
spi_i2s_data_transmit(SPI0, spi0_send_data);
```

spi_i2s_data_receive

The description of `spi_i2s_data_receive` is shown as below:

Table 3-577. Function `spi_i2s_data_receive`

Function name	spi_i2s_data_receive
Function prototype	<code>uint16_t spi_i2s_data_receive(uint32_t spi_periph);</code>
Function descriptions	SPI receive data
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI/I2S peripheral
<i>SPIx</i>	x=0,1,2
Output parameter{out}	
-	-
Return value	
uint16_t	16-bit data

Example:

```

  uint16_t spi0_receive_data;
  /* SPI0 receive data */
  spi0_receive_data = spi_i2s_data_receive(SPI0);

```

spi_crc_polynomial_set

The description of `spi_crc_polynomial_set` is shown as below:

Table 3-578. Function `spi_crc_polynomial_set`

Function name	spi_crc_polynomial_set
Function prototype	void spi_crc_polynomial_set(uint32_t spi_periph, uint16_t crc_poly);
Function descriptions	set SPI CRC polynomial
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
<i>SPIx</i>	x=0,1,2
Input parameter{in}	
crc_poly	CRC polynomial value
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* set SPI0 CRC polynomial */
spi_crc_polynomial_set(SPI0,CRC_VALUE);

```

spi_crc_polynomial_get

The description of `spi_crc_polynomial_get` is shown as below:

Table 3-579. Function `spi_crc_polynomial_get`

Function name	spi_crc_polynomial_get
Function prototype	uint16_t spi_crc_polynomial_get(uint32_t spi_periph);
Function descriptions	get SPI CRC polynomial
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
<i>SPIx</i>	x=0,1,2
Output parameter{out}	
-	-

Return value	
uint16_t	16-bit CRC polynomial (0-0xFFFF)

Example:

```
uint16_t crc_data;  
  
/* get SPI0 CRC polynomial */  
  
crc_data = spi_crc_polynomial_get(SPI0);
```

spi_crc_on

The description of `spi_crc_on` is shown as below:

Table 3-580. Function `spi_crc_on`

Function name	spi_crc_on
Function prototype	void spi_crc_on(uint32_t spi_periph);
Function descriptions	turn on SPI CRC function
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
<i>SPIx</i>	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* turn on SPI0 CRC function */  
  
spi_crc_on(SPI0);
```

spi_crc_off

The description of `spi_crc_off` is shown as below:

Table 3-581. Function `spi_crc_off`

Function name	spi_crc_off
Function prototype	void spi_crc_off(uint32_t spi_periph);
Function descriptions	turn off SPI CRC function
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
<i>SPIx</i>	x=0,1,2

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* turn off SPI0 CRC function */

spi_crc_off(SPI0);
```

spi_crc_next

The description of spi_crc_next is shown as below:

Table 3-582. Function spi_crc_next

Function name	spi_crc_next
Function prototype	void spi_crc_next(uint32_t spi_periph);
Function descriptions	SPI next data is CRC value
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* SPI0 next data is CRC value */

spi_crc_next(SPI0);
```

spi_crc_get

The description of spi_crc_get is shown as below:

Table 3-583. Function spi_crc_get

Function name	spi_crc_get
Function prototype	uint16_t spi_crc_get(uint32_t spi_periph, uint8_t crc);
Function descriptions	get SPI CRC send value or receive value
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2

Input parameter{in}	
crc	SPI crc value
SPI_CRC_TX	get transmit crc value
SPI_CRC_RX	get receive crc value
Output parameter{out}	
-	-
Return value	
uint16_t	16-bit CRC value (0-0xFFFF)

Example:

```
uint16_t crc_value;
/* get SPI0 CRC send value */
crc_value = spi_crc_get(SPI0, SPI_CRC_TX);
```

spi_i2s_flag_get

The description of `spi_i2s_flag_get` is shown as below:

Table 3-584. Function `spi_i2s_flag_get`

Function name	spi_i2s_flag_get
Function prototype	FlagStatus spi_i2s_flag_get(uint32_t spi_periph, uint32_t flag);
Function descriptions	get SPI and I2S flag status
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI/I2S peripheral
SPIx	x=0,1,2
Input parameter{in}	
flag	SPI/I2S flag status
SPI_FLAG_TBE	transmit buffer empty flag
SPI_FLAG_RBNE	receive buffer not empty flag
SPI_FLAG_TRANS	transmit on-going flag
SPI_I2S_INT_FLAG_R_XORERR	receive overrun error flag
SPI_FLAG_CONFERR	mode config error flag
SPI_FLAG_CRCERR	CRC error flag
I2S_FLAG_RXVERR	overrun error flag
I2S_FLAG_TXURERR	underrun error flag
I2S_FLAG_CH	channel side flag
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```

/* get SPI0 transmit buffer empty flag status */

FlagStatus Flag = RESET;

Flag = spi_i2s_flag_get(SPI0, SPI_FLAG_TBE);
  
```

spi_i2s_interrupt_enable

The description of `spi_i2s_interrupt_enable` is shown as below:

Table 3-585. Function `spi_i2s_interrupt_enable`

Function name	spi_i2s_interrupt_enable
Function prototype	void spi_i2s_interrupt_enable(uint32_t spi_periph, uint8_t interrupt);
Function descriptions	enable SPI and I2S interrupt
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI/I2S peripheral
SPIx	x=0,1,2
Input parameter{in}	
interrupt	SPI/I2S interrupt
SPI_I2S_INT_TBE	transmit buffer empty interrupt
SPI_I2S_INT_RBNE	receive buffer not empty interrupt
SPI_I2S_INT_ERR	CRC error,configuration error,reception overrun error, transmission underrun error and format error interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* enable SPI0 transmit buffer empty interrupt */

spi_i2s_interrupt_enable(SPI0, SPI_I2S_INT_TBE);
  
```

spi_i2s_interrupt_disable

The description of `spi_i2s_interrupt_disable` is shown as below:

Table 3-586. Function `spi_i2s_interrupt_disable`

Function name	spi_i2s_interrupt_disable
Function prototype	void spi_i2s_interrupt_disable(uint32_t spi_periph, uint8_t interrupt);
Function descriptions	disable SPI and I2S interrupt

Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI/I2S peripheral
SPIx	x=0,1,2
Input parameter{in}	
interrupt	SPI/I2S interrupt
SPI_I2S_INT_TBE	transmit buffer empty interrupt
SPI_I2S_INT_RBNE	receive buffer not empty interrupt
SPI_I2S_INT_ERR	CRC error,configuration error,reception overrun error, transmission underrun error and format error interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable SPI0 transmit buffer empty interrupt */
spi_i2s_interrupt_disable(SPI0, SPI_I2S_INT_TBE);
```

spi_i2s_interrupt_flag_get

The description of spi_i2s_interrupt_flag_get is shown as below:

Table 3-587. Function spi_i2s_interrupt_flag_get

Function name	spi_i2s_interrupt_flag_get
Function prototype	FlagStatus spi_i2s_interrupt_flag_get(uint32_t spi_periph, uint8_t interrupt);
Function descriptions	get SPI and I2S interrupt status
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI/I2S peripheral
SPIx	x=0,1,2
Input parameter{in}	
interrupt	SPI/I2S interrupt flag status
SPI_I2S_INT_FLAG_T BE	transmit buffer empty interrupt
SPI_I2S_INT_FLAG_R BNE	receive buffer not empty interrupt
SPI_I2S_INT_FLAG_R XORERR	overrun interrupt
SPI_INT_FLAG_CONF ERR	config error interrupt

SPI_INT_FLAG_CRCE RR	CRC error interrupt
I2S_INT_FLAG_TXUR ERR	underrun error interrupt
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get SPI0 transmit buffer empty interrupt status */
FlagStatus Flag_interrupt = RESET;
Flag_interrupt = spi_i2s_interrupt_flag_get(SPI0, SPI_I2S_INT_FLAG_TBE);
```

spi_crc_error_clear

The description of `spi_crc_error_clear` is shown as below:

Table 3-588. Function `spi_crc_error_clear`

Function name	spi_crc_error_clear
Function prototype	void spi_crc_error_clear(uint32_t spi_periph);
Function descriptions	clear SPI CRC error flag status
Precondition	-
The called functions	-
Input parameter{in}	
spi_periph	SPI peripheral
SPIx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear SPI0 CRC error flag status */
spi_crc_error_clear(SPI0);
```

3.22. TIMER

The timers have a 16-bit counter that can be used as an unsigned counter and supports both input capture and output compare. Timers (TIMERx) are divided into five sorts: advanced timer (TIMERx, x=0, 7), general level0 timer (TIMERx, x=1, 2, 3, 4), general level1 timer (TIMERx, x=8, 11), general level2 timer (TIMERx, x=9, 10, 12, 13), Basic timer (TIMERx, x=5,

6). The specific functions of different types of timer are different. The TIMER registers are listed in chapter [9](#), the TIMER firmware functions are introduced in chapter [9](#).

3.22.1. Descriptions of Peripheral registers

TIMERx registers are listed in the table shown as below:

Table 3-589. TIMERx Registers

Registers	Descriptions
TIMER_CTL0	Control register 0
TIMER_CTL1	Control register 1
TIMER_SMCFG	Slave mode configuration register
TIMER_DMAMINTEN	DMA and interrupt enable register
TIMER_INTF	Interrupt flag register
TIMER_SWEVG	Software event generation register
TIMER_CHCTL0	Channel control register 0
TIMER_CHCTL1	Channel control register 1
TIMER_CHCTL2	Channel control register 2
TIMER_CNT	Counter register
TIMER_PSC	Prescaler register
TIMER_CAR	Counter auto reload register
TIMER_CREP	Counter repetition register
TIMER_CH0CV	Channel 0 capture/compare value register
TIMER_CH1CV	Channel 1 capture/compare value register
TIMER_CH2CV	Channel 2 capture/compare value register
TIMER_CH3CV	Channel 3 capture/compare value register
TIMER_CCHP	Channel complementary protection register
TIMER_DMACFG	DMA configuration register
TIMER_DMATB	DMA transfer buffer register

3.22.2. Descriptions of Peripheral functions

The description format of firmware functions are shown as below:

Table 3-590. TIMERx firmware function

Function name	Function description
timer_deinit	deinit a TIMER
timer_struct_para_init	initialize TIMER init parameter struct
timer_init	initialize TIMER counterx
timer_enable	enable a TIMER
timer_disable	disable a TIMER
timer_auto_reload_shadow_enable	enable the auto reload shadow function
timer_auto_reload_shadow_disable	disable the auto reload shadow function
timer_update_event_enable	enable the update event

Function name	Function description
timer_update_event_disable	disable the update event
timer_counter_alignment	set TIMER counter alignment mode
timer_counter_up_direction	set TIMER counter up direction
timer_counter_down_direction	set TIMER counter down direction
timer_prescaler_config	configure TIMER prescaler
timer_repetition_value_config	configure TIMER repetition register value
timer_autoreload_value_config	configure TIMER autoreload register value
timer_counter_value_config	configure TIMER counter register value
timer_counter_read	read TIMER counter value
timer_prescaler_read	read TIMER prescaler value
timer_single_pulse_mode_config	configure TIMER single pulse mode
timer_update_source_config	configure TIMER update source
timer_dma_enable	enable the TIMER DMA
timer_dma_disable	disable the TIMER DMA
timer_channel_dma_request_source_select	channel DMA request source selection
timer_dma_transfer_config	configure the TIMER DMA transfer
timer_event_software_generate	software generate events
timer_break_struct_para_init	initialize TIMER break parameter struct
timer_break_config	configure TIMER break function
timer_break_enable	enable TIMER break function
timer_break_disable	disable TIMER break function
timer_automatic_output_enable	enable TIMER output automatic function
timer_automatic_output_disable	disable TIMER output automatic function
timer_primary_output_config	enable or disable TIMER primary output function
timer_channel_control_shadow_configure	enable or disable channel capture/compare control shadow register
timer_channel_control_shadow_update_config	configure TIMER channel control shadow register update control
timer_channel_output_struct_para_init	initialize TIMER channel output parameter struct
timer_channel_output_config	configure TIMER channel output function
timer_channel_output_mode_config	configure TIMER channel output compare mode
timer_channel_output_pulse_value_config	configure TIMER channel output pulse value
timer_channel_output_shadow_config	configure TIMER channel output shadow function
timer_channel_output_fast_config	configure TIMER channel output fast function
timer_channel_output_clear_config	configure TIMER channel output clear function
timer_channel_output_polarity_config	configure TIMER channel output polarity
timer_channel_complementary_out	configure TIMER channel complementary output polarity

Function name	Function description
put_polarity_config	
timer_channel_output_state_config	configure TIMER channel enable state
timer_channel_complementary_out_put_state_config	configure TIMER channel complementary output enable state
timer_channel_input_struct_para_init	initialize TIMER channel input parameter struct
timer_input_capture_config	configure TIMER input capture parameter
timer_channel_input_capture_prescaler_config	configure TIMER channel input capture prescaler value
timer_channel_capture_value_register_read	read TIMER channel capture compare register value
timer_input_pwm_capture_config	configure TIMER input pwm capture function
timer_hall_mode_config	configure TIMER hall sensor mode
timer_input_trigger_source_select	select TIMER input trigger source
timer_master_output_trigger_source_select	select TIMER master mode output trigger source
timer_slave_mode_select	select TIMER slave mode
timer_master_slave_mode_config	configure TIMER master slave mode
timer_external_trigger_config	configure TIMER external trigger input
timer_quadrature_decoder_mode_config	configure TIMER quadrature decoder mode
timer_internal_clock_config	configure TIMER internal clock mode
timer_internal_trigger_as_external_clock_config	configure TIMER the internal trigger as external clock input
timer_external_trigger_as_external_clock_config	configure TIMER the external trigger as external clock input
timer_external_clock_mode0_config	configure TIMER the external clock mode 0
timer_external_clock_mode1_config	configure TIMER the external clock mode 1
timer_external_clock_mode1_disable	disable TIMER the external clock mode 1
timer_interrupt_enable	enable the TIMER interrupt
timer_interrupt_disable	disable the TIMER interrupt
timer_interrupt_flag_get	get timer interrupt flag
timer_interrupt_flag_clear	clear TIMER interrupt flag
timer_flag_get	get TIMER flags
timer_flag_clear	clear TIMER flags

Structure timer_parameter_struct

Table 3-591. Structure timer_parameter_struct

Member name	Function description
prescaler	prescaler value (0~65535)

Member name	Function description
alignedmode	aligned mode (TIMER_COUNTER_EDGE,TIMER_COUNTER_CENTER_DOWN,TIMER_COUNTER_CENTER_UP,TIMER_COUNTER_CENTER_BOTH)
counterdirection	counter direction (TIMER_COUNTER_UP,TIMER_COUNTER_DOWN)
period	period value (0~65535)
clockdivision	clock division value (TIMER_CKDIV_DIV1,TIMER_CKDIV_DIV2,TIMER_CKDIV_DIV4)
repetitioncounter	the counter repetition value (0~255)

Structure timer_break_parameter_struct

Table 3-592. Structure timer_break_parameter_struct

Member name	Function description
runoffstate	run mode off-state (TIMER_ROS_STATE_ENABLE,TIMER_ROS_STATE_DISABLE)
ideloffstate	idle mode off-state (TIMER_IOS_STATE_ENABLE,TIMER_IOS_STATE_DISABLE)
deadtime	dead time (0~255)
breakpolarity	break polarity (TIMER_BREAK_POLARITY_LOW,TIMER_BREAK_POLARITY_HIGH)
outputautostate	output automatic enable (TIMER_OUTAUTO_ENABLE,TIMER_OUTAUTO_DISABLE)
protectmode	complementary register protect control (TIMER_CCHP_PROT_OFF,TIMER_CCHP_PROT_0,TIMER_CCHP_PROT_1,TIMER_CCHP_PROT_2)
breakstate	break enable (TIMER_BREAK_ENABLE,TIMER_BREAK_DISABLE)

Structure timer_oc_parameter_struct

Table 3-593. Structure timer_oc_parameter_struct

Member name	Function description
outputstate	channel output state (TIMER_CCX_ENABLE,TIMER_CCX_DISABLE)
outputnstate	channel complementary output state (TIMER_CCXN_ENABLE,TIMER_CCXN_DISABLE)
ocpolarity	channel output polarity (TIMER_OC_POLARITY_HIGH,TIMER_OC_POLARITY_LOW)
ocnpolarity	channel complementary output polarity (TIMER_OCN_POLARITY_HIGH,TIMER_OCN_POLARITY_LOW)
ocidlestate	idle state of channel output (TIMER_OC_IDLE_STATE_LOW,TIMER_OC_IDLE_STATE_HIGH)
ocnidlestate	idle state of channel complementary output (TIMER_OCN_IDLE_STATE_LOW,TIMER_OCN_IDLE_STATE_HIGH)

Structure timer_ic_parameter_struct

Table 3-594. Structure timer_ic_parameter_struct

Member name	Function description
icpolarity	channel input polarity (TIMER_IC_POLARITY_RISING,TIMER_IC_POLARITY_FALLING)
icselection	channel input mode selection (TIMER_IC_SELECTION_DIRECTTI,TIMER_IC_SELECTION_INDIRECTTI, TIMER_IC_SELECTION_ITS)
icprescaler	channel input capture prescaler (TIMER_IC_PSC_DIV1,TIMER_IC_PSC_DIV2,TIMER_IC_PSC_DIV4,TIMER _IC_PSC_DIV8)
icfilter	channel input capture filter control (0~15)

timer_deinit

The description of timer_deinit is shown as below:

Table 3-595. Function timer_deinit

Function name	timer_deinit
Function prototype	void timer_deinit(uint32_t timer_periph);
Function descriptions	deinit a TIMER
Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..13)	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset TIMER0 */
timer_deinit (TIMER0);
```

timer_struct_para_init

The description of timer_struct_para_init is shown as below:

Table 3-596. Function timer_struct_para_init

Function name	timer_struct_para_init
Function prototype	void timer_struct_para_init(timer_parameter_struct* initpara);
Function descriptions	initialize TIMER init parameter struct with a default value

Precondition	-	
The called functions	-	
Input parameter{in}		
initpara	init parameter struct, the structure members can refer to	
	deadtime	dead time (0~255)
	breakpolarity	break polarity (TIMER_BREAK_POLARITY_LOW, TIMER_BREAK_POLARITY_HIGH)
Output parameter{out}		
-	-	-
Return value		
-	-	-

Example:

```

/* initialize the TIMER structure */

timer_parameter_struct initpara;

initpara->prescaler = 0U;

initpara->alignedmode = TIMER_COUNTER_EDGE;

initpara->counterdirection = TIMER_COUNTER_UP;

initpara->period = 65535U;

initpara->clockdivision = TIMER_CKDIV_DIV1;

initpara->repetitioncounter = 0U;

timer_struct_para_init(&initpara);
  
```

timer_init

The description of timer_init is shown as below:

Table 3-597. Function timer_init

Function name	timer_init	
Function prototype	void timer_init(uint32_t timer_periph, timer_parameter_struct* initpara);	
Function descriptions	initialize TIMER counter	
Precondition	-	
The called functions	-	
Input parameter{in}		
timer_periph	TIMER peripheral	
TIMERx(x=0..13)	TIMER peripheral selection	
Input parameter{in}		
initpara	TIMER init parameter struct, the structure members can refer to	
	deadtime	dead time (0~255)

		breakpolarity	break polarity (TIMER_BREAK_POLARITY_LOW, TIMER_BREAK_POLARITY_HIGH)
Output parameter{out}			
-		-	-
Return value			
-		-	-

Example:

```
/* initialize TIMER0 */

timer_parameter_struct timer_initpara;

timer_initpara.prescaler = 107;

timer_initpara.alignedmode = TIMER_COUNTER_EDGE;

timer_initpara.counterdirection = TIMER_COUNTER_UP;

timer_initpara.period = 999;

timer_initpara.clockdivision = TIMER_CKDIV_DIV1;

timer_initpara.repetitioncounter = 1;

timer_init(TIMER0,&timer_initpara);
```

timer_enable

The description of timer_enable is shown as below:

Table 3-598. Function timer_enable

Function name	timer_enable
Function prototype	void timer_enable(uint32_t timer_periph);
Function descriptions	enable a TIMER
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable TIMER0 */

timer_enable (TIMER0);
```

timer_disable

The description of timer_disable is shown as below:

Table 3-599. Function timer_disable

Function name	timer_disable
Function prototype	void timer_disable(uint32_t timer_periph);
Function descriptions	disable a TIMER
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable TIMER0 */
```

```
timer_disable (TIMER0);
```

timer_auto_reload_shadow_enable

The description of timer_auto_reload_shadow_enable is shown as below:

Table 3-600. Function timer_auto_reload_shadow_enable

Function name	timer_auto_reload_shadow_enable
Function prototype	void timer_auto_reload_shadow_enable(uint32_t timer_periph);
Function descriptions	enable the auto reload shadow function
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the TIMER0 auto reload shadow function */
```

```
timer_auto_reload_shadow_enable (TIMER0);
```

timer_auto_reload_shadow_disable

The description of timer_auto_reload_shadow_disable is shown as below:

Table 3-601. Function timer_auto_reload_shadow_disable

Function name	timer_auto_reload_shadow_disable
Function prototype	void timer_auto_reload_shadow_disable (uint32_t timer_periph);
Function descriptions	disable the auto reload shadow function
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the TIMER0 auto reload shadow function */
timer_auto_reload_shadow_disable (TIMER0);
```

timer_update_event_enable

The description of timer_update_event_enable is shown as below:

Table 3-602. Function timer_update_event_enable

Function name	timer_update_event_enable
Function prototype	void timer_update_event_enable(uint32_t timer_periph);
Function descriptions	enable the update event
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable TIMER0 the update event */
timer_update_event_enable(TIMER0);
```

timer_update_event_disable

The description of timer_update_event_disable is shown as below:

Table 3-603. Function timer_update_event_disable

Function name	timer_update_event_disable
Function prototype	void timer_update_event_disable (uint32_t timer_periph);
Function descriptions	disable the update event
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable TIMER0 the update event */

timer_update_event_disable(TIMER0);
```

timer_counter_alignment

The description of timer_counter_alignment is shown as below:

Table 3-604. Function timer_counter_alignment

Function name	timer_counter_alignment
Function prototype	void timer_counter_alignment(uint32_t timer_periph, uint16_t aligned);
Function descriptions	set TIMER counter alignment mode
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..4,7..13)</i>	TIMER peripheral selection
Input parameter{in}	
aligned	alignment mode
<i>TIMER_COUNTER_ED</i>	No center-aligned mode (edge-aligned mode). The direction of the counter is specified by the DIR bit.
<i>TIMER_COUNTER_CE</i>	Center-aligned and counting down assert mode. The counter counts under center aligned and channel is configured in output mode (CHxMS=00 in TIMERx_CHCTL0register). Only when the counter is counting down, compare interrupt flag of channels can be set.
<i>TIMER_COUNTER_UP</i>	Center-aligned and counting up assert mode. The counter counts under

<i>NTER_UP</i>	center aligned and channel is configured in output mode (CHxMS=00 in TIMERx_CHCTL0register). Only when the counter is counting up, compare interrupt flag of channels can be set.
<i>TIMER_COUNTER_CE</i> <i>NTER_BOTH</i>	Center-aligned and counting up/down assert mode. The counter counts under center-aligned and channel is configured in output mode (CHxMS=00 in TIMERx_CHCTL0 register). Both when the counter is counting up and counting down, compare interrupt flag of channels can be set.
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set TIMER0 counter center-aligned and counting up assert mode */

timer_counter_alignment(TIMER0,TIMER_COUNTER_CENTER_UP);
```

timer_counter_up_direction

The description of timer_counter_up_direction is shown as below:

Table 3-605. Function timer_counter_up_direction

Function name	timer_counter_up_direction
Function prototype	void timer_counter_up_direction(uint32_t timer_periph);
Function descriptions	set TIMER counter up direction
Precondition	set TIMER counter no center-aligned mode (edge-aligned mode)
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..4,7..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set TIMER0 counter up direction */

timer_counter_up_direction(TIMER0);
```

timer_counter_down_direction

The description of timer_counter_down_direction is shown as below:

Table 3-606. timer_counter_down_direction

Function name	timer_counter_down_direction
----------------------	------------------------------

Function prototype	void timer_counter_down_direction(uint32_t timer_periph);
Function descriptions	set TIMER counter down direction
Precondition	set TIMER counter no center-aligned mode (edge-aligned mode)
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..4,7..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* set TIMER0 counterdown direction */
timer_counter_down_direction(TIMER0);
```

timer_prescaler_config

The description of timer_prescaler_config is shown as below:

Table 3-607. Function timer_prescaler_config

Function name	timer_prescaler_config
Function prototype	void timer_prescaler_config(uint32_t timer_periph, uint16_t prescaler, uint8_t pscreload);
Function descriptions	configure TIMER prescaler
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Input parameter{in}	
prescaler	prescaler value(0~65535)
Input parameter{in}	
pscreload	prescaler reload mode
<i>TIMER_PSC_RELOAD_NOW</i>	the prescaler is loaded right now
<i>TIMER_PSC_RELOAD_UPDATE</i>	the prescaler is loaded at the next update event
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure TIMER0 prescaler */

timer_prescaler_config(TIMER0, 3000, TIMER_PSC_RELOAD_NOW);

```

timer_repetition_value_config

The description of timer_repetition_value_config is shown as below:

Table 3-608. Function timer_repetition_value_config

Function name	timer_repetition_value_config
Function prototype	void timer_repetition_value_config(uint32_t timer_periph, uint8_t repetition);
Function descriptions	configure TIMER repetition register value
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..7)	TIMER peripheral selection
Input parameter{in}	
repetition	the counter repetition value(0~255)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure TIMER0 repetition register value */

timer_repetition_value_config(TIMER0, 98);

```

timer_autoreload_value_config

The description of timer_autoreload_value_config is shown as below:

Table 3-609. Function timer_autoreload_value_config

Function name	timer_autoreload_value_config
Function prototype	void timer_autoreload_value_config(uint32_t timer_periph, uint32_t autoreload);
Function descriptions	configure TIMER autoreload register value
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..13)	TIMER peripheral selection
Input parameter{in}	
autoreload	the counter auto-reload value
Output parameter{out}	

-	-	-
Return value		
-	-	-

Example:

```
/* configure TIMER autoreload register value */
timer_autoreload_value_config(TIMER0,3000);
```

timer_counter_value_config

The description of timer_counter_value_config is shown as below:

Table 3-610. Function timer_counter_value_config

Function name	timer_counter_value_config
Function prototype	void timer_counter_value_config(uint32_t timer_periph, uint32_t counter);
Function descriptions	configure TIMER counter register value
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..13)	TIMER peripheral selection
Input parameter{in}	
counter	the counter value
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 counter register value */
timer_counter_value_config(TIMER0);
```

timer_counter_read

The description of timer_counter_read is shown as below:

Table 3-611. Function timer_counter_read

Function name	timer_counter_read
Function prototype	uint32_t timer_counter_read(uint32_t timer_periph);
Function descriptions	read TIMER counter value
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral

<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
<i>uint16_t</i>	counter value(0x0000~0xFFFF)

Example:

```
/* read TIMER0 counter value */

uint32_t i = 0;

i = timer_counter_read(TIMER0);
```

timer_prescaler_read

The description of timer_prescaler_read is shown as below:

Table 3-612. Function timer_prescaler_read

Function name	timer_prescaler_read
Function prototype	<i>uint16_t timer_prescaler_read(uint32_t timer_periph);</i>
Function descriptions	read TIMER prescaler value
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
<i>uint16_t</i>	prescaler register value(0x0000~0xFFFF)

Example:

```
/* read TIMER0 prescaler value */

uint16_t i = 0;

i = timer_prescaler_read(TIMER0);
```

timer_single_pulse_mode_config

The description of timer_single_pulse_mode_config is shown as below:

Table 3-613. Function timer_single_pulse_mode_config

Function name	timer_single_pulse_mode_config
Function prototype	<i>void timer_single_pulse_mode_config(uint32_t timer_periph, uint8_t spmode);</i>
Function descriptions	configure TIMER single pulse mode

Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..8,11)</i>	TIMER peripheral selection
Input parameter{in}	
spmode	pulse mode
<i>TIMER_SP_MODE_SIN GLE</i>	single pulse mode
<i>TIMER_SP_MODE_RE PETITIVE</i>	repetitive pulse mode
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 single pulse mode */
timer_single_pulse_mode_config(TIMER0, TIMER_SP_MODE_SINGLE);
```

timer_update_source_config

The description of **timer_update_source_config** is shown as below:

Table 3-614. Function timer_update_source_config

Function name	timer_update_source_config
Function prototype	void timer_update_source_config(uint32_t timer_periph, uint8_t update);
Function descriptions	configure TIMER update source
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..13)</i>	TIMER peripheral selection
Input parameter{in}	
update	update source
<i>TIMER_UPDATE_SRC_GLOBAL</i>	Any of the following events generate an update interrupt or DMA request: - The UPG bit is set - The counter generates an overflow or underflow event - The slave mode controller generates an update event
<i>TIMER_UPDATE_SRC_REGULAR</i>	Only counter overflow/underflow generates an update interrupt or DMA request.
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* configure TIMER update only by counter overflow/underflow */

timer_update_source_config(TIMER0, TIMER_UPDATE_SRC_REGULAR);
```

timer_dma_enable

The description of timer_dma_enable is shown as below:

Table 3-615. Function timer_dma_enable

Function name	timer_dma_enable
Function prototype	void timer_dma_enable(uint32_t timer_periph, uint16_t dma);
Function descriptions	enable the TIMER DMA
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
dma	timer DMA source enable
TIMER_DMA_UPD	update DMA enable,TIMERx(x=0..7)
TIMER_DMA_CH0D	channel 0 DMA enable,TIMERx(x=0..4,7)
TIMER_DMA_CH1D	channel 1 DMA enable,TIMERx(x=0..4,7)
TIMER_DMA_CH2D	channel 2 DMA enable,TIMERx(x=0..4,7)
TIMER_DMA_CH3D	channel 3 DMA enable,TIMERx(x=0..4,7)
TIMER_DMA_CMTD	commutation DMA request enable,TIMERx(x=0..7)
TIMER_DMA_TRGD	trigger DMA enable,TIMERx(x=0..4,7)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the TIMER0 update DMA */

timer_dma_enable(TIMER0, TIMER_DMA_UPD);
```

timer_dma_disable

The description of timer_dma_disable is shown as below:

Table 3-616. Function timer_dma_disable

Function name	timer_dma_disable
----------------------	-------------------

Function prototype	void timer_dma_disable(uint32_t timer_periph, uint16_t dma);
Function descriptions	disable the TIMER DMA
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx</i>	please refer to the following parameters
Input parameter{in}	
dma	timer DMA source disable
<i>TIMER_DMA_UPD</i>	update DMA disable,TIMERx(x=0..7)
<i>TIMER_DMA_CH0D</i>	channel 0 DMA disable,TIMERx(x=0..4,7)
<i>TIMER_DMA_CH1D</i>	channel 1 DMA disable,TIMERx(x=0..4,7)
<i>TIMER_DMA_CH2D</i>	channel 2 DMA disable,TIMERx(x=0..4,7)
<i>TIMER_DMA_CH3D</i>	channel 3 DMA disable,TIMERx(x=0..4,7)
<i>TIMER_DMA_CMTD</i>	commutation DMA request disable,TIMERx(x=0..7)
<i>TIMER_DMA_TRGD</i>	trigger DMA disable,TIMERx(x=0..4,7)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the TIMER0 update DMA */
timer_dma_disable(TIMER0, TIMER_DMA_UPD);
```

timer_channel_dma_request_source_select

The description of `timer_channel_dma_request_source_select` is shown as below:

Table 3-617. Function `timer_channel_dma_request_source_select`

Function name	timer_channel_dma_request_source_select
Function prototype	void timer_channel_dma_request_source_select(uint32_t timer_periph, uint8_t dma_request);
Function descriptions	channel DMA request source selection
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..4,7)</i>	TIMER peripheral selection
Input parameter{in}	
dma_request	channel DMA request source selection
<i>TIMER_DMAREQUEST_CHANNELEVENT</i>	DMA request of channel y is sent when channel y event occurs

<i>TIMER_DMAREQUEST_UPDATEEVENT</i>	DMA request of channel y is sent when update event occurs
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* TIMER0 channel DMA request of channel y is sent when channel y event occurs */
timer_channel_dma_request_source_select(TIMER0,TIMER_DMAREQUEST_CHANNELEVENT);
```

timer_dma_transfer_config

The description of timer_dma_transfer_config is shown as below:

Table 3-618. Function timer_dma_transfer_config

Function name	timer_dma_transfer_config
Function prototype	void timer_dma_transfer_config(uint32_t timer_periph, uint32_t dma_baseaddr, uint32_t dma_lenth);
Function descriptions	configure the TIMER DMA transfer
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
dma_baseaddr	DMA transfer access start address
TIMER_DMACFG_DMA_TA_CTL0	DMA transfer address is TIMER_CTL0,TIMERx(x=0..4,7)
TIMER_DMACFG_DMA_TA_CTL1	DMA transfer address is TIMER_CTL1,TIMERx(x=0..4,7)
TIMER_DMACFG_DMA_TA_SMCFG	DMA transfer address is TIMER_SMCFG,TIMERx(x=0..4,7)
TIMER_DMACFG_DMA_TA_DMAINTEN	DMA transfer address is TIMER_DMAINTEN,TIMERx(x=0..4,7)
TIMER_DMACFG_DMA_TA_INTF	DMA transfer address is TIMER_INTF,TIMERx(x=0..4,7)
TIMER_DMACFG_DMA_TA_SWEVG	DMA transfer address is TIMER_SWEVG,TIMERx(x=0..4,7)
TIMER_DMACFG_DMA_TA_CHCTL0	DMA transfer address is TIMER_CHCTL0,TIMERx(x=0..4,7)
TIMER_DMACFG_DMA_TA_CHCTL1	DMA transfer address is TIMER_CHCTL1,TIMERx(x=0..4,7)

<i>TA_CHCTL1</i>	
<i>TIMER_DMACFG_DMA TA_CHCTL2</i>	DMA transfer address is <i>TIMER_CHCTL2,TIMERx(x=0..4,7)</i>
<i>TIMER_DMACFG_DMA TA_CNT</i>	DMA transfer address is <i>TIMER_CNT,TIMERx(x=0..4,7)</i>
<i>TIMER_DMACFG_DMA TA_PSC</i>	DMA transfer address is <i>TIMER_PSC,TIMERx(x=0..4,7)</i>
<i>TIMER_DMACFG_DMA TA_CAR</i>	MA transfer address is <i>TIMER_CAR,TIMERx(x=0..4,7)</i>
<i>TIMER_DMACFG_DMA TA_CREP</i>	DMA transfer address is <i>TIMER_CREP,TIMERx(x=0..7)</i>
<i>TIMER_DMACFG_DMA TA_CH0CV</i>	DMA transfer address is <i>TIMER_CH0CV,TIMERx(x=0..4,7)</i>
<i>TIMER_DMACFG_DMA TA_CH1CV</i>	DMA transfer address is <i>TIMER_CH1CV,TIMERx(x=0..4,7)</i>
<i>TIMER_DMACFG_DMA TA_CH2CV</i>	DMA transfer address is <i>TIMER_CH2CV,TIMERx(x=0..4,7)</i>
<i>TIMER_DMACFG_DMA TA_CH3CV</i>	DMA transfer address is <i>TIMER_CH3CV,TIMERx(x=0..4,7)</i>
<i>TIMER_DMACFG_DMA TA_CCHP</i>	DMA transfer address is <i>TIMER_CCHP,TIMERx(x=0..7)</i>
<i>TIMER_DMACFG_DMA TA_DMACFG</i>	DMA transfer address is <i>TIMER_DMACFG,TIMERx(x=0..4,7)</i>
Input parameter{in}	
dma_lenth	DMA transfer count, <i>TIMER_DMACFG_DMATC_xTRANSFER(x=1..18)</i>
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the TIMER0 DMA transfer */

timer_dma_transfer_config(TIMER0,TIMER_DMACFG_DMATA_CTL0,TIMER_DMACFG_DMATC_5TRANSFER);
```

timer_event_software_generate

The description of timer_event_software_generate is shown as below:

Table 3-619. Function timer_event_software_generate

Function name	timer_event_software_generate
Function prototype	void timer_event_software_generate(uint32_t timer_periph, uint16_t event);

Function descriptions	softw are generate events
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the follow ing parameters
Input parameter{in}	
event	the timer softw are event generation sources
TIMER_EVENT_SRC_UPG	update event,TIMERx(x=0..13)
TIMER_EVENT_SRC_CH0G	channel 0 capture or compare event generation,TIMERx(x=0..4,7..13)
TIMER_EVENT_SRC_CH1G	channel 1 capture or compare event generation,TIMERx(x=0..4,7,8,11)
TIMER_EVENT_SRC_CH2G	channel 2 capture or compare event generation,TIMERx(x=0..4,7)
TIMER_EVENT_SRC_CH3G	channel 3 capture or compare event generation,TIMERx(x=0..4,7)
TIMER_EVENT_SRC_MTG	channel commutation event generation,TIMERx(x=0,7)
TIMER_EVENT_SRC_TRIGGER	trigger event generation,TIMERx(x=0..4,7,8,11)
TIMER_EVENT_SRC_BREAK	break event generation,TIMERx(x=0,7)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* software generate update event*/
timer_event_software_generate(TIMER0, TIMER_EVENT_SRC_UPG);
```

timer_break_struct_para_init

The description of timer_break_struct_para_init is shown as below:

Table 3-620. Function timer_break_struct_para_init

Function name	timer_break_struct_para_init
Function prototype	void timer_break_struct_para_init(timer_break_parameter_struct* breakpara);
Function descriptions	initialize TIMER break parameter struct w ith a default value
Precondition	-

The called functions	-	
Input parameter{in}		
breakpara	TIMER break parameter struct, refer to	
	outputstate	channel output state (TIMER_CCX_ENABLE, TIME
Output parameter{out}		
-	-	-
Return value		
-	-	-

Example:

```

/* initialize the TIMER break parameter structure */

timer_break_parameter_struct breakpara;

breakpara->runoffstate = TIMER_ROS_STATE_DISABLE;
breakpara->ideloffstate = TIMER_IOS_STATE_DISABLE;
breakpara->deadtime = 0U;
breakpara->breakpolarity = TIMER_BREAK_POLARITY_LOW;
breakpara->outputautostate = TIMER_OUTAUTO_DISABLE;
breakpara->protectmode = TIMER_CCHP_PROT_OFF;
breakpara->breakstate = TIMER_BREAK_DISABLE;
timer_break_struct_para_init(&breakpara);

```

timer_break_config

The description of timer_break_config is shown as below:

Table 3-621. Function timer_break_config

Function name	timer_break_config
Function prototype	void timer_break_config(uint32_t timer_periph, timer_break_parameter_struct* breakpara);
Function descriptions	configure TIMER break function
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0,7)	TIMER peripheral selection
Input parameter{in}	

breakpara	TIMER break parameter struct, refer to	
	outputstate	channel output state (TIMER_CCX_ENABLE, TIMER_CCX_DISABLE)
		outputnstate
		channel complementary output state (TIMER_CCXN_ENABLE, TIMER_CCXN_DISABLE)
Output parameter{out}		
-	-	
Return value		
-	-	

Example:

```

/* configure TIMER0 break function */

timer_break_parameter_struct timer_breakpara;

timer_breakpara.runoffstate = TIMER_ROS_STATE_DISABLE;
timer_breakpara.idloffstate = TIMER_IOS_STATE_DISABLE ;
timer_breakpara.deadtime = 255;
timer_breakpara.breakpolarity = TIMER_BREAK_POLARITY_LOW;
timer_breakpara.outputautostate = TIMER_OUTAUTO_ENABLE;
timer_breakpara.protectmode = TIMER_CCHP_PROT_0;
timer_breakpara.breakstate = TIMER_BREAK_ENABLE;
timer_break_config(TIMER0,&timer_breakpara);

```

timer_break_enable

The description of timer_break_enable is shown as below:

Table 3-622. Function timer_break_enable

Function name	timer_break_enable
Function prototype	void timer_break_enable(uint32_t timer_periph);
Function descriptions	enable TIMER break function
Precondition	This function can be called only when PROT [1:0] bit-field in TIMERx_CCHP register is 00.
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0,7)	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	

Example:

```
/* enable TIMER0 break function*/
timer_break_enable(TIMER0);
```

timer_break_disable

The description of timer_break_disable is shown as below:

Table 3-623. Function timer_break_disable

Function name	timer_break_disable
Function prototype	void timer_break_disable(uint32_t timer_periph);
Function descriptions	disable TIMER break function
Precondition	This function can be called only when PROT [1:0] bit-filled in TIMERx_CCHP register is 00.
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0,7)	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable TIMER0 break function*/
timer_break_disable(TIMER0);
```

timer_automatic_output_enable

The description of timer_automatic_output_enable is shown as below:

Table 3-624. Function timer_automatic_output_enable

Function name	timer_automatic_output_enable
Function prototype	void timer_automatic_output_enable(uint32_t timer_periph);
Function descriptions	enable TIMER output automatic function
Precondition	This function can be called only when PROT [1:0] bit-filled in TIMERx_CCHP register is 00.
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0,7)	TIMER peripheral selection
Output parameter{out}	

-	-	-
Return value		
-	-	-

Example:

```
/* enable TIMER0 output automatic function */
timer_automatic_output_enable(TIMER0);
```

timer_automatic_output_disable

The description of timer_automatic_output_disable is shown as below:

Table 3-625. Function timer_automatic_output_disable

Function name	timer_automatic_output_disable
Function prototype	void timer_automatic_output_disable(uint32_t timer_periph);
Function descriptions	disable TIMER output automatic function
Precondition	This function can be called only when PROT [1:0] bit-field in TIMERx_CCHP register is 00.
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0,7)	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable TIMER0 output automatic function */
timer_automatic_output_disable(TIMER0);
```

timer_primary_output_config

The description of timer_primary_output_config is shown as below:

Table 3-626. Function timer_primary_output_config

Function name	timer_primary_output_config
Function prototype	void timer_primary_output_config(uint32_t timer_periph, ControlStatus new value);
Function descriptions	enable or disable TIMER primary output function
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral

<i>TIMERx(x=0,7)</i>	TIMER peripheral selection
Input parameter{in}	
new value	control value
ENABLE	enable function
DISABLE	disable function
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable TIMER0 primary output function */

timer_primary_output_config(TIMER0, ENABLE);
```

timer_channel_control_shadow_config

The description of timer_channel_control_shadow_config is shown as below:

Table 3-627. Function timer_channel_control_shadow_config

Function name	timer_channel_control_shadow_config
Function prototype	void timer_channel_control_shadow_config(uint32_t timer_periph, ControlStatus new value);
Function descriptions	enable or disable channel capture/compare control shadow register
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0,7)</i>	TIMER peripheral selection
Input parameter{in}	
new value	control value
ENABLE	enable function
DISABLE	disable function
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* channel capture/compare control shadow register enable */

timer_channel_control_shadow_config(TIMER0, ENABLE);
```

timer_channel_control_shadow_update_config

The description of timer_channel_control_shadow_update_config is shown as below:

Table 3-628. Function timer_channel_control_shadow_update_config

Function name	timer_channel_control_shadow_update_config
Function prototype	void timer_channel_control_shadow_update_config(uint32_t timer_periph, uint32_t ccuctl);
Function descriptions	configure TIMER channel control shadow register update control
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0,7)	TIMER peripheral selection
Input parameter{in}	
ccuctl	channel control shadow register update control
TIMER_UPDATECTL_CCU	the shadow registers update by when CMTG bit is set
TIMER_UPDATECTL_CUTRI	the shadow registers update by when CMTG bit is set or an rising edge of TRGI occurs
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 channel control shadow register update when CMTG bit is set */
timer_channel_control_shadow_update_config(TIMER0, TIMER_UPDATECTL_CCU);
```

timer_channel_output_struct_para_init

The description of timer_channel_output_struct_para_init is shown as below:

Table 3-629. Function timer_channel_output_struct_para_init

Function name	timer_channel_output_struct_para_init		
Function prototype	void timer_channel_output_struct_para_init(timer_oc_parameter_struct* ocpara);		
Function descriptions	initialize TIMER channel output parameter struct with a default value		
Precondition	-		
The called functions	-		
Input parameter{in}			
ocpara	TIMER channel output parameter struct, refer to <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>icpolarity</td> <td>channel input polarity (TIMER_IC_POLARITY_RISING TIMER_IC_POLARITY_FALLING)</td> </tr> </table>	icpolarity	channel input polarity (TIMER_IC_POLARITY_RISING TIMER_IC_POLARITY_FALLING)
icpolarity	channel input polarity (TIMER_IC_POLARITY_RISING TIMER_IC_POLARITY_FALLING)		

		icselection	channel input mode selection (TIMER_IC_SELECTION_DIRECTTI TIMER_IC_SELECTION_IT)	TIMER_IC_SELECTION_ITS
Output parameter{out}				
-			-	
Return value				
-			-	

Example:

```
/* initialize the TIMER channel output parameter structure */

timer_oc_parameter_struct ocpara;

ocpara->outputstate = TIMER_CCX_DISABLE;

ocpara->outputnstate = TIMER_CCXN_DISABLE;

ocpara->ocpolarity = TIMER_OC_POLARITY_HIGH;

ocpara->ocnpolarity = TIMER_OCN_POLARITY_HIGH;

ocpara->ocidlestate = TIMER_OC_IDLE_STATE_LOW;

ocpara->ocnidlestate = TIMER_OCN_IDLE_STATE_LOW;

timer_channel_output_struct_para_init(&ocpara);
```

timer_channel_output_config

The description of timer_channel_output_config is shown as below:

Table 3-630. Function timer_channel_output_config

Function name	timer_channel_output_config
Function prototype	void timer_channel_output_config(uint32_t timer_periph, uint16_t channel, timer_oc_parameter_struct* ocpara);
Function descriptions	configure TIMER channel output function
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
TIMER_CH_0	TIMER channel 0(TIMERx(x=0..4,7..13))
TIMER_CH_1	TIMER channel 1(TIMERx(x=0..4,7,8,11))
TIMER_CH_2	TIMER channel 2(TIMERx(x=0..4,7))
TIMER_CH_3	TIMER channel 3(TIMERx(x=0..4,7))

Input parameter{in}				
		TIMER channel output parameter struct, refer to		
ocpara		icpolarity	channel input polarity (TIMER_IC_POLARITY_RISING , TIMER_IC_POLARITY_FALLING)	
		icselection	channel input mode selection (TIMER_IC_SELECTION_DIRECTTI , TIMER_IC_SELECTION_INDIRECTTI , TIMER_IC_SELECTION_ITSS , TIMER_IC_SELECTION_ITI)	
Output parameter{out}				
-		-		
Return value				
-		-		

Example:

```
/* configure TIMER0 channel 0 output function */

timer_oc_parameter_struct timer_ocintpara;

timer_ocintpara.outputstate = TIMER_CCX_ENABLE;

timer_ocintpara.outputnstate = TIMER_CCXN_ENABLE;

timer_ocintpara.ocpolarity = TIMER_OC_POLARITY_HIGH;

timer_ocintpara.ocnpolarity = TIMER_OCN_POLARITY_HIGH;

timer_ocintpara.ocidlestate = TIMER_OC_IDLE_STATE_HIGH;

timer_ocintpara.ocnidlestate = TIMER_OCN_IDLE_STATE_LOW;

timer_channel_output_config(TIMER0,TIMER_CH_0,&timer_ocintpara);
```

timer_channel_output_mode_config

The description of **timer_channel_output_mode_config** is shown as below:

Table 3-631. Function timer_channel_output_mode_config

Function name	timer_channel_output_mode_config
Function prototype	void timer_channel_output_mode_config(uint32_t timer_periph, uint16_t channel, uint16_t ocmode);
Function descriptions	configure TIMER channel output compare mode
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured

<i>TIMER_CH_0</i>	TIMER channel0(TIMERx(x=0..4,7..13))
<i>TIMER_CH_1</i>	TIMER channel1(TIMERx(x=0..4,7,8,11))
<i>TIMER_CH_2</i>	TIMER channel2(TIMERx(x=0..4,7))
<i>TIMER_CH_3</i>	TIMER channel3(TIMERx(x=0..4,7))
Input parameter{in}	
ocmode	channel output compare mode
<i>TIMER_OC_MODE_TIMING</i>	frozen mode
<i>TIMER_OC_MODE_ACTIVE</i>	set the channel output
<i>TIMER_OC_MODE_INACTIVE</i>	clear the channel output
<i>TIMER_OC_MODE_TOGGLE</i>	toggle on match
<i>TIMER_OC_MODE_LOW</i>	force low mode
<i>TIMER_OC_MODE_HIGH</i>	force high mode
<i>TIMER_OC_MODE_PWM0</i>	PWM mode 0
<i>TIMER_OC_MODE_PWM1</i>	PWM mode 1
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 channel PWM 0 mode */
timer_channel_output_mode_config(TIMER0,TIMER_CH_0,TIMER_OC_MODE_PWM0);
```

timer_channel_output_pulse_value_config

The description of timer_channel_output_pulse_value_config is shown as below:

Table 3-632. Function timer_channel_output_pulse_value_config

Function name	timer_channel_output_pulse_value_config
Function prototype	void timer_channel_output_pulse_value_config(uint32_t timer_periph, uint16_t channel, uint16_t pulse);
Function descriptions	configure TIMER channel output pulse value
Precondition	-
The called functions	-
Input parameter{in}	

timer_periph	TIMER peripheral
<i>TIMERx</i>	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
<i>TIMER_CH_0</i>	TIMER channel0(<i>TIMERx</i> (x=0..4,7..13))
<i>TIMER_CH_1</i>	TIMER channel1(<i>TIMERx</i> (x=0..4,7,8,11))
<i>TIMER_CH_2</i>	TIMER channel2(<i>TIMERx</i> (x=0..4,7))
<i>TIMER_CH_3</i>	TIMER channel3(<i>TIMERx</i> (x=0..4,7))
Input parameter{in}	
pulse	channel output pulse value (0~65535)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 channel 0 output pulse value */
timer_channel_output_pulse_value_config(TIMER0,TIMER_CH_0,399);
```

timer_channel_output_shadow_config

The description of `timer_channel_output_shadow_config` is shown as below:

Table 3-633. Function `timer_channel_output_shadow_config`

Function name	timer_channel_output_shadow_config
Function prototype	void timer_channel_output_shadow_config(uint32_t timer_periph, uint16_t channel, uint16_t ocshadow);
Function descriptions	configure TIMER channel output shadow function
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx</i>	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
<i>TIMER_CH_0</i>	TIMER channel0(<i>TIMERx</i> (x=0..4,7..13))
<i>TIMER_CH_1</i>	TIMER channel1(<i>TIMERx</i> (x=0..4,7,8,11))
<i>TIMER_CH_2</i>	TIMER channel2(<i>TIMERx</i> (x=0..4,7))
<i>TIMER_CH_3</i>	TIMER channel3(<i>TIMERx</i> (x=0..4,7))
Input parameter{in}	
ocshadow	channel output shadow state
<i>TIMER_OC_SHADOW_ENABLE</i>	channel output shadow state enable

<i>TIMER_OC_SHADOW_DISABLE</i>	channel output shadow state disable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/*configure TIMER0 channel 0 output shadow function */
timer_channel_output_shadow_config(TIMER0, TIMER_CH_0,
TIMER_OC_SHADOW_ENABLE);
```

timer_channel_output_fast_config

The description of timer_channel_output_fast_config is shown as below:

Table 3-634. Function timer_channel_output_fast_config

Function name	timer_channel_output_fast_config
Function prototype	void timer_channel_output_fast_config(uint32_t timer_periph, uint16_t channel, uint16_t ocfast);
Function descriptions	configure TIMER channel output fast function
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
TIMER_CH_0	TIMER channel0(TIMERx(x=0..4,7..13))
TIMER_CH_1	TIMER channel1(TIMERx(x=0..4,7,8,11))
TIMER_CH_2	TIMER channel2(TIMERx(x=0..4,7))
TIMER_CH_3	TIMER channel3(TIMERx(x=0..4,7))
Input parameter{in}	
ocfast	channel output fast function
TIMER_OC_FAST_ENA_BLE	channel output fast function enable
TIMER_OC_FAST_DISABLE	channel output fast function disable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure TIMER0 channel 0 output fast function */

timer_channel_output_fast_config(TIMER0, TIMER_CH_0, TIMER_OC_FAST_ENABLE);
  
```

timer_channel_output_clear_config

The description of timer_channel_output_clear_config is shown as below:

Table 3-635. Function timer_channel_output_clear_config

Function name	timer_channel_output_clear_config
Function prototype	void timer_channel_output_clear_config(uint32_t timer_periph, uint16_t channel, uint16_t occlear);
Function descriptions	configure TIMER channel output clear function
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER periphera
TIMERx(x=0..4,7)	TIMER peripheral selection
Input parameter{in}	
channel	channel to be configured
TIMER_CH_0	TIMER channel0
TIMER_CH_1	TIMER channel1
TIMER_CH_2	TIMER channel2
TIMER_CH_3	TIMER channel3
Input parameter{in}	
occlear	channel output clear function
TIMER_OC_CLEAR_EN_ABLE	channel output clear function enable
TIMER_OC_CLEAR_DISABLE	channel output clear function disable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure TIMER0 channel 0 output clear function */

timer_channel_output_clear_config(TIMER0, TIMER_CH_0,
  TIMER_OC_CLEAR_ENABLE);
  
```

timer_channel_output_polarity_config

The description of timer_channel_output_polarity_config is shown as below:

Table 3-636. Function timer_channel_output_polarity_config

Function name	timer_channel_output_polarity_config
Function prototype	void timer_channel_output_polarity_config(uint32_t timer_periph, uint16_t channel, uint16_t ocpolarity);
Function descriptions	configure TIMER channel output polarity
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
TIMER_CH_0	TIMER channel0(TIMERx(x=0..4,7..13))
TIMER_CH_1	TIMER channel1(TIMERx(x=0..4,7,8,11))
TIMER_CH_2	TIMER channel2(TIMERx(x=0..4,7))
TIMER_CH_3	TIMER channel3(TIMERx(x=0..4,7))
Input parameter{in}	
ocpolarity	channel output polarity
TIMER_OC_POLARITY_HIGH	channel output polarity is high
TIMER_OC_POLARITY_LOW	channel output polarity is low
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 channel 0 output polarity */
timer_channel_output_polarity_config(TIMER0, TIMER_CH_0,
TIMER_OC_POLARITY_HIGH);
```

timer_channel_complementary_output_polarity_config

The description of timer_channel_complementary_output_polarity_config is shown as below.

Table 3-637. Function timer_channel_complementary_output_polarity_config

Function name	timer_channel_complementary_output_polarity_config
Function prototype	void timer_channel_complementary_output_polarity_config(uint32_t timer_periph, uint16_t channel, uint16_t ocnpolarity);
Function descriptions	configure TIMER channel complementary output polarity

Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx</i>	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
<i>TIMER_CH_0</i>	TIMER channel0(<i>TIMERx</i> (x=0..4,7..13))
<i>TIMER_CH_1</i>	TIMER channel1(<i>TIMERx</i> (x=0..4,7,8,11))
<i>TIMER_CH_2</i>	TIMER channel2(<i>TIMERx</i> (x=0..4,7))
Input parameter{in}	
ocpolarity	channel complementary output polarity
<i>TIMER_OCN_POLARITY_HIGH</i>	channel complementary output polarity is high
<i>TIMER_OCN_POLARITY_LOW</i>	channel complementary output polarity is low
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 channel 0 complementary output polarity */

timer_channel_complementary_output_polarity_config(TIMER0, TIMER_CH_0,
TMR_OCN_POLARITY_HIGH);
```

timer_channel_output_state_config

The description of timer_channel_output_state_config is shown as below:

Table 3-638. Function timer_channel_output_state_config

Function name	timer_channel_output_state_config
Function prototype	void timer_channel_output_state_config(uint32_t timer_periph, uint16_t

	channel, uint32_t state);
Function descriptions	configure TIMER channel enable state
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
TIMER_CH_0	TIMER channel0(TIMERx(x=0..4,7..13))
TIMER_CH_1	TIMER channel1(TIMERx(x=0..4,7,8,11))
TIMER_CH_2	TIMER channel2(TIMERx(x=0..4,7))
TIMER_CH_3	TIMER channel3(TIMERx(x=0..4,7))
Input parameter{in}	
state	TIMER channel enable state
TIMER_CCX_ENABLE	channel enable
TIMER_CCX_DISABLE	channel disable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 channel 0 enable state */
timer_channel_output_state_config(TIMER0, TIMER_CH_0, TIMER_CCX_ENABLE);
```

timer_channel_complementary_output_state_config

The description of timer_channel_complementary_output_state_config is shown as below:

Table 3-639. Function timer_channel_complementary_output_state_config

Function name	timer_channel_complementary_output_state_config
----------------------	---

Function prototype	void timer_channel_complementary_output_state_config(uint32_t timer_periph, uint16_t channel, uint16_t ocnstate);
Function descriptions	configure TIMER channel complementary output enable state
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0,7)</i>	TIMER peripheral selection
Input parameter{in}	
channel	channel to be configured
<i>TIMER_CH_0</i>	TIMER channel0
<i>TIMER_CH_1</i>	TIMER channel1
<i>TIMER_CH_2</i>	TIMER channel2
Input parameter{in}	
ocnstate	TIMER channel complementary output enable state
<i>TIMER_CCXN_ENABLE</i>	channel complementary enable
<i>TIMER_CCXN_DISABLE</i>	channel complementary disable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 channel 0 complementary output enable state */
timer_channel_complementary_output_state_config(TIMER0, TIMER_CH_0,
TMR_CCXN_ENABLE);
```

timer_channel_input_struct_para_init

The description of timer_channel_input_struct_para_init is shown as below:

Table 3-640. Function timer_channel_input_struct_para_init

Function name	timer_channel_input_struct_para_init				
Function prototype	void timer_channel_input_struct_para_init(timer_ic_parameter_struct* icpara);				
Function descriptions	initialize TIMER channel input parameter struct with a default value				
Precondition	-				
The called functions	-				
Input parameter{in}					
icpara	TIMER channel input parameter struct, refer to				
	Input parameter{in}				
	timer_periph	TIMER peripheral			
	TIMERx(x=0..13)	TIMER peripheral selection			
Output parameter{out}					
Output parameter{out}					
Return value					
-		-			

Example:

```
/* initialize the TIMER channel input parameter structure */
timer_ic_parameter_struct icpara;
icpara->icpolarity = TIMER_IC_POLARITY_RISING;
icpara->icselection = TIMER_IC_SELECTION_DIRECTTI;
icpara->icprescaler = TIMER_IC_PSC_DIV1;
icpara->icfilter = 0U;
timer_channel_input_struct_para_init(&icpara);
```

timer_input_capture_config

The description of timer_input_capture_config is shown as below:

Table 3-641. Function timer_input_capture_config

Function name	timer_input_capture_config
Function prototype	void timer_input_capture_config(uint32_t timer_periph, uint16_t channel,

	timer_ic_parameter_struct* icpara);
Function descriptions	configure TIMER input capture parameter
Precondition	-
The called functions	timer_channel_input_capture_prescaler_config
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx</i>	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
<i>TIMER_CH_0</i>	TIMER channel0(<i>TIMERx</i> (x=0..4,7..13))
<i>TIMER_CH_1</i>	TIMER channel1(<i>TIMERx</i> (x=0..4,7,8,11))
<i>TIMER_CH_2</i>	TIMER channel2(<i>TIMERx</i> (x=0..4,7))
<i>TIMER_CH_3</i>	TIMER channel3(<i>TIMERx</i> (x=0..4,7))
Input parameter{in}	
icpara	TIMER channel input parameter struct, refer to
	Input parameter{in}
	timer_periph <i>TIMERx</i> (x=0..13) TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure TIMER0 input capture parameter */
timer_ic_parameter_struct timer_icinitpara;
timer_icinitpara.icpolarity = TIMER_IC_POLARITY_RISING;
timer_icinitpara.icselection = TIMER_IC_SELECTION_DIRECTTI;
timer_icinitpara.icprescaler = TIMER_IC_PSC_DIV1;
timer_icinitpara.icfilter = 0x0;

```

```
timer_input_capture_config(TIMER0,TIMER_CH_0,&timer_icinitpara);
```

timer_channel_input_capture_prescaler_config

The description of timer_channel_input_capture_prescaler_config is shown as below:

Table 3-642. Function timer_channel_input_capture_prescaler_config

Function name	timer_channel_input_capture_prescaler_config
Function prototype	void timer_channel_input_capture_prescaler_config(uint32_t timer_periph, uint16_t channel, uint16_t prescaler);
Function descriptions	configure TIMER channel input capture prescaler value
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
TIMER_CH_0	TIMER channel0(TIMERx(x=0..4,7..13))
TIMER_CH_1	TIMER channel1(TIMERx(x=0..4,7,8,11))
TIMER_CH_2	TIMER channel2(TIMERx(x=0..4,7))
TIMER_CH_3	TIMER channel3(TIMERx(x=0..4,7))
Input parameter{in}	
prescaler	channel input capture prescaler value
TIMER_IC_PSC_DIV1	no prescaler
TIMER_IC_PSC_DIV2	divided by 2
TIMER_IC_PSC_DIV4	divided by 4
TIMER_IC_PSC_DIV8	divided by 8
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 channel 0 input capture prescaler value */

timer_channel_input_capture_prescaler_config(TIMER0, TIMER_CH_0,
TICKER_IC_PSC_DIV2);
```

timer_channel_capture_value_register_read

The description of timer_channel_capture_value_register_read is shown as below:

Table 3-643. Function timer_channel_capture_value_register_read

Function name	timer_channel_capture_value_register_read
----------------------	---

Function prototype	uint32_t timer_channel_capture_value_register_read(uint32_t timer_periph, uint16_t channel);
Function descriptions	read TIMER channel capture compare register value
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
channel	channel to be configured
TIMER_CH_0	TIMER channel0(TIMERx(x=0..4,7..13))
TIMER_CH_1	TIMER channel1(TIMERx(x=0..4,7,8,11))
TIMER_CH_2	TIMER channel2(TIMERx(x=0..4,7))
TIMER_CH_3	TIMER channel3(TIMERx(x=0..4,7))
Output parameter{out}	
-	-
Return value	
uint32_t	channel capture compare register value(0x0000~0xFFFF)

Example:

```
/* read TIMER0 channel 0 capture compare register value */
uint32_t CH0_value = 0;
CH0_value = timer_channel_capture_value_register_read(TIMER0, TIMER_CH_0);
```

timer_input_pwm_capture_config

The description of timer_input_pwm_capture_config is shown as below:

Table 3-644. Function timer_input_pwm_capture_config

Function name	timer_input_pwm_capture_config
Function prototype	void timer_input_pwm_capture_config(uint32_t timer_periph, uint16_t channel, timer_ic_parameter_struct* icpwm);
Function descriptions	configure TIMER input pwm capture function
Precondition	-
The called functions	timer_channel_input_capture_prescaler_config
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..4,7,8,11)	TIMER peripheral selection
Input parameter{in}	
channel	channel to be configured
TIMER_CH_0	TIMER channel0
TIMER_CH_1	TIMER channel1
Input parameter{in}	

icpwm	channel input pwm parameter struct, refer to	
	Input parameter{in}	
	timer_periph	TIMER peripheral
	TIMERx(x=0..13)	TIMER peripheral selection
Output parameter{out}		
Output parameter{out}		
-	-	
Return value		
-	-	

Example:

```
/* configure TIMER0 input pwm capture parameter */
timer_ic_parameter_struct timer_icinitpara;
timer_icinitpara.icpolarity = TIMER_IC_POLARITY_RISING;
timer_icinitpara.icselection = TIMER_IC_SELECTION_DIRECTTI;
timer_icinitpara.icprescaler = TIMER_IC_PSC_DIV1;
timer_icinitpara.icfilter = 0x0;
timer_input_pwm_capture_config(TIMER0,TIMER_CH_0,&timer_icinitpara);
```

timer_hall_mode_config

The description of timer_hall_mode_config is shown as below:

Table 3-645. Function timer_hall_mode_config

Function name	timer_hall_mode_config
Function prototype	void timer_hall_mode_config(uint32_t timer_periph, uint8_t hallmode);
Function descriptions	configure TIMER hall sensor mode
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..4,7)	TIMER peripheral selection
Input parameter{in}	
hallmode	TIMER hall sensor mode state
TIMER_HALLINTERFA_CE_ENABLE	TIMER hall sensor mode enable
TIMER_HALLINTERFA_CE_DISABLE	TIMER hall sensor mode disable
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* configure TIMER0 hall sensor mode */
timer_hall_mode_config(TIMER0, TIMER_HALLINTERFACE_ENABLE);
```

timer_input_trigger_source_select

The description of timer_input_trigger_source_select is shown as below:

Table 3-646. Function timer_input_trigger_source_select

Function name	timer_input_trigger_source_select
Function prototype	void timer_input_trigger_source_select(uint32_t timer_periph, uint32_t intrigger);
Function descriptions	select TIMER input trigger source
Precondition	SMC[2:0] = 000
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
intrigger	trigger selection
TIMER_SMCFG_TRGS EL_ITI0	Internal trigger input 0 (ITI0) , TIMERx(x=0..4,7,8,11)
TIMER_SMCFG_TRGS EL_ITI1	Internal trigger input 1 (ITI1) , TIMERx(x=0..4,7,8,11)
TIMER_SMCFG_TRGS EL_ITI2	Internal trigger input 2 (ITI2) , TIMERx(x=0..4,7,8,11)
TIMER_SMCFG_TRGS EL_ITI3	Internal trigger input 3 (ITI3) , TIMERx(x=0..4,7,8,11)
TIMER_SMCFG_TRGS EL_CI0F_ED	TI0 edge detector , TIMERx(x=0..4,7,8,11)
TIMER_SMCFG_TRGS EL_CI0FE0	filtered TIMER input 0 , TIMERx(x=0..4,7,8,11)
TIMER_SMCFG_TRGS EL_CI1FE1	filtered TIMER input 1 , TIMERx(x=0..4,7,8,11)
TIMER_SMCFG_TRGS EL_ETIFFP	external trigger , TIMERx(x=0..4,7)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* select TIMER0 input trigger source */
timer_input_trigger_source_select(TIMER0, TIMER_SMCFG_TRGSEL_ITI0);
```

timer_master_output_trigger_source_select

The description of timer_master_output_trigger_source_select is shown as below:

Table 3-647. Function timer_master_output_trigger_source_select

Function name	timer_master_output_trigger_source_select
Function prototype	void timer_master_output_trigger_source_select(uint32_t timer_periph, uint32_t outrigger);
Function descriptions	select TIMER master mode output trigger source
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..7)	TIMER peripheral selection
Input parameter{in}	
outrigger	master mode control
TIMER_TRI_OUT_SRC_RESET	Reset. When the UPG bit in the TIMERx_SWEVG register is set or a reset is generated by the slave mode controller, a TRGO pulse occurs. And in the latter case, the signal on TRGO is delayed compared to the actual reset
TIMER_TRI_OUT_SRC_ENABLE	Enable. This mode is useful to start several timers at the same time or to control a window in which a slave timer is enabled. In this mode the master mode controller selects the counter enable signal as TRGO. The counter enable signal is set when CEN control bit is set or the trigger input in pause mode is high. There is a delay between the trigger input in pause mode and the TRGO output, except if the master-slave mode is selected.
TIMER_TRI_OUT_SRC_UPDATE	Update. In this mode the master mode controller selects the update event as TRGO.
TIMER_TRI_OUT_SRC_CH0	a capture or a compare match occurred in channel 0 as trigger output TRGO.
TIMER_TRI_OUT_SRC_O0CPRE	Compare. In this mode the master mode controller selects the O0CPRE signal is used as TRGO
TIMER_TRI_OUT_SRC_O1CPRE	Compare. In this mode the master mode controller selects the O1CPRE signal is used as TRGO
TIMER_TRI_OUT_SRC_O2CPRE	Compare. In this mode the master mode controller selects the O2CPRE signal is used as TRGO
TIMER_TRI_OUT_SRC_O3CPRE	Compare. In this mode the master mode controller selects the O3CPRE signal is used as TRGO
Output parameter{out}	

-	-	-
Return value		
-	-	-

Example:

```
/* select TIMER0 master mode output trigger source */
timer_master_output_trigger_source_select(TIMER0, TIMER_TRI_OUT_SRC_RESET);
```

timer_slave_mode_select

The description of timer_slave_mode_select is shown as below:

Table 3-648. Function timer_slave_mode_select

Function name	timer_slave_mode_select
Function prototype	void timer_slave_mode_select(uint32_t timer_periph, uint32_t slavemode);
Function descriptions	select TIMER slave mode
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..4,7,8,11)</i>	TIMER peripheral selection
Input parameter{in}	
slavemode	slave mode
<i>TIMER_SLAVE_MODE_DISABLE</i>	slave mode disable
<i>TIMER_QUAD_DECODER_MODE0</i>	quadrature decoder mode 0
<i>TIMER_QUAD_DECODER_MODE1</i>	quadrature decoder mode 1
<i>TIMER_QUAD_DECODER_MODE2</i>	quadrature decoder mode 2
<i>TIMER_SLAVE_MODE_RESTART</i>	restart mode
<i>TIMER_SLAVE_MODE_PAUSE</i>	pause mode
<i>TIMER_SLAVE_MODE_EVENT</i>	event mode
<i>TIMER_SLAVE_MODE_EXTERNAL0</i>	external clock mode 0
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* select TIMER0 slave mode */
timer_slave_mode_select(TIMER0, TIMER_QUAD_DECODER_MODE0);
```

timer_master_slave_mode_config

The description of timer_master_slave_mode_config is shown as below:

Table 3-649. Function timer_master_slave_mode_config

Function name	timer_master_slave_mode_config
Function prototype	void timer_master_slave_mode_config(uint32_t timer_periph, uint32_t masterslave);
Function descriptions	configure TIMER master slave mode
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..4,7,8,11)	TIMER peripheral selection
Input parameter{in}	
masterslave	master slave mode state
TIMER_MASTER_SLAVE_MODE_ENABLE	master slave mode enable
TIMER_MASTER_SLAVE_MODE_DISABLE	master slave mode disable
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 master slave mode */
timer_master_slave_mode_config(TIMER0, TIMER_MASTER_SLAVE_MODE_ENABLE);
```

timer_external_trigger_config

The description of timer_external_trigger_config is shown as below:

Table 3-650. Function timer_external_trigger_config

Function name	timer_external_trigger_config
Function prototype	void timer_external_trigger_config(uint32_t timer_periph, uint32_t extprescaler, uint32_t expolarity, uint8_t extfilter);
Function descriptions	configure TIMER external trigger input
Precondition	-

The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..4,7)	TIMER peripheral selection
Input parameter{in}	
extprescaler	external trigger prescaler
TIMER_EXT_TRI_PSC_OFF	no divided
TIMER_EXT_TRI_PSC_DIV2	divided by 2
TIMER_EXT_TRI_PSC_DIV4	divided by 4
TIMER_EXT_TRI_PSC_DIV8	divided by 8
Input parameter{in}	
expolarity	external trigger polarity
TIMER_ETP_FALLING	active low or falling edge active
TIMER_ETP_RISING	active high or rising edge active
Input parameter{in}	
extfilter	external trigger filter control (0~15)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 external trigger input */
timer_external_trigger_config(TIMER0, TIMER_EXT_TRI_PSC_DIV2,
    TIMER_ETP_FALLING, 10);
```

timer_quadrature_decoder_mode_config

The description of timer_quadrature_decoder_mode_config is shown as below:

Table 3-651. Function timer_quadrature_decoder_mode_config

Function name	timer_quadrature_decoder_mode_config
Function prototype	void timer_quadrature_decoder_mode_config(uint32_t timer_periph, uint32_t decomode,uint16_t ic0polarity, uint16_t ic1polarity);
Function descriptions	configure TIMER quadrature decoder mode
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral

<i>TIMERx(x=0..4,7,8,11)</i>	TIMER peripheral selection
Input parameter{in}	
decomode	quadrature decoder mode
<i>TIMER_QUAD_DECODER_MODE0</i>	counter counts on CI0FE0 edge depending on CI1FE1 level
<i>TIMER_QUAD_DECODER_MODE1</i>	counter counts on CI1FE1 edge depending on CI0FE0 level
<i>TIMER_QUAD_DECODER_MODE2</i>	counter counts on both CI0FE0 and CI1FE1 edges depending on the level of the other input
Input parameter{in}	
ic0polarity	IC0 polarity
<i>TIMER_IC_POLARITY_RISING</i>	capture rising edge
<i>TIMER_IC_POLARITY_FALLING</i>	capture falling edge
Input parameter{in}	
ic1polarity	IC1 polarity
<i>TIMER_IC_POLARITY_RISING</i>	capture rising edge
<i>TIMER_IC_POLARITY_FALLING</i>	capture falling edge
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 quadrature decoder mode */
timer_quadrature_decoder_mode_config(TIMER0, TIMER_QUAD_DECODER_MODE0,
TIMER_IC_POLARITY_RISING, TIMER_IC_POLARITY_RISING);
```

timer_internal_clock_config

The description of timer_internal_clock_config is shown as below:

Table 3-652. Function timer_internal_clock_config

Function name	timer_internal_clock_config
Function prototype	void timer_internal_clock_config(uint32_t timer_periph);
Function descriptions	configure TIMER internal clock mode
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral

<i>TIMERx(x=0..4,7,8,11)</i>	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 internal clock mode */
timer_internal_clock_config(TIMER0);
```

timer_internal_trigger_as_external_clock_config

The description of timer_internal_trigger_as_external_clock_config is shown as below:

Table 3-653. Function timer_internal_trigger_as_external_clock_config

Function name	timer_internal_trigger_as_external_clock_config
Function prototype	void timer_internal_trigger_as_external_clock_config(uint32_t timer_periph, uint32_t intrigger);
Function descriptions	configure TIMER the internal trigger as external clock input
Precondition	-
The called functions	timer_input_trigger_source_select
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..4,7,8,11)</i>	TIMER peripheral selection
Input parameter{in}	
intrigger	trigger selection
<i>TIMER_SMCFG_TRGS EL_ITI0</i>	Internal trigger input 0 (ITI0)
<i>TIMER_SMCFG_TRGS EL_ITI1</i>	Internal trigger input 0 (ITI1)
<i>TIMER_SMCFG_TRGS EL_ITI2</i>	Internal trigger input 0 (ITI2)
<i>TIMER_SMCFG_TRGS EL_ITI3</i>	Internal trigger input 0 (ITI3)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 the internal trigger ITI0 as external clock input */
timer_internal_trigger_as_external_clock_config(TIMER0, TIMER_SMCFG_TRGSEL_ITI0);
```

timer_external_trigger_as_external_clock_config

The description of timer_external_trigger_as_external_clock_config is shown as below:

Table 3-654. Function timer_external_trigger_as_external_clock_config

Function name	timer_external_trigger_as_external_clock_config
Function prototype	void timer_external_trigger_as_external_clock_config(uint32_t timer_periph, uint32_t extrigger, uint16_t expolarity, uint8_t extfilter);
Function descriptions	configure TIMER the external trigger as external clock input
Precondition	-
The called functions	timer_input_trigger_source_select
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx(x=0..4,7,8,11)	TIMER peripheral selection
Input parameter{in}	
extrigger	external trigger selection
TIMER_SMCFG_TRGS_EL_CI0F_ED	Cl0 edge flag (Cl0F_ED)
TIMER_SMCFG_TRGS_EL_CI0FE0	channel 0 input Filtered output (Cl0FE0)
TIMER_SMCFG_TRGS_EL_CI1FE1	channel 1 input Filtered output (Cl1FE1)
Input parameter{in}	
expolarity	external trigger polarity
TIMER_IC_POLARITY_RISING	active high or rising edge active
TIMER_IC_POLARITY_FALLING	active low or falling edge active
Input parameter{in}	
extfilter	external trigger filter control (0~15)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 the external trigger Cl0FE0 as external clock input */

timer_external_trigger_as_external_clock_config(TIMER0,
TMR_SMCFG_TRGSEL_CI0FE0, TMR_IC_POLARITY_RISING, 0);
```

timer_external_clock_mode0_config

The description of timer_external_clock_mode0_config is shown as below:

Table 3-655. Function timer_external_clock_mode0_config

Function name	timer_external_clock_mode0_config
Function prototype	void timer_external_clock_mode0_config(uint32_t timer_periph, uint32_t extprescaler,uint32_t expolarity, uint8_t extfilter);
Function descriptions	configure TIMER the external clock mode0
Precondition	-
The called functions	timer_external_trigger_config
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..4,7,8,11)</i>	TIMER peripheral selection
Input parameter{in}	
extprescaler	ETI external trigger prescaler
<i>TIMER_EXT_TRI_PSC_OFF</i>	no divided
<i>TIMER_EXT_TRI_PSC_DIV2</i>	divided by 2
<i>TIMER_EXT_TRI_PSC_DIV4</i>	divided by 4
<i>TIMER_EXT_TRI_PSC_DIV8</i>	divided by 8
Input parameter{in}	
expolarity	ETI external trigger polarity
<i>TIMER_ETP_FALLING</i>	active low or falling edge active
<i>TIMER_ETP_RISING</i>	active high or rising edge active
Input parameter{in}	
extfilter	ETI external trigger filter control (0~15)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 the external clock mode0 */
timer_external_clock_mode0_config(TIMER0, TIMER_EXT_TRI_PSC_DIV2,
TIMER_ETP_FALLING, 0);
```

timer_external_clock_mode1_config

The description of timer_external_clock_mode1_config is shown as below:

Table 3-656. Function timer_external_clock_mode1_config

Function name	timer_external_clock_mode1_config
Function prototype	void timer_external_clock_mode1_config(uint32_t timer_periph, uint32_t

	extprescaler,uint32_t expolarity, uint8_t extfilter);
Function descriptions	configure TIMER the external clock mode1
Precondition	-
The called functions	timer_external_trigger_config
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx(x=0..4,7)</i>	TIMER peripheral selection
Input parameter{in}	
extprescaler	ETI external trigger prescaler
<i>TIMER_EXT_TRI_PSC_OFF</i>	no divided
<i>TIMER_EXT_TRI_PSC_DIV2</i>	divided by 2
<i>TIMER_EXT_TRI_PSC_DIV4</i>	divided by 4
<i>TIMER_EXT_TRI_PSC_DIV8</i>	divided by 8
Input parameter{in}	
expolarity	ETI external trigger polarity
<i>TIMER_ETP_FALLING</i>	active low or falling edge active
<i>TIMER_ETP_RISING</i>	active high or rising edge active
Input parameter{in}	
extfilter	ETI external trigger filter control (0~15)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure TIMER0 the external clock mode1 */

timer_external_clock_mode1_config(TIMER0, TIMER_EXT_TRI_PSC_DIV2,
TMR_ETP_FALLING, 0);
```

timer_external_clock_mode1_disable

The description of timer_external_clock_mode1_disable is shown as below:

Table 3-657. Function timer_external_clock_mode1_disable

Function name	timer_external_clock_mode1_disable
Function prototype	void timer_external_clock_mode1_disable(uint32_t timer_periph);
Function descriptions	disable TIMER the external clock mode1
Precondition	-
The called functions	-

Input parameter{in}	
timer_periph	TIMER peripheral
$TIMERx(x=0..4,7)$	TIMER peripheral selection
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable TIMER0 the external clock mode1 */

timer_external_clock_mode1_disable(TIMER0);
```

timer_interrupt_enable

The description of timer_interrupt_enable is shown as below:

Table 3-658. Function timer_interrupt_enable

Function name	timer_interrupt_enable
Function prototype	void timer_interrupt_enable(uint32_t timer_periph, uint32_t interrupt);
Function descriptions	enable the TIMER interrupt
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
$TIMERx$	please refer to the following parameters
Input parameter{in}	
interrupt	timer interrupt enable source
$TIMER_INT_UP$	update interrupt enable, $TIMERx(x=0..13)$
$TIMER_INT_CH0$	channel 0 interrupt enable, $TIMERx(x=0..4,7..13)$
$TIMER_INT_CH1$	channel 1 interrupt enable, $TIMERx(x=0..4,7,8,11)$
$TIMER_INT_CH2$	channel 2 interrupt enable, $TIMERx(x=0..4,7)$
$TIMER_INT_CH3$	channel 3 interrupt enable, $TIMERx(x=0..4,7)$
$TIMER_INT_CMT$	commutation interrupt enable, $TIMERx(x=0,7)$
$TIMER_INT_TRG$	trigger interrupt enable, $TIMERx(x=0..4,7,8,11)$
$TIMER_INT_BRK$	break interrupt enable, $TIMERx(x=0,7)$
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable the TIMER0 update interrupt */

timer_interrupt_enable (TIMER0, TIMER_INT_UP);
```

timer_interrupt_disable

The description of timer_interrupt_disable is shown as below:

Table 3-659. Function timer_interrupt_disable

Function name	timer_interrupt_disable
Function prototype	void timer_interrupt_disable(uint32_t timer_periph, uint32_t interrupt);
Function descriptions	disable the TIMER interrupt
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
interrupt	timer interrupt disable source
TIMER_INT_UP	update interrupt disable, TIMERx(x=0..13)
TIMER_INT_CH0	channel 0 interrupt disable, TIMERx(x=0..4,7..13)
TIMER_INT_CH1	channel 1 interrupt disable, TIMERx(x=0..4,7,8,11)
TIMER_INT_CH2	channel 2 interrupt disable, TIMERx(x=0..4,7)
TIMER_INT_CH3	channel 3 interrupt disable, TIMERx(x=0..4,7)
TIMER_INT_CMT	commutation interrupt disable, TIMERx(x=0,7)
TIMER_INT_TRG	trigger interrupt disable, TIMERx(x=0..4,7,8,11)
TIMER_INT_BRK	break interrupt disable, TIMERx(x=0,7)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable the TIMER0 update interrupt */
timer_interrupt_disable(TIMER0, TIMER_INT_UP);
```

timer_interrupt_flag_get

The description of timer_interrupt_flag_get is shown as below:

Table 3-660. Function timer_interrupt_flag_get

Function name	timer_interrupt_flag_get
Function prototype	FlagStatus timer_interrupt_flag_get(uint32_t timer_periph, uint32_t interrupt);
Function descriptions	get timer interrupt flag
Precondition	-
The called functions	-
Input parameter{in}	

timer_periph	TIMER peripheral
<i>TIMERx</i>	please refer to the following parameters
Input parameter{in}	
interrupt	the timer interrupt bits
<i>TIMER_INT_FLAG_UP</i>	update interrupt flag, <i>TIMERx</i> (x=0..13)
<i>TIMER_INT_FLAG_CH0</i>	channel 0 interrupt flag, <i>TIMERx</i> (x=0..4,7..13)
<i>TIMER_INT_FLAG_CH1</i>	channel 1 interrupt flag, <i>TIMERx</i> (x=0..4,7,8,11)
<i>TIMER_INT_FLAG_CH2</i>	channel 2 interrupt flag, <i>TIMERx</i> (x=0..4,7)
<i>TIMER_INT_FLAG_CH3</i>	channel 3 interrupt flag, <i>TIMERx</i> (x=0..4,7)
<i>TIMER_INT_FLAG_CM_T</i>	channel commutation interrupt flag, <i>TIMERx</i> (x=0,7)
<i>TIMER_INT_FLAG_TRG</i>	trigger interrupt flag, <i>TIMERx</i> (x=0,7,8,11)
<i>TIMER_INT_FLAG_BRK</i>	break interrupt flag, <i>TIMERx</i> (x=0,7)
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get TIMER0 update interrupt flag */
FlagStatus Flag_interrupt = RESET;
Flag_interrupt = timer_interrupt_flag_get(TIMER0, TIMER_INT_FLAG_UP);
```

timer_interrupt_flag_clear

The description of `timer_interrupt_flag_clear` is shown as below:

Table 3-661. Function `timer_interrupt_flag_clear`

Function name	<code>timer_interrupt_flag_clear</code>
Function prototype	<code>void timer_interrupt_flag_clear(uint32_t timer_periph, uint32_t interrupt);</code>
Function descriptions	clear TIMER interrupt flag
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx</i>	please refer to the following parameters
Input parameter{in}	
interrupt	the timer interrupt bits
<i>TIMER_INT_FLAG_UP</i>	update interrupt flag, <i>TIMERx</i> (x=0..13)
<i>TIMER_INT_FLAG_CH0</i>	channel 0 interrupt flag, <i>TIMERx</i> (x=0..4,7..13)
<i>TIMER_INT_FLAG_CH1</i>	channel 1 interrupt flag, <i>TIMERx</i> (x=0..4,7,8,11)
<i>TIMER_INT_FLAG_CH2</i>	channel 2 interrupt flag, <i>TIMERx</i> (x=0..4,7)
<i>TIMER_INT_FLAG_CH3</i>	channel 3 interrupt flag, <i>TIMERx</i> (x=0..4,7)

<i>TIMER_INT_FLAG_CM</i>	channel commutation interrupt flag,TIMERx(x=0,7)
<i>TIMER_INT_FLAG_TRG</i>	trigger interrupt flag,TIMERx(x=0,7,8,11)
<i>TIMER_INT_FLAG_BRK</i>	break interrupt flag,TIMERx(x=0,7)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear TIMER0 update interrupt flag */
timer_interrupt_flag_clear(TIMER0, TIMER_INT_FLAG_UP);
```

timer_flag_get

The description of timer_flag_get is shown as below:

Table 3-662. Function timer_flag_get

Function name	timer_flag_get
Function prototype	FlagStatus timer_flag_get(uint32_t timer_periph, uint32_t flag);
Function descriptions	get TIMER flags
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
<i>TIMERx</i>	please refer to the following parameters
Input parameter{in}	
flag	the timer interrupt flags
<i>TIMER_FLAG_UP</i>	update flag,TIMERx(x=0..13)
<i>TIMER_FLAG_CH0</i>	channel 0 flag,TIMERx(x=0..4,7..13)
<i>TIMER_FLAG_CH1</i>	channel 1 flag,TIMERx(x=0..4,7,8,11)
<i>TIMER_FLAG_CH2</i>	channel 2 flag,TIMERx(x=0..4,7)
<i>TIMER_FLAG_CH3</i>	channel 3 flag,TIMERx(x=0..4,7)
<i>TIMER_FLAG_CMT</i>	channel commutation flag,TIMERx(x=0,7)
<i>TIMER_FLAG_TRG</i>	trigger flag,TIMERx(x=0,7,8,11)
<i>TIMER_FLAG_BRK</i>	break flag,TIMERx(x=0,7)
<i>TIMER_FLAG_CH0O</i>	channel 0 overcapture flag,TIMERx(x=0..4,7..11)
<i>TIMER_FLAG_CH1O</i>	channel 1 overcapture flag,TIMERx(x=0..4,7,8,11)
<i>TIMER_FLAG_CH2O</i>	channel 2 overcapture flag,TIMERx(x=0..4,7)
<i>TIMER_FLAG_CH3O</i>	channel 3 overcapture flag,TIMERx(x=0..4,7)
Output parameter{out}	
-	-
Return value	

FlagStatus	SET or RESET
------------	--------------

Example:

```
/* get TIMER0 update flags */
FlagStatus Flag_status = RESET;
Flag_status = timer_flag_get(TIMER0, TIMER_FLAG_UP);
```

timer_flag_clear

The description of timer_flag_clear is shown as below:

Table 3-663. Function timer_flag_clear

Function name	timer_flag_clear
Function prototype	void timer_flag_clear(uint32_t timer_periph, uint32_t flag);
Function descriptions	clear TIMER flags
Precondition	-
The called functions	-
Input parameter{in}	
timer_periph	TIMER peripheral
TIMERx	please refer to the following parameters
Input parameter{in}	
flag	the timer interrupt flags
TIMER_FLAG_UP	update flag,TIMERx(x=0..13)
TIMER_FLAG_CH0	channel 0 flag,TIMERx(x=0..4,7..13)
TIMER_FLAG_CH1	channel 1 flag,TIMERx(x=0..4,7,8,11)
TIMER_FLAG_CH2	channel 2 flag,TIMERx(x=0..4,7)
TIMER_FLAG_CH3	channel 3 flag,TIMERx(x=0..4,7)
TIMER_FLAG_CMT	channel commutation flag,TIMERx(x=0,7)
TIMER_FLAG_TRG	trigger flag,TIMERx(x=0,7,8,11)
TIMER_FLAG_BRK	break flag,TIMERx(x=0,7)
TIMER_FLAG_CH00	channel 0 overcapture flag,TIMERx(x=0..4,7..11)
TIMER_FLAG_CH10	channel 1 overcapture flag,TIMERx(x=0..4,7,8,11)
TIMER_FLAG_CH20	channel 2 overcapture flag,TIMERx(x=0..4,7)
TIMER_FLAG_CH30	channel 3 overcapture flag,TIMERx(x=0..4,7)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear TIMER0 update flags */
timer_flag_clear(TIMER0, TIMER_FLAG_UP);
```

3.23. USART

The Universal Synchronous/Asynchronous Receiver/Transmitter (USART) provides a flexible serial data exchange interface. The USART registers are listed in chapter [9](#), the USART firmware functions are introduced in chapter [9](#) Descriptions of Peripheral registers.

3.23.1. Descriptions of Peripheral registers

USART registers are listed in the table shown as below:

Table 3-664. USART Registers

Registers	Descriptions
USART_STAT	Status register
USART_DATA	Data register
USART_BAUD	Baud rate register
USART_CTL0	Control register 0
USART_CTL1	Control register 1
USART_CTL2	Control register 2
USART_GP	Guard time and prescaler register

3.23.2. Descriptions of Peripheral functions

USART firmware functions are listed in the table shown as below:

Table 3-665. USART firmware function

Function name	Function description
uart_deinit	reset USART
uart_baudrate_set	configure USART baud rate value
uart_parity_config	configure USART parity function
uart_word_length_set	configure USART word length
uart_stop_bit_set	configure USART stop bit length
uart_enable	enable USART
uart_disable	disable USART
uart_transmit_config	configure USART transmitter
uart_receive_config	configure USART receiver
uart_data_transmit	USART transmit data function
uart_data_receive	USART receive data function
uart_address_config	configure address of the USART
uart_mute_mode_enable	enable mute mode
uart_mute_mode_disable	disable mute mode
uart_mute_mode_wakeup_config	configure wakeup method in mute mode
uart_lin_mode_enable	enable LIN mode
uart_lin_mode_disable	disable LIN mode

Function name	Function description
uart_lin_break_decton_length_config	configure LIN break frame length
uart_send_break	send break frame
uart_halfduplex_enable	enable half duplex mode
uart_halfduplex_disable	disable half duplex mode
uart_synchronous_clock_enable	enable CK pin in synchronous mode
uart_synchronous_clock_disable	disable CK pin in synchronous mode
uart_synchronous_clock_config	configure USART synchronous mode parameters
uart_guard_time_config	configure guard time value in smartcard mode
uart_smartcard_mode_enable	enable smartcard mode
uart_smartcard_mode_disable	disable smartcard mode
uart_smartcard_mode_nack_enable	enable NACK in smartcard mode
uart_smartcard_mode_nack_disable	disable NACK in smartcard mode
uart_irda_mode_enable	enable IrDA mode
uart_irda_mode_disable	disable IrDA mode
uart_prescaler_config	configure the peripheral clock prescaler in USART IrDA low-power mode
uart_irda_low_power_config	configure IrDA low-power
uart_hardware_flow_rts_config	configure hardware flow control RTS
uart_hardware_flow_cts_config	configure hardware flow control CTS
uart_dma_receive_config	configure USART DMA for reception
uart_dma_transmit_config	configure USART DMA for transmission
uart_flag_get	get flag in STAT register
uart_flag_clear	clear flag in STAT register
uart_interrupt_enable	enable USART interrupt
uart_interrupt_disable	disable USART interrupt
uart_interrupt_flag_get	get USART interrupt and flag status
uart_interrupt_flag_clear	clear USART interrupt flag in STAT register

uart_deinit

The description of `uart_deinit` is shown as below:

Table 3-666. Function `uart_deinit`

Function name	uart_deinit
Function prototype	void <code>uart_deinit(uint32_t usart_periph);</code>
Function descriptions	reset USART
Precondition	-
The called functions	<code>rcu_periph_reset_enable / rcu_periph_reset_disable</code>
Input parameter{in}	
<code>usart_periph</code>	uart peripheral
<code>USARTx</code>	x=0,1,2

<i>UARTx</i>	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* reset USART0 */

uart_deinit(USART0);
```

uart_baudrate_set

The description of `uart_baudrate_set` is shown as below:

Table 3-667. Function `uart_baudrate_set`

Function name	uart_baudrate_set
Function prototype	void usart_baudrate_set(uint32_t usart_periph, uint32_t baudval);
Function descriptions	configure USART baud rate value
Precondition	-
The called functions	rcu_clock_freq_get
Input parameter{in}	
<i>usart_periph</i>	usart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3,4
Input parameter{in}	
baudval	baud rate value
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure USART0 baud rate value */

uart_baudrate_set(USART0, 115200);
```

uart_parity_config

The description of `uart_parity_config` is shown as below:

Table 3-668. Function `uart_parity_config`

Function name	uart_parity_config
Function prototype	void usart_parity_config(uint32_t usart_periph, uint32_t paritycfg);
Function descriptions	configure USART parity
Precondition	-

The called functions	-
Input parameter{in}	
uart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
paritycfg	configure USART parity
USART_PM_NONE	no parity
USART_PM_ODD	odd parity
USART_PM_EVEN	even parity
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure USART0 parity */
uart_parity_config(USART0, USART_PM_EVEN);
```

uart_word_length_set

The description of **uart_word_length_set** is shown as below:

Table 3-669. Function uart_word_length_set

Function name	uart_word_length_set
Function prototype	void usart_word_length_set(uint32_t usart_periph, uint32_t wlen);
Function descriptions	configure USART word length
Precondition	-
The called functions	-
Input parameter{in}	
uart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
wlen	USART word length configure
USART_WL_8BIT	8 bits
USART_WL_9BIT	9 bits
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure USART0 word length */

uart_word_length_set(USART0, USART_WL_9BIT);

```

uart_stop_bit_set

The description of `uart_stop_bit_set` is shown as below:

Table 3-670. Function `uart_stop_bit_set`

Function name	uart_stop_bit_set
Function prototype	void usart_stop_bit_set(uint32_t usart_periph, uint32_t stblen);
Function descriptions	configure USART stop bit length
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
stblen	USART stop bit configure
USART_STB_1BIT	1 bit
USART_STB_0_5BIT	0.5 bit, not available for USARTx(x=3,4)
USART_STB_2BIT	2 bits
USART_STB_1_5BIT	1.5 bits, not available for USARTx(x=3,4)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure USART0 stop bit length */

uart_stop_bit_set(USART0, USART_STB_1_5BIT);

```

uart_enable

The description of `uart_enable` is shown as below:

Table 3-671. Function `uart_enable`

Function name	uart_enable
Function prototype	void usart_enable(uint32_t usart_periph);
Function descriptions	enable USART
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral

USARTx	x=0,1,2
UARTx	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable USART0 */
uart_enable(USART0);
```

uart_disable

The description of `uart_disable` is shown as below:

Table 3-672. Function `uart_disable`

Function name	uart_disable
Function prototype	void usart_disable(uint32_t usart_periph);
Function descriptions	disable USART
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable USART0 */
uart_disable(USART0);
```

uart_transmit_config

The description of `uart_transmit_config` is shown as below:

Table 3-673. Function `uart_transmit_config`

Function name	uart_transmit_config
Function prototype	void usart_transmit_config(uint32_t usart_periph, uint32_t txconfig);
Function descriptions	configure USART transmitter
Precondition	-
The called functions	-

Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
txconfig	enable or disable USART transmitter
USART_TRANSMIT_ENABLE	enable USART transmission
USART_TRANSMIT_DISABLE	disable USART transmission
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure USART0 transmitter */
uart_transmit_config(USART0, USART_TRANSMIT_ENABLE);
```

uart_receive_config

The description of **uart_receive_config** is shown as below:

Table 3-674. Function uart_receive_config

Function name	uart_receive_config
Function prototype	void usart_receive_config(uint32_t usart_periph, uint32_t rxconfig);
Function descriptions	configure USART receiver
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
rxconfig	enable or disable USART receiver
USART_RECEIVE_ENABLE	enable USART reception
USART_RECEIVE_DISABLE	disable USART reception
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* Configure USART0 receive */
uart_receive_config(USART0, USART_RECEIVE_ENABLE);
```

uart_data_transmit

The description of `uart_data_transmit` is shown as below:

Table 3-675. Function `uart_data_transmit`

Function name	uart_data_transmit
Function prototype	void usart_data_transmit(uint32_t usart_periph, uint16_t data);
Function descriptions	USART transmit data function
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3,4
Input parameter{in}	
data	data of transmission(0-0xFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* USART0 transmit data */

uart_data_transmit(USART0, 0xAA);
```

uart_data_receive

The description of `uart_data_receive` is shown as below:

Table 3-676. Function `uart_data_receive`

Function name	uart_data_receive
Function prototype	uint16_t usart_receive_config(uint32_t usart_periph, uint32_t rxconfig);
Function descriptions	USART receive data function
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3,4

Output parameter{out}	
-	-
Return value	
uint16_t	data of received (0-0x1FF)

Example:

```
/* USART0 receive data */

uint16_t temp;

temp = usart_data_receive(USART0);
```

usart_address_config

The description of usart_address_config is shown as below:

Table 3-677. Function usart_address_config

Function name	usart_address_config
Function prototype	void usart_address_config(uint32_t usart_periph, uint8_t addr);
Function descriptions	configure the address of the USART in wake up by address match mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
addr	address of USART(0-0xFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure address of the USART0 */

usart_address_config(USART0, 0x00);
```

usart_mute_mode_enable

The description of usart_mute_mode_enable is shown as below:

Table 3-678. Function usart_mute_mode_enable

Function name	usart_mute_mode_enable
Function prototype	void usart_mute_mode_enable(uint32_t usart_periph);
Function descriptions	enable mute mode

Precondition	-
The called functions	-
Input parameter{in}	
uart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable USART0 receiver in mute mode */

uart_mute_mode_enable(USART0);
```

uart_mute_mode_disable

The description of **uart_mute_mode_disable** is shown as below:

Table 3-679. Function **uart_mute_mode_disable**

Function name	uart_mute_mode_disable
Function prototype	void uart_mute_mode_disable(uint32_t usart_periph);
Function descriptions	disable mute mode
Precondition	-
The called functions	-
Input parameter{in}	
uart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable USART0 receiver in mute mode */

uart_mute_mode_disable(USART0);
```

uart_mute_mode_wakeup_config

The description of **uart_mute_mode_wakeup_config** is shown as below:

Table 3-680. Function **uart_mute_mode_wakeup_config**

Function name	uart_mute_mode_wakeup_config
----------------------	------------------------------

Function prototype	void usart_mute_mode_wakeup_config(uint32_t usart_periph, uint32_t w_method);
Function descriptions	configure wakeup method in mute mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
wmethod	two methods be used to enter or exit the mute mode
USART_WM_IDLE	idle line
USART_WM_ADDR	address mark
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure USART0 wakeup method in mute mode */
usart_mute_mode_wakeup_config(USART0, USART_WM_IDLE);
```

usart_lin_mode_enable

The description of usart_lin_mode_enable is shown as below:

Table 3-681. Function usart_lin_mode_enable

Function name	usart_lin_mode_enable
Function prototype	void usart_lin_mode_enable(uint32_t usart_periph);
Function descriptions	enable LIN mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* USART0 LIN mode enable */
```

```
uart_lin_mode_enable(USART0);
```

uart_lin_mode_disable

The description of `uart_lin_mode_disable` is shown as below:

Table 3-682. Function `uart_lin_mode_disable`

Function name	uart_lin_mode_disable
Function prototype	void usart_lin_mode_disable(uint32_t usart_periph);
Function descriptions	disable LIN mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* USART0 LIN mode disable */

uart_lin_mode_disable(USART0);
```

uart_lin_break_decton_length_config

The description of `uart_lin_break_decton_length_config` is shown as below:

Table 3-683. Function `uart_lin_break_decton_length_config`

Function name	uart_lin_break_decton_length_config
Function prototype	void usart_lin_break_decton_length_config(uint32_t usart_periph, uint32_t iblen);
Function descriptions	configure lin break frame length
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3,4
Input parameter{in}	
iblen	lin break frame length
<i>USART_LBLEN_10B</i>	10 bits
<i>USART_LBLEN_11B</i>	11 bits

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure LIN break frame length */
uart_lin_break_decton_length_config(USART0, USART_LBLEN_10B);
```

uart_send_break

The description of `uart_send_break` is shown as below:

Table 3-684. Function `uart_send_break`

Function name	uart_send_break
Function prototype	void usart_send_break(uint32_t usart_periph);
Function descriptions	send break frame
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* USART0 send break frame */
uart_send_break(USART0);
```

uart_halfduplex_enable

The description of `uart_halfduplex_enable` is shown as below:

Table 3-685. Function `uart_halfduplex_enable`

Function name	uart_halfduplex_enable
Function prototype	void usart_halfduplex_enable(uint32_t usart_periph);
Function descriptions	enable half duplex mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral

USARTx	x=0,1,2
UARTx	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable USART0 half duplex mode*/
usart_halfduplex_enable(USART0);
```

usart_halfduplex_disable

The description of usart_halfduplex_disable is shown as below:

Table 3-686. Function usart_halfduplex_disable

Function name	usart_halfduplex_disable
Function prototype	void usart_halfduplex_disable(uint32_t usart_periph);
Function descriptions	disable half duplex mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable USART0 half duplex mode*/
usart_halfduplex_disable(USART0);
```

usart_synchronous_clock_enable

The description of usart_synchronous_clock_enable is shown as below:

Table 3-687. Function usart_synchronous_clock_enable

Function name	usart_synchronous_clock_enable
Function prototype	void usart_synchronous_clock_enable(uint32_t usart_periph);
Function descriptions	enable CK pin in synchronous mode
Precondition	-
The called functions	-

Input parameter{in}	
uart_periph	uart peripheral
USARTx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable USART0 CK pin in synchronous mode */
```

```
uart_synchronous_clock_enable(USART0);
```

uart_synchronous_clock_disable

The description of `uart_synchronous_clock_disable` is shown as below:

Table 3-688. Function `uart_synchronous_clock_disable`

Function name	uart_synchronous_clock_disable
Function prototype	void uart_synchronous_clock_disable(uint32_t usart_periph);
Function descriptions	disable CK pin in synchronous mode
Precondition	-
The called functions	-
Input parameter{in}	
uart_periph	uart peripheral
USARTx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable USART0 CK pin in synchronous mode */
```

```
uart_synchronous_clock_disable(USART0);
```

uart_synchronous_clock_config

The description of `uart_synchronous_clock_config` is shown as below:

Table 3-689. Function `uart_synchronous_clock_config`

Function name	uart_synchronous_clock_config
Function prototype	void uart_synchronous_clock_config(uint32_t usart_periph, uint32_t clen, uint32_t cph, uint32_t cpl);
Function descriptions	configure USART synchronous mode parameters
Precondition	-

The called functions	-
Input parameter{in}	
uart_periph	uart peripheral
USARTx	x=0,1,2
Input parameter{in}	
clen	CK length
USART_CLEN_NONE	there are 7 CK pulses for an 8 bit frame and 8 CK pulses for a 9 bit frame
USART_CLEN_EN	there are 8 CK pulses for an 8 bit frame and 9 CK pulses for a 9 bit frame
Input parameter{in}	
cph	clock phase
USART_CPH_1CK	first clock transition is the first data capture edge
USART_CPH_2CK	second clock transition is the first data capture edge
Input parameter{in}	
cpl	clock polarity
USART_CPL_LOW	steady low value on CK pin
USART_CPL_HIGH	steady high value on CK pin
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure USART0 synchronous mode parameters */

uart_synchronous_clock_config(USART0,USART_CLEN_EN,USART_CPH_2CK,
USART_CPL_HIGH);
```

uart_guard_time_config

The description of `uart_guard_time_config` is shown as below:

Table 3-690. Function `uart_guard_time_config`

Function name	uart_guard_time_config
Function prototype	void <code>uart_guard_time_config(uint32_t usart_periph,uint32_t guat)</code> ;
Function descriptions	configure guard time value in smartcard mode
Precondition	-
The called functions	-
Input parameter{in}	
uart_periph	uart peripheral
USARTx	x=0,1,2
Input parameter{in}	
guat	guard time value(0-0x000000FF)
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* configure USART0 guard time value in smartcard mode */
uart_guard_time_config(USART0, 0x0000 0055);
```

uart_smartcard_mode_enable

The description of `uart_smartcard_mode_enable` is shown as below:

Table 3-691. Function `uart_smartcard_mode_enable`

Function name	uart_smartcard_mode_enable
Function prototype	void uart_smartcard_mode_enable(uint32_t usart_periph);
Function descriptions	enable smartcard mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* USART0 smartcard mode enable */
uart_smartcard_mode_enable(USART0);
```

uart_smartcard_mode_disable

The description of `uart_smartcard_mode_disable` is shown as below:

Table 3-692. Function `uart_smartcard_mode_disable`

Function name	uart_smartcard_mode_disable
Function prototype	void uart_smartcard_mode_disable(uint32_t usart_periph);
Function descriptions	disable smartcard mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* USART0 smartcard mode disable */
uart_smartcard_mode_disable(USART0);
```

uart_smartcard_mode_nack_enable

The description of `uart_smartcard_mode_nack_enable` is shown as below:

Table 3-693. Function `uart_smartcard_mode_nack_enable`

Function name	uart_smartcard_mode_nack_enable
Function prototype	void uart_smartcard_mode_nack_enable(uint32_t usart_periph);
Function descriptions	enable NACK in smartcard mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable USART0 NACK in smartcard mode */
uart_smartcard_mode_nack_enable(USART0);
```

uart_smartcard_mode_nack_disable

The description of `uart_smartcard_mode_nack_disable` is shown as below:

Table 3-694. Function `uart_smartcard_mode_nack_disable`

Function name	uart_smartcard_mode_nack_disable
Function prototype	void uart_smartcard_mode_nack_disable(uint32_t usart_periph);
Function descriptions	disable NACK in smartcard mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
Output parameter{out}	
-	-

Return value	
-	-

Example:

```
/* disable USART0 NACK in smartcard mode */
uart_smartcard_mode_nack_disable(USART0);
```

uart_irda_mode_enable

The description of `uart_irda_mode_enable` is shown as below:

Table 3-695. Function `uart_irda_mode_enable`

Function name	uart_irda_mode_enable
Function prototype	void usart_irda_mode_enable(uint32_t usart_periph);
Function descriptions	enable IrDA mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3,4
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable USART0 IrDA mode */
uart_irda_mode_enable(USART0);
```

uart_irda_mode_disable

The description of `uart_irda_mode_disable` is shown as below:

Table 3-696. Function `uart_irda_mode_disable`

Function name	uart_irda_mode_disable
Function prototype	void usart_irda_mode_disable(uint32_t usart_periph);
Function descriptions	disable IrDA mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3,4

Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable USART0 IrDA mode */
uart_irda_mode_disable(USART0);
```

uart_prescaler_config

The description of `uart_prescaler_config` is shown as below:

Table 3-697. Function `uart_prescaler_config`

Function name	uart_prescaler_config
Function prototype	void usart_prescaler_config(uint32_t usart_periph, uint8_t psc);
Function descriptions	configure the peripheral clock prescaler in USART IrDA low-power mode
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
psc	clock prescaler(0x00-0xFF)
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure the USART0 peripheral clock prescaler in USART IrDA low-power mode */
uart_prescaler_config(USART0, 0x00);
```

uart_irda_lowpower_config

The description of `uart_irda_lowpower_config` is shown as below:

Table 3-698. Function `uart_irda_lowpower_config`

Function name	uart_irda_lowpower_config
Function prototype	void usart_irda_lowpower_config(uint32_t usart_periph, uint32_t irlp);
Function descriptions	configure IrDA low-power
Precondition	-
The called functions	-

Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
irlp	IrDA low-power or normal
USART_IRLP_LOW	low-power
USART_IRLP_NORMAL	normal
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure USART0 IrDA low-power */
uart_irda_lowpower_config(USART0, USART_IRLP_LOW);
```

uart_hardware_flow_rts_config

The description of `uart_hardware_flow_rts_config` is shown as below:

Table 3-699. Function `uart_hardware_flow_rts_config`

Function name	uart_hardware_flow_rts_config
Function prototype	void uart_hardware_flow_rts_config(uint32_t usart_periph, uint32_t rtsconfig);
Function descriptions	configure hardware flow control RTS
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
Input parameter{in}	
rtsconfig	enable or disable RTS
USART_RTS_ENABLE	enable RTS
USART_RTS_DISABLE	disable RTS
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure USART0 hardware flow control RTS */

uart_hardware_flow_rts_config(USART0, USART_RTS_ENABLE);

```

uart_hardware_flow_cts_config

The description of `uart_hardware_flow_cts_config` is shown as below:

Table 3-700. Function `uart_hardware_flow_cts_config`

Function name	uart_hardware_flow_cts_config
Function prototype	void usart_hardware_flow_cts_config(uint32_t usart_periph, uint32_t ctsconfig);
Function descriptions	configure hardware flow control RTS
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
Input parameter{in}	
ctsconfig	enable or disable CTS
USART_CTS_ENABLE	enable CTS
USART_CTS_DISABLE	disable CTS
Output parameter{out}	
-	-
Return value	
-	-

Example:

```

/* configure USART0 hardware flow control CTS */

uart_hardware_flow_cts_config(USART0, USART_CTS_ENABLE);

```

uart_dma_receive_config

The description of `uart_dma_receive_config` is shown as below:

Table 3-701. Function `uart_dma_receive_config`

Function name	uart_dma_receive_config
Function prototype	void usart_dma_receive_config(uint32_t usart_periph, uint32_t dmacmd);
Function descriptions	configure USART DMA reception
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2

<i>UARTx</i>	x=3
Input parameter{in}	
dmacmd	enable or disable DMA for reception
<i>USART_DENR_ENABL E</i>	DMA enable for reception
<i>USART_DENR_DISAB LE</i>	DMA disable for reception
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* USART0 DMA enable for reception */
uart_dma_receive_config(USART0, USART_DENR_ENABLE);
```

uart_dma_transmit_config

The description of `uart_dma_transmit_config` is shown as below:

Table 3-702. Function `uart_dma_transmit_config`

Function name	uart_dma_transmit_config
Function prototype	void uart_dma_transmit_config(uint32_t usart_periph, uint32_t dmacmd);
Function descriptions	configure USART/UART DMA transmission
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3
Input parameter{in}	
dmacmd	enable or disable DMA for transmission
<i>USART_DENT_ENABL E</i>	DMA enable for transmission
<i>USART_DENT_DISAB LE</i>	DMA disable for transmission
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* USART0 DMA enable for transmission */
```

```
uart_dma_transmit_config(USART0, USART_DENT_ENABLE);
```

uart_flag_get

The description of `uart_flag_get` is shown as below:

Table 3-703. Function `uart_flag_get`

Function name	uart_flag_get
Function prototype	FlagStatus usart_flag_get(uint32_t usart_periph, usart_flag_enum flag);
Function descriptions	get flag in STAT register
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3,4
Input parameter{in}	
flag	USART flags, refer to <code>usart_flag_enum</code>
<i>USART_FLAG_CTSF</i>	CTS change flag
<i>USART_FLAG_LBDF</i>	LIN break detected flag
<i>USART_FLAG_TBE</i>	transmit data buffer empty
<i>USART_FLAG_TC</i>	transmission complete
<i>USART_FLAG_RBNE</i>	read data buffer not empty
<i>USART_FLAG_IDLEF</i>	IDLE frame detected flag
<i>USART_FLAG_ORER</i> <i>R</i>	overrun error
<i>USART_FLAG_NERR</i>	noise error flag
<i>USART_FLAG_FERR</i>	frame error flag
<i>USART_FLAG_PERR</i>	parity error flag
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* get flag USART0 state */

FlagStatus status;

status = usart_flag_get(USART0,USART_FLAG_TBE);
```

uart_flag_clear

The description of `uart_flag_clear` is shown as below:

Table 3-704. Function usart_flag_clear

Function name	usart_flag_clear
Function prototype	void usart_flag_clear(uint32_t usart_periph, usart_flag_enum flag);
Function descriptions	clear flag in STAT register
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
flag	USART flags, refer to usart_flag_enum
USART_FLAG_CTSF	CTS change flag
USART_FLAG_LBDF	LIN break detected flag
USART_FLAG_TC	transmission complete
USART_FLAG_RBNE	read data buffer not empty
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear USART0 flag */

usart_flag_clear(USART0,USART_FLAG_TC);
```

usart_interrupt_enable

The description of usart_interrupt_enable is shown as below:

Table 3-705. Function usart_interrupt_enable

Function name	usart_interrupt_enable
Function prototype	void usart_interrupt_enable(uint32_t usart_periph, uint32_t interrupt);
Function descriptions	enable USART interrupt
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
interrupt	USART interrupt flag
USART_INT_PERR	parity error interrupt
USART_INT_TBE	transmitter buffer empty interrupt

USART_INT_TC	transmission complete interrupt
USART_INT_RBNE	read data buffer not empty interrupt and overrun error interrupt
USART_INT_IDLE	IDLE line detected interrupt
USART_INT_LBD	LIN break detected interrupt
USART_INT_ERR	error interrupt
USART_INT_CTS	CTS interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable USART0 TBE interrupt */
uart_interrupt_enable(USART0, USART_INT_TBE);
```

uart_interrupt_disable

The description of `uart_interrupt_disable` is shown as below:

Table 3-706. Function `uart_interrupt_disable`

Function name	uart_interrupt_disable
Function prototype	void usart_interrupt_disable(uint32_t usart_periph, uint32_t interrupt);
Function descriptions	disable USART interrupt
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
USARTx	x=0,1,2
UARTx	x=3,4
Input parameter{in}	
interrupt	USART interrupt flag
USART_INT_PERR	parity error interrupt
USART_INT_TBE	transmitter buffer empty interrupt
USART_INT_TC	transmission complete interrupt
USART_INT_RBNE	read data buffer not empty interrupt and overrun error interrupt
USART_INT_IDLE	IDLE line detected interrupt
USART_INT_LBD	LIN break detected interrupt
USART_INT_ERR	error interrupt
USART_INT_CTS	CTS interrupt
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* disable USART0 TBE interrupt */
uart_interrupt_disable(USART0, USART_INT_TBE);
```

uart_interrupt_flag_get

The description of `uart_interrupt_flag_get` is shown as below:

Table 3-707. Function `uart_interrupt_flag_get`

Function name	uart_interrupt_flag_get
Function prototype	FlagStatus <code>uart_interrupt_flag_get(uint32_t usart_periph, uint32_t int_flag);</code>
Function descriptions	get USART/UART interrupt and flag status
Precondition	-
The called functions	-
Input parameter{in}	
<code>usart_periph</code>	uart peripheral
<code>USARTx</code>	x=0,1,2
<code>UARTx</code>	x=3,4
Input parameter{in}	
<code>int_flag</code>	USART interrupt flag
<code>USART_INT_FLAG_PE_RR</code>	parity error interrupt and flag
<code>USART_INT_FLAG_TB_E</code>	transmitter buffer empty interrupt and flag
<code>USART_INT_FLAG_TC</code>	transmission complete interrupt and flag
<code>USART_INT_FLAG_RB_NE</code>	read data buffer not empty interrupt and flag
<code>USART_INT_FLAG_RB_NE_ORERR</code>	read data buffer not empty interrupt and overrun error flag
<code>USART_INT_FLAG_IDLE</code>	IDLE line detected interrupt and flag
<code>USART_INT_FLAG_LB_D</code>	LIN break detected interrupt and flag
<code>USART_INT_FLAG_CTS_S</code>	CTS interrupt and flag
<code>USART_INT_FLAG_ER_R_ORERR</code>	error interrupt and overrun error
<code>USART_INT_FLAG_ER_R_NERR</code>	error interrupt and noise error flag
<code>USART_INT_FLAG_ER_R_FERR</code>	error interrupt and frame error flag
Output parameter{out}	
-	-

Return value	
FlagStatus	SET or RESET

Example:

```
/* get the USART0 interrupt flag status */

FlagStatus status;

status = usart_interrupt_flag_get(USART0, USART_INT_FLAG_RBNE);
```

usart_interrupt_flag_clear

The description of usart_interrupt_flag_clear is shown as below:

Table 3-708. Function usart_interrupt_flag_clear

Function name	usart_interrupt_flag_clear
Function prototype	void usart_interrupt_flag_clear(uint32_t usart_periph, uint32_t int_flag);
Function descriptions	clear USART/UART interrupt flag in STAT register
Precondition	-
The called functions	-
Input parameter{in}	
usart_periph	uart peripheral
<i>USARTx</i>	x=0,1,2
<i>UARTx</i>	x=3,4
Input parameter{in}	
Int_flag	USART interrupt flag
<i>USART_INT_FLAG_CTS</i>	CTS change flag
<i>USART_INT_FLAG_LBD</i>	LIN break detected flag
<i>USART_INT_FLAG_TC</i>	transmission complete
<i>USART_INT_FLAG_RBNE</i>	read data buffer not empty
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear the USART0 interrupt enable bit status */

usart_interrupt_flag_clear(USART0, USART_INT_FLAG_RBNE);
```

3.24. WWDGT

The window watchdog timer (WWDGT) is used to detect system failures due to software malfunctions. The WWDGT registers are listed in chapter [9](#), the WWDGT firmware functions are introduced in chapter [9](#).

3.24.1. Descriptions of Peripheral registers

WWDGT registers are listed in the table shown as below:

Table 3-709. WWDGT Registers

Registers	Descriptions
WWDGT_CTL	Control register
WWDGT_CFG	Configuration register
WWDGT_STAT	Status register

3.24.2. Descriptions of Peripheral functions

WWDGT firmware functions are listed in the table shown as below:

Table 3-710. WWDGT firmware function

Function name	Function description
wwdgt_deinit	reset the window watchdog timer configuration
wwdgt_enable	start the window watchdog timer counter
wwdgt_counter_update	configure the window watchdog timer counter value
wwdgt_config	configure counter value, window value, and prescaler divider value
wwdgt_interrupt_enable	enable early wakeup interrupt of WWDGT
wwdgt_flag_get	check early wakeup interrupt state of WWDGT
wwdgt_flag_clear	clear early wakeup interrupt state of WWDGT

wwdgt_deinit

The description of wwdgt_deinit is shown as below:

Table 3-711. Function wwdgt_deinit

Function name	wwdgt_deinit
Function prototype	void wwdgt_deinit(void);
Function descriptions	reset the window watchdog timer configuration
Precondition	-
The called functions	rcu_periph_reset_enable / rcu_periph_reset_disable
Input parameter{in}	
-	-
Output parameter{out}	

-	-	-
Return value		
-	-	-

Example:

```
/* reset the window watchdog timer configuration */

wwdgt_deinit();
```

wwdgt_enable

The description of wwdgt_enable is shown as below:

Table 3-712. Function wwdgt_enable

Function name	wwdgt_enable
Function prototype	void wwdgt_enable(void);
Function descriptions	start the window watchdog timer counter
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* start the window watchdog timer counter */

wwdgt_enable();
```

wwdgt_counter_update

The description of wwdgt_counter_update is shown as below:

Table 3-713. Function wwdgt_counter_update

Function name	wwdgt_counter_update
Function prototype	void wwdgt_counter_update(uint16_t counter_value);
Function descriptions	configure the window watchdog timer counter value
Precondition	-
The called functions	-
Input parameter{in}	
counter_value	0x00 - 0x7F
Output parameter{out}	
-	-
Return value	

Example:

```
/* update WWDGT counter to 0x7F */
wwdgt_counter_update(127);
```

wwdgt_config

The description of wwdgt_config is shown as below:

Table 3-714. Function wwdgt_config

Function name	wwdgt_config
Function prototype	void wwdgt_config(uint16_t counter, uint16_t window, uint32_t prescaler);
Function descriptions	configure counter value, window value, and prescaler divider value
Precondition	-
The called functions	-
Input parameter{in}	
counter	0x00 - 0x7F
Input parameter{in}	
window	0x00 - 0x7F
Input parameter{in}	
prescaler	wwdgt prescaler value
<i>WWDGT_CFG_PSC_D</i> <i>IV1</i>	the time base of window watchdog counter = (PCLK1/4096)/1
<i>WWDGT_CFG_PSC_D</i> <i>IV2</i>	the time base of window watchdog counter = (PCLK1/4096)/2
<i>WWDGT_CFG_PSC_D</i> <i>IV4</i>	the time base of window watchdog counter = (PCLK1/4096)/4
<i>WWDGT_CFG_PSC_D</i> <i>IV8</i>	the time base of window watchdog counter = (PCLK1/4096)/8
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* configure WWDGT counter value to 0x7F, window value to 0x50, prescaler divider value to
8 */
wwdgt_config(127, 80, WWDGT_CFG_PSC_DIV8);
```

wwdgt_interrupt_enable

The description of wwdgt_interrupt_enable is shown as below:

Table 3-715. Function wwdgt_interrupt_enable

Function name	wwdgt_interrupt_enable
Function prototype	void wwdgt_interrupt_enable(void);
Function descriptions	enable early wakeup interrupt of WWDGT
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* enable early wakeup interrupt of WWDGT */
wwdgt_interrupt_enable( );
```

wwdgt_flag_get

The description of wwdgt_flag_get is shown as below:

Table 3-716. Function wwdgt_flag_get

Function name	wwdgt_flag_get
Function prototype	FlagStatus wwdgt_flag_get(void);
Function descriptions	check early wakeup interrupt state of WWDGT
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
FlagStatus	SET or RESET

Example:

```
/* test if the counter value update has reached the 0x40 */
FlagStatus status;
status = wwdgt_flag_get( );
```

wwdgt_flag_clear

The description of wwdgt_flag_clear is shown as below:

Table 3-717. Function wwdgt_flag_clear

Function name	wwdgt_flag_clear
Function prototype	void wwdgt_flag_clear(void);
Function descriptions	clear early wakeup interrupt state of WWDGT
Precondition	-
The called functions	-
Input parameter{in}	
-	-
Output parameter{out}	
-	-
Return value	
-	-

Example:

```
/* clear early wakeup interrupt state of WWDGT */
```

```
wwdgt_flag_clear();
```

4. Revision history

Table 4-1. Revision history

Revision No.	Description	Date
1.0	Initial Release	Mar.26, 2018
2.0	Modified according to the latest specification and firmware library	Jun.1, 2021
2.1	1. Add function <code>fw dgt_prescaler_value_config</code> and <code>fw dgt_reload_value_config</code> in <u>3.13.2</u> . 2. Change function <code>i2c_dma_enable</code> / <code>i2c_pec_enable</code> / <code>i2c_pec_transfer_enable</code> / <code>i2c_smbus_issue_alert</code> / <code>i2c_smbus_arp_enable</code> to <code>i2c_dma_config</code> / <code>i2c_pec_config</code> / <code>i2c_pec_transfer_config</code> / <code>i2c_smbus_alert_config</code> / <code>i2c_smbus_arp_config</code> in <u>3.15.2</u> . 3. Change function <code>pmu_to_standbymode(WFI_CMD)</code> to <code>pmu_to_standbymode()</code> in <u>3.17.2</u> . 4. Modify the function order in <u>3.18.2</u> .	July.11, 2022
2.2	1. Modify chapter 3.6, DAC consistency update.	Jan.05, 2024

Important Notice

This document is the property of GigaDevice Semiconductor Inc. and its subsidiaries (the "Company"). This document, including any product of the Company described in this document (the "Product"), is owned by the Company under the intellectual property laws and treaties of the People's Republic of China and other jurisdictions worldwide. The Company reserves all rights under such laws and treaties and does not grant any license under its patents, copyrights, trademarks, or other intellectual property rights. The names and brands of third party referred thereto (if any) are the property of their respective owner and referred to for identification purposes only.

The Company makes no warranty of any kind, express or implied, with regard to this document or any Product, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The Company does not assume any liability arising out of the application or use of any Product described in this document. Any information provided in this document is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Except for customized products which has been expressly identified in the applicable agreement, the Products are designed, developed, and/or manufactured for ordinary business, industrial, personal, and/or household applications only. The Products are not designed, intended, or authorized for use as components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, atomic energy control instruments, combustion control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or Product could cause personal injury, death, property or environmental damage ("Unintended Uses"). Customers shall take any and all actions to ensure using and selling the Products in accordance with the applicable laws and regulations. The Company is not liable, in whole or in part, and customers shall and hereby do release the Company as well as its suppliers and/or distributors from any claim, damage, or other liability arising from or related to all Unintended Uses of the Products. Customers shall indemnify and hold the Company as well as its suppliers and/or distributors harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of the Products.

Information in this document is provided solely in connection with the Products. The Company reserves the right to make changes, corrections, modifications or improvements to this document and Products and services described herein at any time, without notice.